

orkan®

Portable Evaporative Cooler - 5L

Instruction Manual

Read these instructions carefully and retain them for future use. If this appliance is passed to a third party, then these instructions must be included.

Need help?

Thank you for choosing to buy an Orkan evaporative cooler.

We're here to help. Please contact us on the email below and we will do everything we can to assist you.



help@orkanglobal.com

Contents

1. Important Safety Information	2
2. Parts	6
3. Controls	12
4. Operation	14
5. Cleaning & Maintenance	16
6. Storage	18
7. Troubleshooting	19
8. Disposal	20
9. Specifications	21

Important Safety Instructions



Read these instructions carefully and retain them for future use. If this appliance is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Ensure that the appliance is fully assembled in line with the instructions before use.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Use only as described in this Orkan Instruction Manual. Do

not carry out any maintenance other than that shown in this instruction manual, or advised by Orkan Customer Support.

- Suitable for dry location ONLY. Do not use outdoors or on wet surfaces and do not expose to water or rain.
- The appliance must be kept at least 0.5m away from walls, furniture and curtains to prevent it from overheating due to poor ventilation.
- Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliances rating label.
- If the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped in water, do not use and contact Orkan Customer Support.
- Turn off all controls before unplugging. Unplug from the socket-outlet when not in use for extended periods. To avoid tripping hazard, safely coil the power cable.
- Do not handle any part of the power plug or appliance with wet hands.
- Do not operate any appliance with a damaged power cable or power plug. Discard the appliance or return to an authorised service facility for examination and/or repair. If the supply cable is damaged, it must be replaced by Orkan, its service agent or similarly qualified person in order to avoid a hazard.
- Do not stretch the power cable or place the power cable under strain. Keep the power cable away from heated surfaces.

- Do not route the power cable under furniture or appliances. Do not cover the power cable with throw rugs, runners or similar coverings. Arrange the power cable away from traffic area and where it will not be tripped over.
- Do not unplug by pulling on the power cable. To unplug, grasp the power plug, not the power cable. The use of an extension cable is not recommended.
- Do not put any objects into openings or the air inlet or outlet.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Do not use any cleaning agents or lubricants on this appliance. Unplug before cleaning or carrying out any maintenance.
- Do not use near furnaces, fireplaces, stoves or other high temperature heat sources.
- Do not use the ice packs if they are damaged.
- Do not store the ice packs at a high temperature.

Battery Warnings

- Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and the appliance.
- Exhausted batteries should be immediately removed from the appliance and properly disposed.
- Keep batteries out of the reach of children.
- Do not dispose of batteries in fire.
- Remove batteries from the appliance if it is not to be used

for an extended period of time unless it is for emergency purposes.

 
- If batteries leak avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor.
- Keep the batteries away from children. Risk of ingestion and suffocation.

Intended Use


- This appliance is intended for air ventilation and humidification of indoor areas.
- This appliance is intended for household use only. It is not intended for commercial use.
- This appliance is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Parts


Front

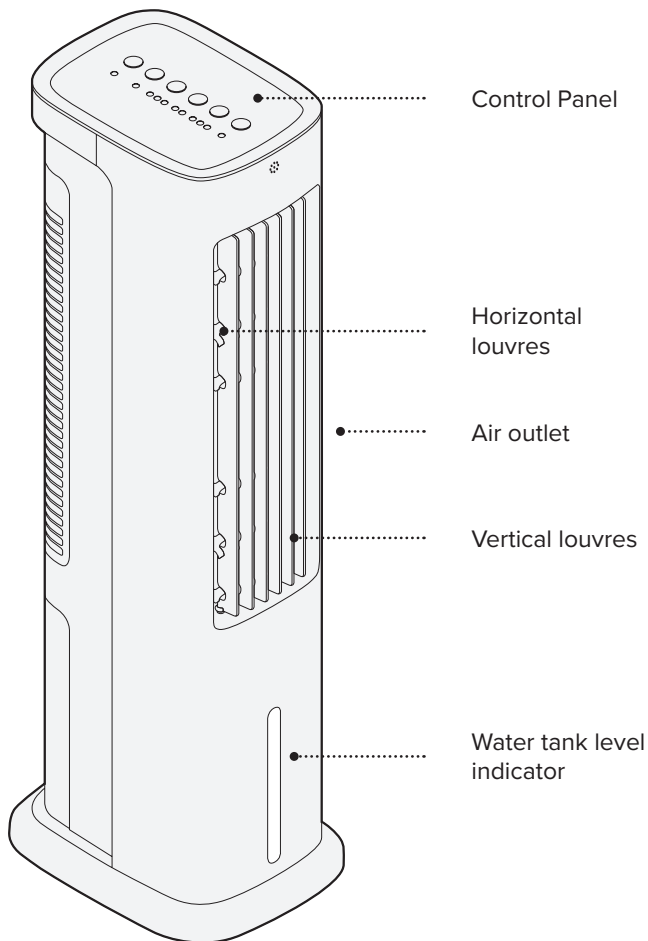

Back

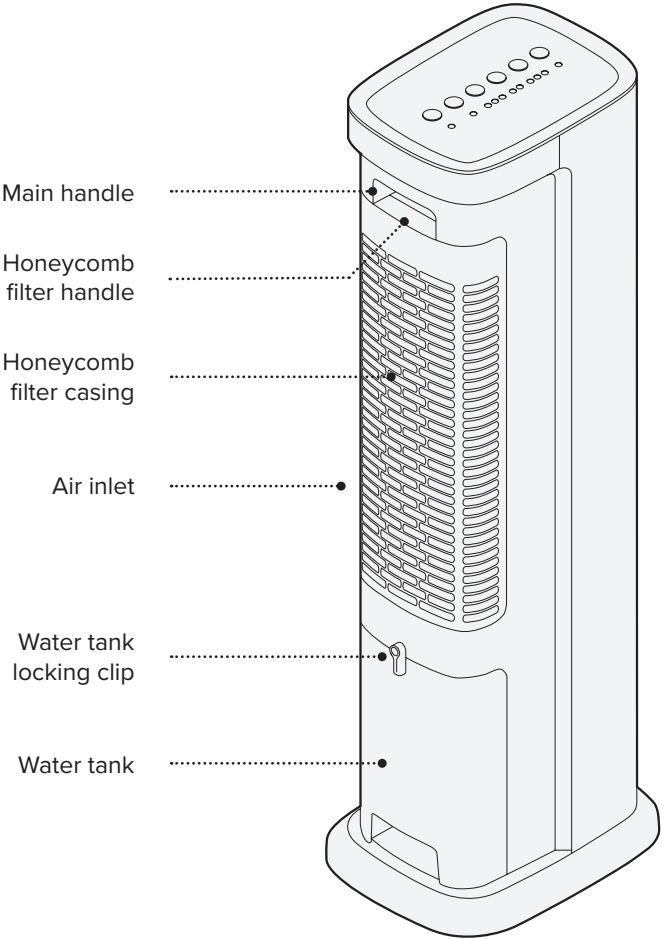 


Honeycomb Filter Casing

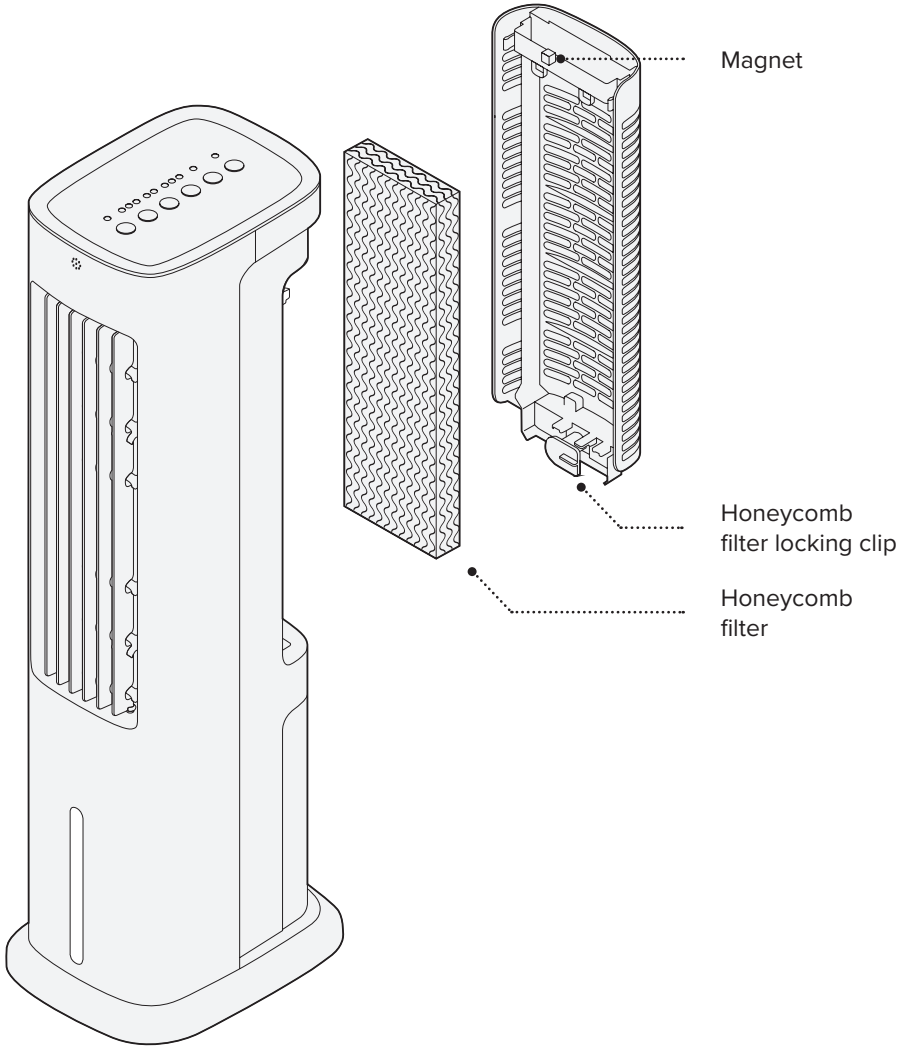 


Water Tank

Water pump

 
Water pump
locking clip

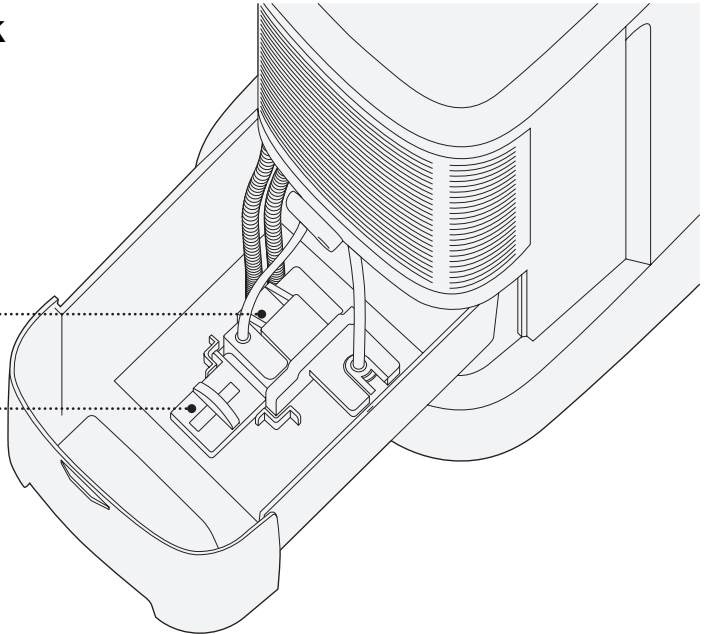


Accessories

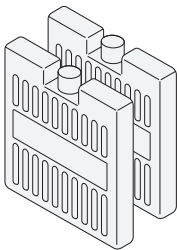 

Ice packs

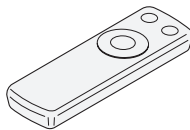 


Remote control

 


AAA batteries

 Control Panel

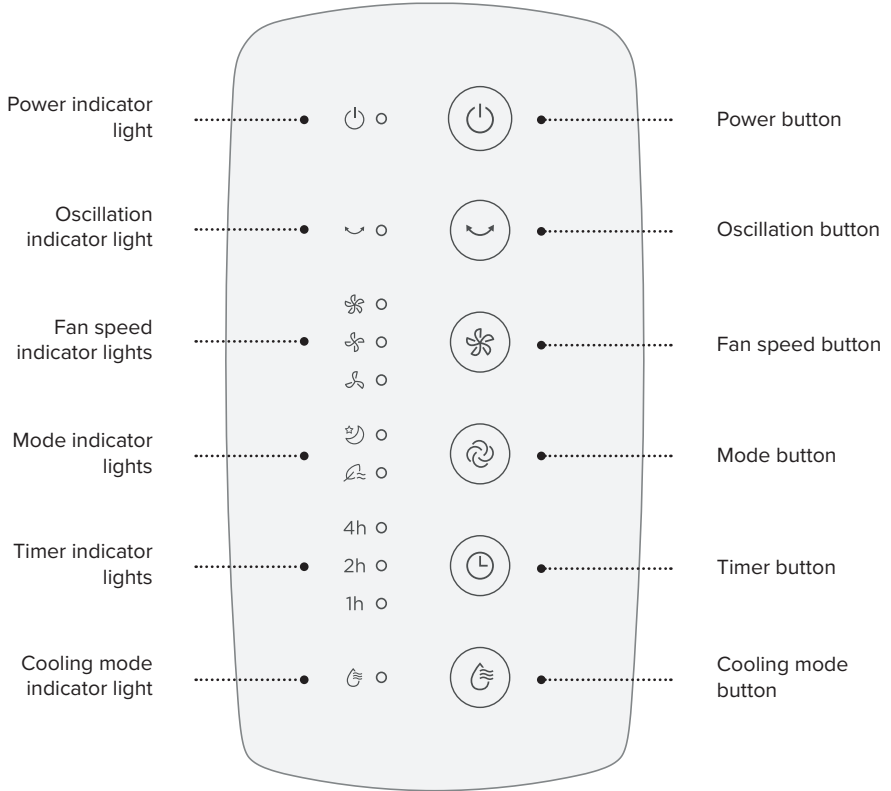

Remote Control

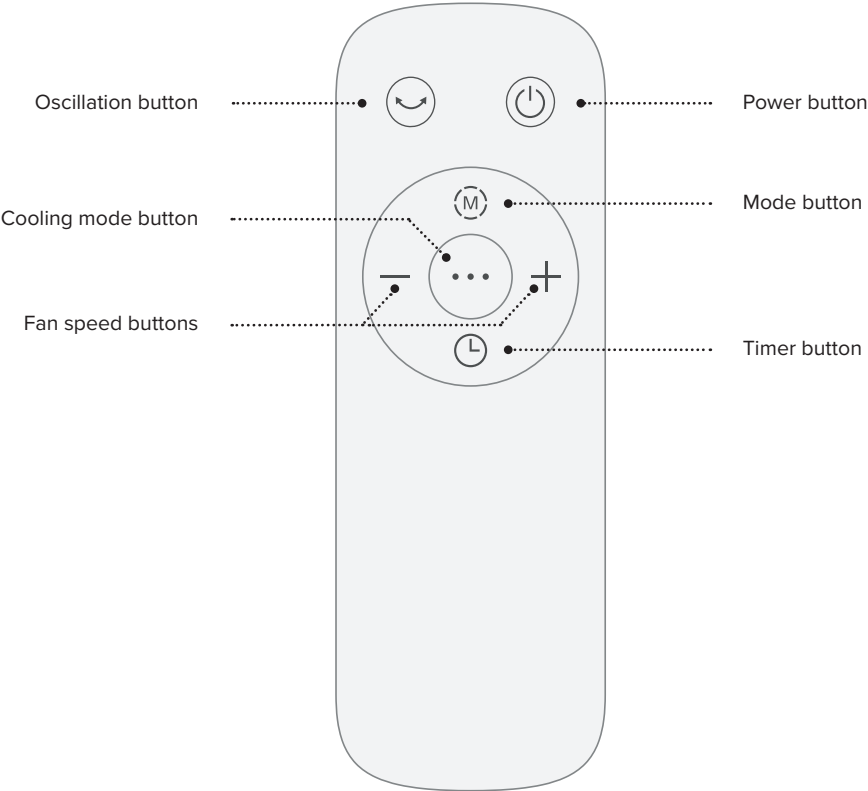 

Controls

Power Button

Press to turn the appliance on and off.



Oscillation Button

Press to activate the oscillating vertical louvres.



Note: Manually adjust the horizontal louvres for increased directional airflow.

Do so gently so as not to cause damage.

Fan Speed Button

Press to select between high, medium and low fan speeds.



Mode Button

Press to select between fan-only mode, night mode and natural mode.



- **Fan-Only Mode:** Fan speed can be manually controlled between high, medium and low.
- **Night Mode:** Fan speed transitions automatically from medium to low after a period of 15 minutes to reduce energy consumption.
- **Natural Mode:** Fan speed transitions automatically through high, medium and low and off to create a natural varying airflow.

Note: Fan speed can only be manually controlled when in fan-only mode.

Timer Button



Press to set a turn-on or turn-off timer between one and seven hours.

To set a turn-on timer follow the below steps.

1. Connect the power plug to the socket-outlet and ensure that the socket-outlet is turned on.
2. Press the timer button to set the desired time (between one and seven hours) until turn-on.
3. The timer indicator lights will indicate the time until turn-on.
4. Select the chosen settings prior to turn-on.
5. To cancel a turn-on timer press the power button twice.

To set a turn-off timer follow the below steps.

1. Connect the power plug to the socket-outlet and ensure that the socket-outlet is turned on.
2. Press the power button to turn the appliance on.
3. Press the timer button to set the desired time (between one and seven hours) until turn-off.
4. The timer indicator lights will indicate the time until turn-off.
5. Select the chosen settings prior to turn-off.
6. To cancel a turn-off timer press the power button twice.

Cooling Mode Button



Press to activate cooling mode.

- **Cooling Mode:** Evaporative cooling mechanism activates reducing the temperature of the surrounding air.

How to Operate

Before First Use

Prior to operating the appliance follow the below steps.

1. Place the appliance on a stable and level surface.
2. The appliance must be kept at least 0.5m away from walls, furniture and curtains to prevent it from overheating due to poor ventilation.
3. Insert two AAA batteries into the remote control. Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and the appliance.
4. Follow the Filling The Water Tank instructions.
5. Place the two ice packs into the freezer.

Filling & Emptying The Water Tank

Filling The Water Tank

To fill the water tank follow the below steps.

1. Turn off the appliance and unplug the power plug from the socket-outlet.
2. Turn the water tank locking clip clockwise 90 degrees and gently pull the water tank out of the appliance until it stops.
3. Place the two ice packs (once frozen) into the water tank.
4. Fill the water tank with fresh water to the max line.
5. Gently push the water tank back into the appliance until it stops and turn the water tank locking clip anti-clockwise 90 degrees to lock the water tank in place.

Note: Do not overfill or underfill the water tank.

Emptying The Water Tank

1. Turn off the appliance and unplug the power plug from the socket-outlet.
2. Turn the water tank locking clip clockwise 90 degrees and gently pull the water tank out of the appliance until it stops.
3. Turn the water pump locking clip clockwise 90 degrees and remove the water pump from its fitting.
4. Fully remove the water tank from the appliance.
5. Empty and clean the water tank in accordance with the Water Tank Cleaning & Maintenance instructions.
6. Gently push the water tank back into the appliance and replace the water pump to its fitting. Turn the water pump locking clip anti-clockwise 90 degrees to lock the water pump in place.
7. Gently push the water tank back into the appliance until it stops and turn the water tank locking clip anti-clockwise 90 degrees to lock the water tank in place.

Operating

To operate the appliance connect the power plug to the socket-outlet, ensure that the socket-outlet is turned on and turn on the appliance. Proceed to operate the appliance in accordance with this instruction manual.

Operating Tips

To ensure maximum efficiency of the appliance follow the below steps.

1. Do not use the appliance in enclosed or sealed spaces.
2. Doors and windows should be open to allow free airflow around the appliance.
3. Place the appliance near an open window or source of ventilation.

Cleaning & Maintenance



WARNING

- To prevent electric shock, turn off the appliance and unplug the power plug from the socket-outlet before cleaning.
- During cleaning, do not immerse the electrical parts of the appliance in water or other liquids.
- Never hold the appliance under running water

General Cleaning & Maintenance

To clean and maintain the general appliance follow the below steps.

1. Turn off the appliance and unplug the power plug from the socket-outlet.
2. Use a soft cloth to clean away any dust or debris from the surface of the appliance.

Water Tank Cleaning & Maintenance

To clean and maintain the appliances water tank follow the below steps.

1. Turn off the appliance and unplug the power plug from the socket-outlet.
2. Remove and empty the appliances water tank in accordance with the Emptying The Water Tank instructions.
3. Decalcify the appliances water tank by adding 1 litre of warm water and 0.5 litres of vinegar to it and swishing it around so that it covers the bottom and sides of the water tank. Let the solution sit for at least one hour.
4. Empty the appliances water tank of the water and vinegar solution and rinse it thoroughly with warm water.

5. Use a soft cloth to dry the appliances water tank.
6. Replace the appliances water tank.

Note: Clean and maintain the appliances water tank every two weeks to prevent the growth of mould, mildew and bacteria. Do not use boiling water to clean the water tank.

Honeycomb Filter Cleaning & Maintenance

To clean and maintain the appliances honeycomb filter follow the below steps.

1. Turn off the appliance and unplug the power plug from the socket-outlet.
2. Gently pull on the appliances honeycomb filter casing handle to remove the appliances honeycomb filter casing.
3. Turn the honeycomb filter locking clip anti-clockwise 90 degrees and remove the honeycomb filter from the appliances honeycomb filter casing.
4. Use a vacuum cleaner to clean away any dust or debris from the honeycomb filter.
5. Replace the honeycomb filter in the appliances honeycomb filter casing and turn the honeycomb filter locking clip clockwise 90 degrees to lock the honeycomb filter in place.
6. Replace the appliances honeycomb filter casing.

Storage

To store the appliance follow the below steps.

1. Clean the appliance in accordance with all of the Cleaning & Maintenance instructions. Note, the water tank must be empty.
2. Connect the power plug to the socket-outlet and turn on the appliance.
3. Run the appliance in fan-only mode on the low fan speed setting for four hours to allow the interior of the appliance to dry.
4. Turn off the appliance and unplug the power plug from the socket-outlet.
5. Remove the batteries from the remote control.
6. Cover the appliance, ice packs, remote control and batteries with a waterproof covering and store in a safe and dry place, out of reach of children.

Troubleshooting

Problem	Solution
The appliance is not switching on.	<ul style="list-style-type: none">• Ensure the power plug is connected to the socket-outlet.• Ensure the socket-outlet works.• Ensure the honeycomb filter is properly installed.
The remote control is not working.	<ul style="list-style-type: none">• Ensure the water level is above the MIN mark on the water tank.
Cooling mode is not working.	<ul style="list-style-type: none">• Ensure the batteries are properly installed.• Replace the batteries.

Disposal

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this appliance and its packaging signify that this appliance must be disposed of separately from ordinary household waste at its end of life. Be aware that it is your responsibility to dispose of electronic equipment at recycling centres in order to conserve natural resources.

Each country should have its collection centres for electrical and electronic equipment for recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.



Ice Pack Disposal

Do not dispose of the ice packs with your household waste.

Battery Disposal

Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.



Specifications

Product Code	OR-EC-01-UK
Product Description	Portable Evaporative Cooler - 5L
Product Dimensions	85cm x 29.5cm x 23cm
Product Weight	5.7kg
Voltage	220-240V ~
Frequency	50Hz
Power	55W

Notes



www.orkanglobal.com

Hague Global Limited, Flat 10, 30-31 Clapham Common South
Side, Clapham, London, SW4 9BW, United Kingdom

Copyright © Hague Global Limited. All rights reserved.