



WHERE WILL YOUR  
ADVENTURE  
TAKE YOU.

INSTRUCTION MANUAL



# ATTACHING YOUR TENT PROTECTOR



SCAN HERE  
FOR VIDEO  
TUTORIAL





# ATTACHING YOUR TENT PROTECTOR



1



REMOVE FROM CARRY BAG + ROLL OUT, ENSURING THE GROUND IS CLEAR OF ANY SHARP OR DAMAGING OBJECTS.

IF APPLICABLE FOR YOUR TENT DESIGN, TEMPORARILY REMOVE THE SCREW-ON RAIN CAP. (YOU WILL NEED THIS LATER, SO KEEP IT ASIDE IN A SAFE SPOT)

2



HOOK THE EYELET OF THE COVER ON TO A-FRAME SPIKE + SCREW THE RAIN CAP BACK ON. THIS WILL KEEP THE COVER ATTACHED DURING THE NEXT STAGE.

3



LOCATE THE DOORWAY OF THE COVER + POSITION OVER THE LEFT + RIGHT POINTS OF THE ENTRANCE TO YOUR TENT.

4



5



USING THE ROPES/WEBBING STRAPS, GENTLY TUG THE COVER OVER THE CENTRE POLE UNTIL YOU FEEL IT LOCK INTO PLACE.

PLEASE NOTE: The methods mentioned in this instruction manual are universal and the same steps apply to all designs including: Bell Tent, Star Bell and Bell Tent Plus protector covers.



# ATTACHING YOUR TENT PROTECTOR



6



LET THE COVER DROP DOWN THE SIDES OF THE WALLS + POSITION SO THAT IT IS ALIGNED + COVERING ALL CANVAS FABRIC.

USE THICK REBAR PEGS + A MALLET TO TIGHTLY SECURE EACH POINT TO THE GROUND AS CLOSELY AS POSSIBLE TO THE TENT PEGS.

7



LOCATE THE LONG GUY ROPE + SECURE IT DOWN 1-2 METRES IN FRONT OF THE TENT, ENSURE THAT IT IS IN LINE WITH THE MIDDLE OF THE DOORWAY.

8



WHEN REMOVING THE COVER OR PACKING IT AWAY, BE SURE TO SCREW ON THE RAIN CAP UNDER THE COVER FABRIC TO PREVENT ANY TEARS.

9



10



WITH YOUR NEW TENT PROTECTOR COVER, YOU WILL NOW BE ABLE TO ENJOY COOLER, DARKER + CLEANER ADVENTURES. ENJOY!



PLEASE NOTE: The methods mentioned in this instruction manual are universal and the same steps apply to all designs including: Bell Tent, Star Bell and Bell Tent Plus protector covers.