


BUYDEEM

K2423

Tea Maker
INSTRUCTION MANUAL

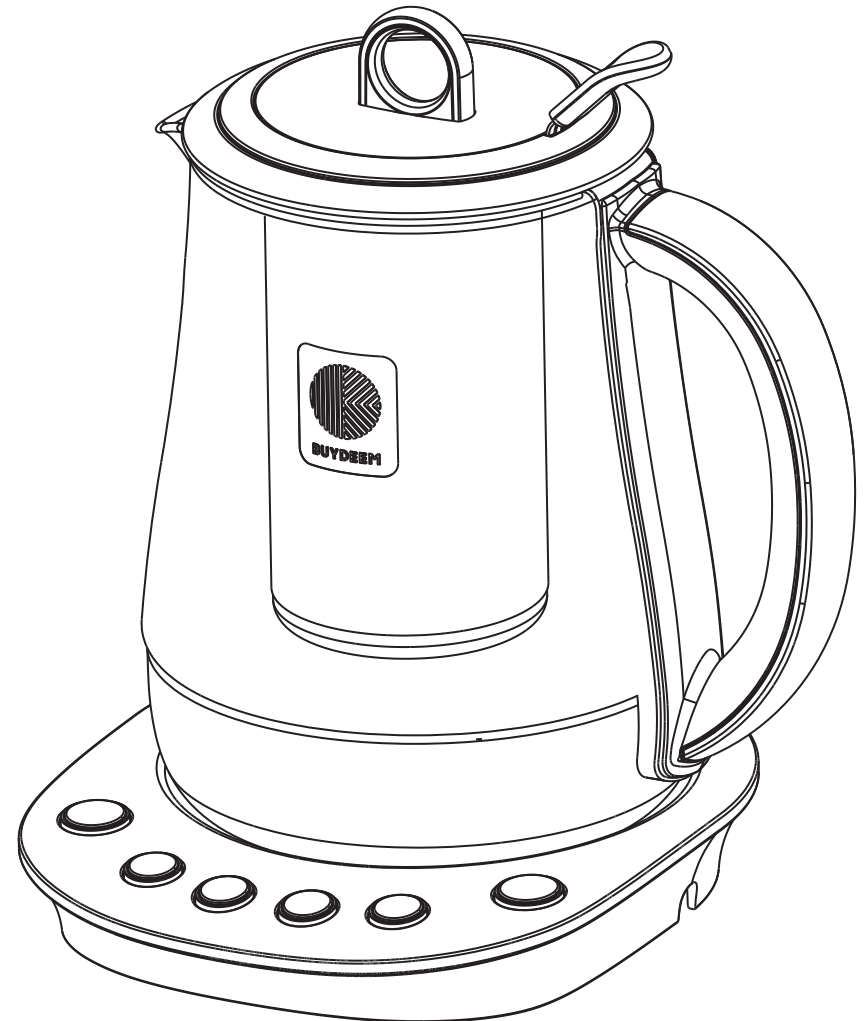

BUYDEEM

Shenzhen Buydeem Technology Co., Ltd

8/F, Block A7, Nanshan I Park, 1001 Xueyuan Road, Taoyuan Street,
Nanshan District, Shenzhen City, China.

K2423-91-A2

Please refer to the real product in case of any minor changes.

Thank you for purchasing BUYDEEM product. For your safety and continued enjoyment of this product, always read the instruction manual carefully before using.

TABLE OF CONTENTS:

Important safeguards	04~05
Technical specification	05
Diagram of parts	06
Before first use	07
Using your tea maker	08~10
Care and cleaning instructions	11
Warranty	12

Notice

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or Base and Body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors .
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

SAVE THESE INSTRUCTION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- A short power-supply cord (or detachable power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
 - 1.The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2.If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord;
 - 3.The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

Dangerous

- Do not use this product without supervision, otherwise there may be fire and other hazards caused.
- In order to prevent electric shock or short circuit, do not put the product, base, power cord and plug in water or any other liquid.

Warning

- This product must use the earthing socket with rated current of more than 10A and rated voltage of 120V-60Hz separately. The plug shall be fully inserted into the socket to avoid the risk of overheating and burning of the component due to poor contact, which may lead to dangers like short circuit or fire, etc.
- Do not use all-purpose socket.
- Keep the beverage maker and power cord away from high temperature, open flame, damp, smooth surface or sharp edges to prevent device damage, malfunction or fire.
- Prohibit the use when hands with water or bare feet.

Notice

Notice

- This product is only designed for home use. The manufacturer only guarantees the production defects and household failures, not be liable for any consequences or failures arising from any commercial use, inappropriateness, or failure to comply with the instructions and such malfunction and damage are not covered by the warranty.
- Please check whether the voltage indicated in the product specifications label is the same as the main voltage before used.
- This product must be used with its matched base. Please do not use any other base.
- Please keep the product on a flat, stable and heat resistant worktable.
- Before using the product, please make sure that the upper cover is properly covered to prevent burns.
- Do not put the sealed container in the kettle to heat, otherwise there may be risk of explosion.
- Do not operate product beyond the maximum water level or below the minimum water level; if the water or food in the product is too full, boiling water may splash out. If the water or food in the health kettle is too little, it may cause dry burning and paste bottom.
- The product should be moisture-proof and frost-proof. Do not put it in the refrigerator.
- To prevent electrical shock or fire, make sure the power supply is disconnected under the following circumstances: When the product is empty, not be used, be cleaned or moved, or when the components are damaged and breaks down.
- It is recommended to drain the water from the kettle if not use for a long time.
- If you need to pull the plug, please hold the plug and pull it out by hand. Do not force or twist the power cord, to prevent the power cord damage, and eliminate the electrical leakage.
- Please don't hang the power cord outside the desk or the edge of the work table to prevent the water dispenser from falling or a trip.
- Please don't use non recommended methods for descaling.
- Please unplug the power plug immediately if your components of product has been damaged or can't be used properly, do not disassemble and go to the authorized service center of Buydeem for replacement or maintenance.
- In addition to cleaning and descaling in accordance with the instructions, any other abnormal operation shall be performed by the authorized service centre of Buydeem.
- The un-normal use or complete out of use due to non-descaling is beyond guarantee range.
- It will explain any traces of the product use because all products are strictly in accordance with the quality control procedures, including the actual use testing of the products inspected randomly.


Technical specifications

Product name: Tea Maker Product model: K2423 Rated power: 1200W
Rated voltage: 120V-60Hz Maximum capacity: 1.2L

German Schott glass SUS304(06Cr19Ni10) and SUS316L (022Cr17Ni12Mo2) stainless steel, Polypropylene PP plastic, silicone for food contact is adopted.

Understanding Product

Diagram of parts

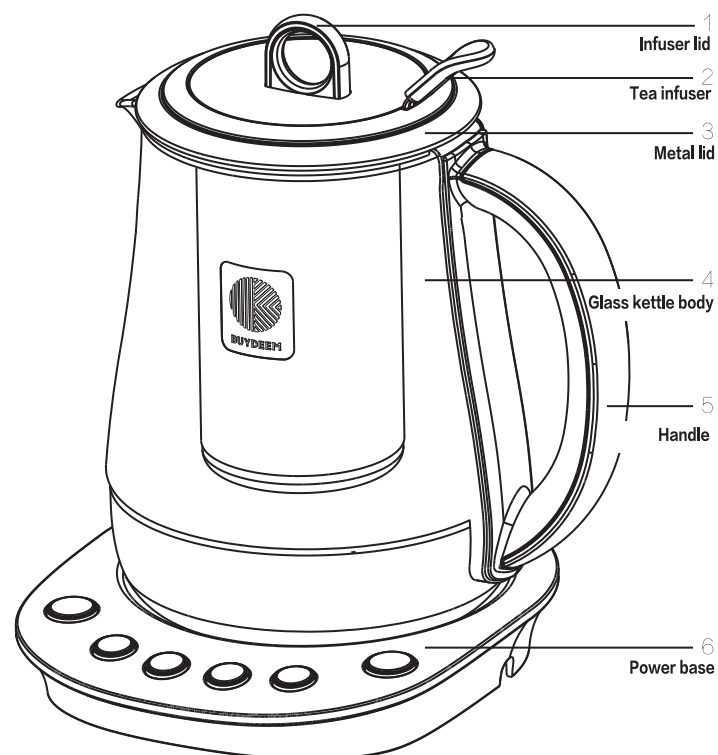

Understanding Product

Congratulations on your BUYDEEM Tea Maker!

We know taste matters. For us, bringing a rich steeping experience into your home is an obsession. This Tea Maker is designed for the tea drinker who appreciates true taste steeped to perfection. Enjoy!

Before first use

Always clean your kettle before first use

1. Wash the inside of the kettle, the tea infuser and lid with mild detergent and water. Rinse each thoroughly. The tea infuser is the ONLY item dishwasher safe.

CAUTION: Do not immerse the kettle or power base in water or any other liquid.

2. Do not use scouring pads, steel wool or any form of strong solvents or abrasive cleaning agents to clean the appliance, as they can damage the external surfaces of the appliance.

3. Allow the appliance to dry fully after cleaning before using.

CAUTION: The appliance must not be used if the base or the underside of the appliance is wet.

4. Your tea maker is now ready for use!

USING YOUR TEA MAKER. SETUP

1. Position the power base on a flat, heat resistant surface, as close as possible to a power outlet.

2. Follow cord routing in power base according to exit patterns. Proper cord routing will result in the power base laying flat when kettle is placed in base.

CAUTION: Do not operate kettle if power base is not flat. If power base is not flat, remove kettle from power base and repeat cord placement instructions.

3. Add fresh cold water to the desired level

CAUTION: Do not exceed the "MAX" water level mark indicated on the kettle.

4. Add the kettle lid on top make sure it lines up with the handle.

5. Then, add the infuser lid on the infuser holder. To lock this lid turn it until the arrow lines up with "closed".

Note: Do not install the tea infuser unless you are making tea.

6. Plug the electric cord into an electric outlet. All lights will go ON, then OFF and the Stop button will remain ON-Blue indicating its ready mode.

7. Kettle is ready to use!

Understanding Product

BOIL WATER

1. To boil water, press the “BOIL” button to start the heating process. During heating the Boil button will light up, and the Stop button will PULSE=Red.
2. When the water has reached boiling, the kettle will beep 1 times and automatically switch to keep warm mode.
Note: Kettle can be removed from base anytime during keep warm mode for use but should be returned to base to maintain the keep warm functionality. Once the water has cooled slightly, the unit will turn on and off to maintain the temperature at a constant 195F. For your convenience the unit will automatically switch off after 30 minutes.
3. To turn off the keep warm mode at any time simple press “STOP” .
4. Hot water is ready to use!

MAKE TEA

To make tea, after setting up the tea maker + kettle follow these steps:

Heat Water

1. After adding cold water, select the button that corresponds to the tea type of your preference by pressing it one time.
Note: During the heating process the tea button will PULSE and the Stop button will be ON red.
2. When the water has reached the proper temperature, the kettle will BEEP and the tea button will FLASH to let you know it’s time to add your favorite tea!

Temperature	Tea Type	Default Steeping Time
205° F	Herbal / Black Tea	2 minutes
195° F	Oolong Tea	3 minutes
185° F	White Tea	3 minutes
175° F	Green Tea	1 minute

Understanding Product

Add Tea

3. Fill the tea infuser with desired amount of tea. Taste of tea is personal, but for most tea types it is recommended to use 1 tsp to 1.5 tsps. or 1 bag per cup of water. We suggest you follow the tea supplier recommendations for optimal results.
4. Open the tea infuser lid by turning it, so the arrow lines up with “open” mark.
5. Place the tea infuser into the infuser holder by lining up the infuser handle with the kettle handle.
6. Gently press ingredients down with a spoon to make sure they are fully immerse in water during the steeping process.
7. Add the lid on top of the tea infuser to lock this lid, turn it until the arrow lines up with “closed” .

Set Steeping Time

8. To set the default steeping time, press the same button again.
9. Once the steeping time is completed, the kettle will beep and lights will flash, and then the kettle will enter the keep warm mode automatically. It is recommended to remove the tea infuser to avoid over steeping the tea.
Note: Kettle can be removed from base anytime during keep warm mode for use but should be returned to base to maintain the keep warm functionality. Once the water has cooled slightly, the kettle will turn on and off to maintain the temperature warm. For your convenience the kettle will automatically switch off after 60 minutes.
10. If you do not want the keep warm mode, simply press “STOP” .
11. Tea is ready, pour and enjoy!

CUSTOM STEEPING TIME

To set custom steeping time, replace step 8 with:

- 8.a. Within 3 second, press same button again, then one time for each minute you want to add. When done, the kettle will beep once for each minute of steeping time you selected to let you know the setting.
For example– if you want to steep for 4 minutes, press the button 5 times continuously. 1 time to enter custom mode + 4 times for the 4 minutes. The kettle will beep 4 times.

Understanding Product

KEEP WARM MODE

The product incorporate a keep-warm function, which maintains the tea at a pre-determined temperature for 60 minutes and water for 30 minutes. The keep warm feature is ideal for different tea steeping, family breakfast and cooking. The keep warm feature will not boil the water.

1. Once the steeping time is completed the kettle will beep and enter the keep warm mode automatically. Note: Kettle can be removed from base anytime during keep warm mode for use but should be returned to base to keep warm.
2. After 60 minutes the keep warm will shut off for tea and after 30 minutes the keep warm will shut off for boiling water.
3. If you do not want the Keep Warm mode simply press STOP.

Turn Off The Unit

If you want to stop the heating process simply press STOP/OFF once. If you want to turn off the unit, press and hold STOP/OFF until the light goes off.

Anti boil-dry device

If you switch the appliance on without there being any water in it or when the water level is too low, the anti boil-dry device will automatically switch it off. The appliance can be switched on normally as soon as it is filled with a sufficient amount of water.

Care And Cleaning Instructions

Cleaning Your Kettle

1. Mineral deposits in tap water may cause scale deposits to form inside the electric kettle after frequent use. To remove this scale build-up, fill the kettle with a solution of 3 cups of white vinegar and 3 cups water. Let sit overnight.
2. Empty the vinegar solution from the electric kettle. Remove any stain remaining inside by rubbing with a damp cloth.
3. Fill the electric kettle with clean water. Place kettle on power base and bring to a boil, then discard water. Repeat and the electric kettle will be ready to use.
4. The electric kettle will not operate again until the Power Button is pressed downward.
5. The outside of the electric kettle can be wiped with a soft damp cloth.

CAUTION: Do not immerse kettle or power base in water or other liquid.

Note: Never use any chemical, steel wool, or abrasive cleaners to clean any part of the kettle, including the power base.

MAINTENANCE

This appliance has no user serviceable parts beyond the care and cleaning described in the Care and Cleaning section. Any other servicing should be performed only by an authorized service representative.

WARRANTY INFORMATION

One-YEAR LIMITED WARRANTY

BUYDEEM warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. BUYDEEM will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than BUYDEEM or an authorized BUYDEEM service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

For the benefit of customers, BUYDEEM reserves the right to modify the product features and components to ensure the normal use of the product.

If you need more service and information, or have any question, please contact Support-us@buydeem.com or contact the local dealer. You can cut off the warranty card, fill in the information and send the product back to our company, which shall be solved by our professionals.

Warranty card

BUYDEEM

Dear Customer,

Thank you so much for your purchase! The product comes with a ONE-YEAR warranty. Should you ever needs one, please have the following information handy when contacting us:

Product Model No.: _____ **Product Name:** _____

Factory Serial No.: _____ **Purchase Date:** _____

Customer Name: _____ **Customer Phone:** _____

Please feel free to email us if you have any questions or concerns.
Customer service email: support-US@buydeem.com