



USER MANUAL



"FlightScope technology is developed to offer you performance data you can trust in your pursuit of excellence."

Henri Johnson - Founder & CEO

# Contents

 
In the box	1	Charging	9
The i4 Rangefinder	2	Care	10
Viewfinder indicators	3	Avoid	11
Operating instructions	4	Technical specifications	12
Get the FS Golf App	6	Support	13
Set up FS Mode	7		
Operating FS mode	8		

# In the Box

- 1 i4 Rangefinder
- 2 USB-A to USB-C charging cable
- 3 Carabiner
- 4 Quickstart Guide
- 5 Microfiber cloth
- 6 Carry case (not to scale)



1

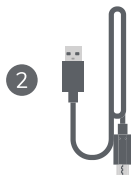

2



3



4




5




6

# The i4 Rangefinder

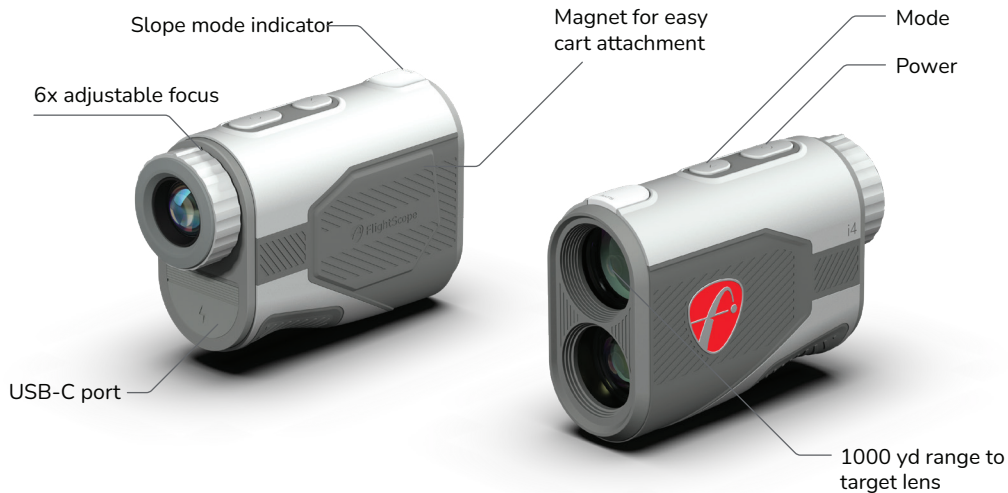 

# Viewfinder indicators

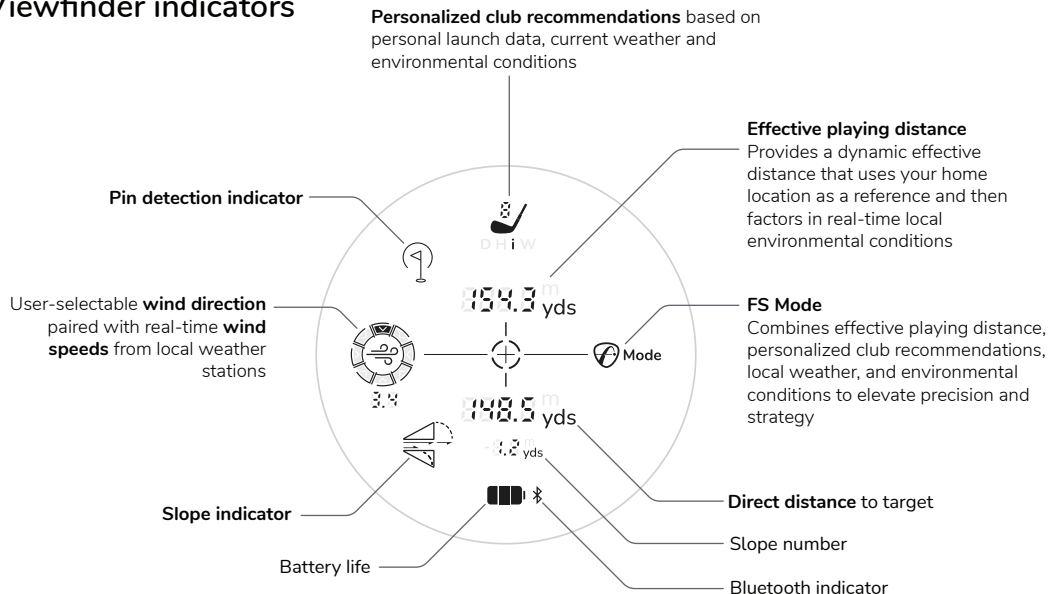 


# Operating instructions

Power




- 1 Press the **power button** briefly to turn on the Rangefinder. Look through the viewfinder to see the display. It will turn off automatically after 10 seconds.

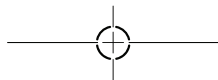

- 2 Aim at a target and briefly press the **power button** again to measure the direct distance. You will feel a **vibration** indicating that the measurement has been taken.




- 3 To shoot the distance to an object such as a flag stick, press and hold the power button while moving the viewfinder around the object until the **target detection** logo appears. Release the **power button**, and the rangefinder will display the distance.

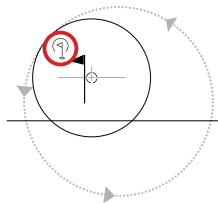

Mode



- 4 Briefly press the **mode button** to toggle the **SLOPE MODE** on and off.

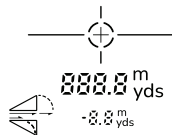

- 5 Press and hold the **mode button** to change the units of measurement between METERS and YARDS.

m  
yds

- 6 Press and hold the power button and short press the M button to toggle Bluetooth on / off.





## Get the FS Golf App

Download FS Golf  
from the App Store  
or Google Play



Your username and password will  
be the same on myflightscope.com



## Set up FS Mode

- 1 Use your mobile device or tablet to setup your i4 rangefinder for use with FS Mode. Make sure your smart device's **bluetooth connection** is turned on.
- 2 **Allow location access** while using the FS Golf App for accurate weather and wind conditions and ensure **precise location** is turned ON.
- 3 On your smart device, open the **FS golf app**. Select devices, then select **i4 Rangefinder**.
- 4 Turn your **i4 Rangefinder** on and activate **Bluetooth**. Now your i4 Rangefinder will automatically pair with your FS golf profile.
- 5 Look into the viewfinder and see if **FS mode** is active or repeat the pairing process.



## Operating FS Mode

FS mode requires your smart device to be nearby (within 30 feet or 10 meters), running the FS Golf application and having Bluetooth activated on your i4 Rangefinder. When the Rangefinder is switched on, it will return to the same mode and settings as were used previously. FS mode can be disabled by simply deactivating Bluetooth.



### Toggle Wind direction

To adjust the wind direction, start by taking a measurement in FS Mode. Then, press the **mode button** briefly to change the wind direction. The wind direction will appear at the 12 o'clock position (head wind) and will rotate clockwise with each press of the **mode button**.



# Charging



3.7V 730mAh

Polymer lithium



 
500hrs

run time



2 hours

Estimated charging time



USB-C

40inch  
(1m)

USB-A

5V 1A  
Power supply

## Care



Clean with  
microfiber cloth



Store in pouch  
when not in use

# Avoid



Solvent Chemicals



Moisture,  
including rain



Water immersion



Flames and  
direct heat



Excessive weight  
loading



Physical impact

## Technical specifications



## Support



If you need assistance please email our support at  
[customercare@flightscope.com](mailto:customercare@flightscope.com)





# FlightScope®

Performance data you can trust

    @flightscopegolf

[www.flightscope.com](http://www.flightscope.com)