



LV-SA45 TUNER

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- The product should not be exposed to any dripping or splashing liquid.
- Objects filled with liquids, such as vases, should not be placed on the product.
- Keep the remote control battery away from children. Dispose of used battery promptly, replace only with a battery of the correct type.
- Protect the power cord from damage. Do not pull push the power cord excessively, and take care not to let the power cord become pinched, particularly at or near the plug.
- Keep the product away from heat sources such as heat registers, stoves or other appliances that produce heat.
- Avoid direct sunshine and covering vents. Do not operate in a sealed box and be sure to have enough room for heat exchange.
- Avoid opening the cover. Do not open the cover, or touch the inner parts, refer servicing to our customer service.

TUNER FEATURES

1. Power Indicator
2. Bluetooth® Indicator
3. OPT Indicator
4. USB Indicator
5. Wi-Fi® Indicator
6. Line In Indicator
7. Volume Knob/Input Selector
8. Head Phone Jack
9. Antenna
10. WPS
12. SUB Out
11. Line In
13. USB In
14. Optical Input
15. Speaker Output -L/R
16. Speaker Output + L/R
17. Power Input
18. On/Off Switch

