



Front of Recorder

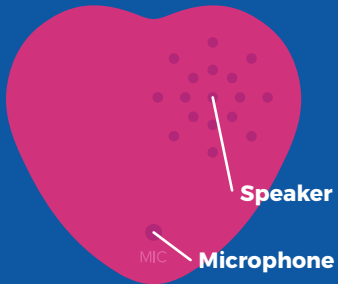

Back of Recorder

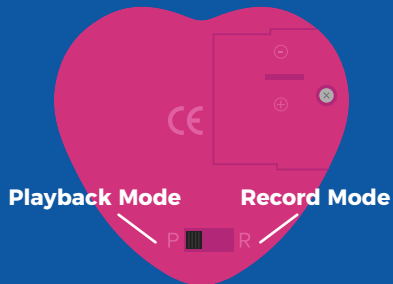

Record a Message:

Before recording a message, you must pull out the plastic tab on the back of recorder.

1. Slide the switch into record mode.
2. Squeeze heart to start recording.
3. Speak into mic for up to 30 seconds.
4. Release heart to stop recording.
5. Slide the switch into playback mode.
6. Squeeze heart to listen.

Tips: Repeat the above steps to record a new message. Speak loud and clearly into the microphone.

Replace the Batteries:

Each recorder uses 3 LR44 batteries and can be purchased at most stores.

1. Remove screw from back of recorder.
2. Slide out the compartment door.
3. Remove and discard the old batteries.
4. Insert new batteries.
5. Replace the compartment door.
6. Screw the door back into place.

Warning: The old batteries should be discarded immediately as they are dangerous for both children and pets.

Watch an instructional video:
<https://goo.gl/utsgqD>



Copyright © 2017. All rights reserved. Inventiv and their logos are trademarks of Teton Webstores, LLC in the United States and other countries.

