




INSTALLATION GUIDE

For VMS-100M, VMS-100P Hand Crank Siren

► INSTALLATION GUIDE

Siren Operation:

1. Rotate the two 1/2 parts of the handle towards each other until they join to form a full handle.
2. Lift crank lever 45 degrees and push handle part to lock in position.
3. Turn crank handle rapidly clockwise to sound siren.
4. Pull adjuster lever with your finger up and down, to adjust sound.
5. To disassemble: pull crank lever outwards and fold lever. Separate the two holding handle and rotate them away from each other, to a fold position.

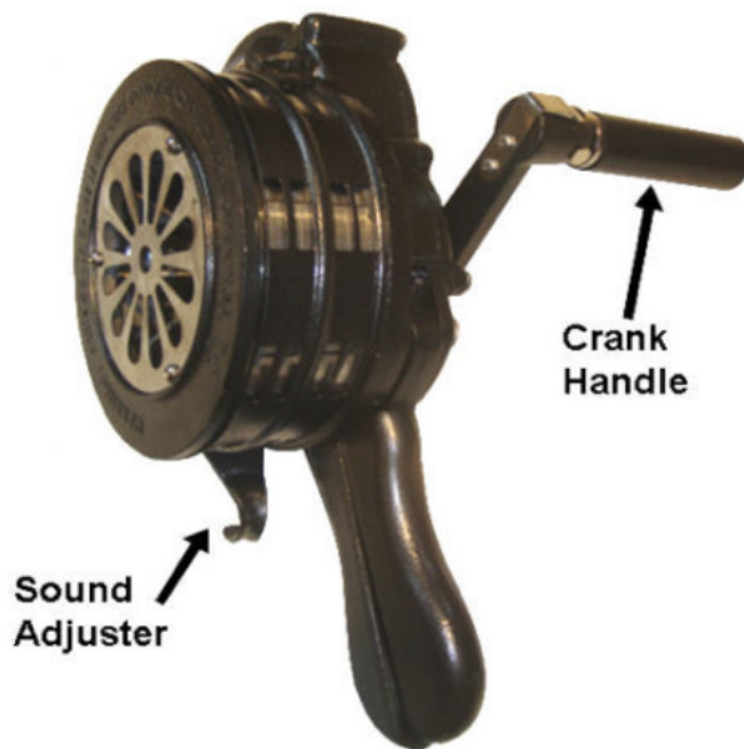

WARRANTY

All "Viking Horns" products carry a warranty of six months, when properly installed and used under normal conditions, and to be free from defects in workmanship and materials from the date of the original purchaser of the product. Warranty does not cover abuse, operation in a manner inconsistent with the product's design, neglect, abnormal use, or damage resulting from exposure to the elements, any modifications or faulty installation. "Viking Horns" will fully inspect your item and if the defect is considered under warranty, we will have the option to repair, or replace the product free of charge to the original purchaser. "Viking Horns" will not be held liable for any installation charges, loss or damage of any kind incurred in the replacement or repair of any warranted product. Any return shipping charges will be paid by the end user.