



# INSTALLATION GUIDE


---

For VMS-120SS Hand Crank Siren

## ► INSTALLATION GUIDE

### ***Siren Installation & Operation:***

1. Siren is attached to the rail stand upside down, once you unpack siren out of the box.
2. Remove the siren from the stand by loosening the bolt that secures the bracket to the stand. Flip the siren face-up and install it on top of the stand, close to the front edge of stand and tighten the bolt. **Siren handle** should be facing towards the front of the stand that has a **bent** bottom rail (not the straight bottom rail).
3. To operate: turn crank handle rapidly clockwise to sound siren.
4. Pull the RED damper lever back and forward to change the siren's sound level.
5. Stand can be installed stationary by drilling 1 hole at front bottom of rail, and 2 holes at the rear bottom of rail. Use 3 bolts & nuts (not included) to attach to the desired location.

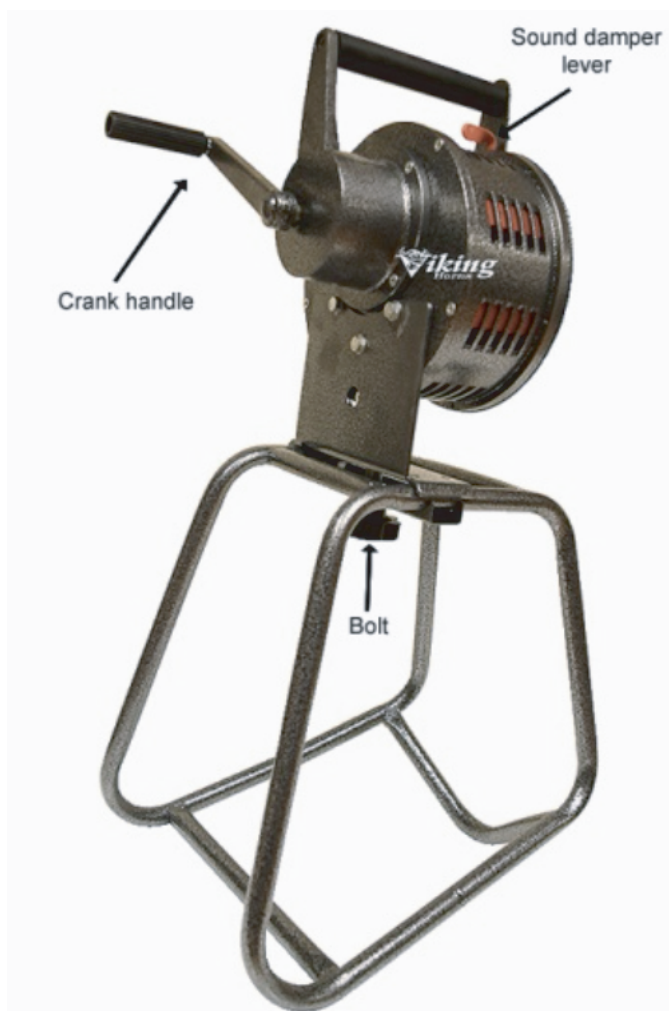

### ***WARRANTY***

All "Viking Horns" products carry a warranty of six months, when properly installed and used under normal conditions, and to be free from defects in workmanship and materials from the date of the original purchaser of the product. Warranty does not cover abuse, operation in a manner inconsistent with the product's design, neglect, abnormal use, or damage resulting from exposure to the elements, any modifications or faulty installation. "Viking Horns" will fully inspect your item and if the defect is considered under warranty, we will have the option to repair, or replace the product free of charge to the original purchaser. "Viking Horns" will not be held liable for any installation charges, loss or damage of any kind incurred in the replacement or repair of any warranted product. Any return shipping charges will be paid by the end user.