

**User's Guide
for WatchOvers Liberty
GPS Location Watch-Phone**



Features

- **SOS Emergency calling**
- **Location**
- **SafeZones**
- **2 Way calling**
- **Location history**
- **Silent monitoring**
- **Remote alarm clock**
- **Message notification**

Thank you for purchasing the Liberty Watch-Phone with GPS Location from WatchOvers Limited. For best use of the Liberty watch, please read the following instructions carefully before starting and operate the watch accordingly. Screens may vary for Android and iOS.

Note: A copy of these instructions are in the “Help” section of our App.



Speaker: Do not cover the speaker when calling.

MIC: Do not cover the Mic when calling.

Charging: Pivot open the cover to connect power lead.

Power button: The watch can be powered off by pressing the pinhole behind the charging door using a pin.

SOS/Dialling/Answer: This is multi-function button;

- SOS Call - Press and hold the button for 3 seconds.
- Answer Call – One short press of the button.
- End Call – One short press of the button.
- Display Screen – One short button press.
- Scroll Contacts – One short button press.
- Dial Contact – Press and hold the button for 3 seconds when contact is highlighted.

Subscriptions

Your watch comes with a SIM card built in. Before you start please activate your SIM card by going to:

www.watchovers.com/subscriptions/

Operation Guide

 
Important: When adding telephone numbers to the App, best practice is to use your international code +44 or +353.

Power on: Press the SOS/Dialling/Answer button for 3 seconds to power on the watch.

Note: The watch will not shutdown unless the battery is without charge.

Installing the App: Scan the QR code on the bottom of the box with your mobile phone or go to the download section of our website at <http://www.watchovers.com/download/apps/> to download our WatchOvers App.

After installing our App, please say “OK” to push notificatons, to allow you to receive notificatons and messages from the watch.

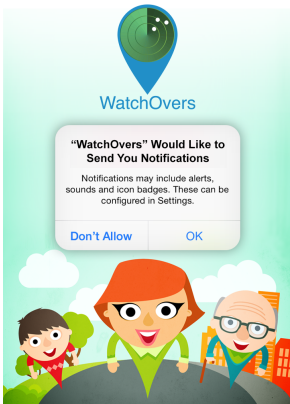

Swipe the screen left to go to the 2nd screen and press the “Start” button to enter the App.

Press “Create New Account” button and enter your information when prompted. If you have an account already set up, manually enter your own mobile phone number (not the watch phone number), enter your password and click “sign in” to login.

Existing Account


Guardian M... Enter Guardian Mobile Num X

Password Enter Password X

Remember Pass... Stay Signed In

CREATE NEW ACCOUNT

Settings

Photo 

Name Jane Smith

Gender Male Female

Notification Setup

Notification Message

Notification Type

Sound

Vibrate

Map Selection

Save Settings

Modify Password

Note: It is important that you remember your password.


Settings

- Set and Edit your (the parent/guardians) basic information such as your Photo (optional), your Name, your Gender.
- Notification settings:
 - “Notification Message” Ensure this is turned on to receive any messages from the watch.
 - Notification Type:
 - “Sound” Ensure this is turned on to receive any


audio notifications to your phone.

- “Vibrate” Optional: Turn on to receive any vibration notifications to your phone.

Add the Watch to the App

Click the  symbol in the App or swipe left on the screen to enter the management screen.

Click “Add” on the top right of the screen and scan the serial number bar code on the bottom of the box or manually enter the watch device serial number to add the watch (do not enter the letters “S/N”, just enter the number)

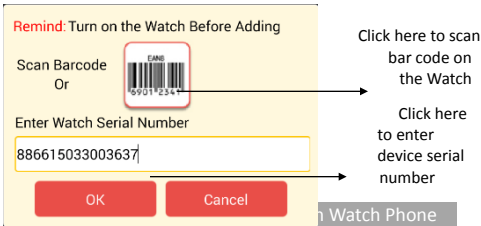

Remind: Turn on the Watch Before Adding

Scan Barcode
Or

Enter Watch Serial Number

886615033003637

OK Cancel

 
Click here to scan bar code on the Watch

Click here to enter device serial number

h Watch Phone


Manage Watches

To Edit or Delete any information on the watch such as pre-set

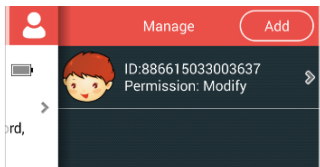

numbers, SafeZones, Alarm clock etc. touch on the area on the screen to Modify the information.

 Emergency numbers:

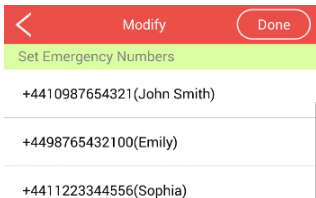

Three Primary numbers can be set that the wearer can call for help by pressing the SOS dialling

button for 3 seconds in the case of an emergency. The watch will dial these 3 numbers one by one, twice. An SOS notification message will also be sent to everyone that has that watch paired to the App. The watch will stop dialling once the call has been connected to any of the numbers.

Friend's numbers:

5 additional numbers can be set which are allowed to call the watch and the watch can call them. The list of friends' numbers

Set Friends Numbers
+4499887766554(James)
Enter the 2nd Phone Number
Enter the 3rd Phone Number
Enter the 4th Phone Number
Enter the 5th Phone Number

will be displayed by short pressing the dialling button, one press at a time, to scroll down. Select the highlighted number and press the dialling button for 3 seconds to dial that number.

Silent monitoring numbers:

The silent monitoring numbers and SOS number/friends numbers can be same. If your mobile number is set as a monitoring number only (not an SOS or a friends number), when you dial from your phone, it will make a silent monitoring call and when you press "call" in the app, it will also make a silent monitoring call.

Set Monitoring Numbers

+4412345678900(Jane)

Enter the 2nd Phone Number

If your mobile number is set as both a silent monitoring number and an SOS or friends number, when you dial from your phone, it will activate a normal 2 way call, but when you press "call" in the app, it will only make a silent monitoring call.

SafeZone distance and Active day set up:

Set SafeZone
SafeZone Radius:2000 Meters
Notification Days: Sun Mon Tue Wed Thu...

Click the “SafeZone Radius” and select the suitable SafeZone Radius of 2000 meters, 3000meters, 4000, meters or 5000 meters.


Select SafeZone Radius	
2000 Meters	<input checked="" type="radio"/>
3000 Meters	<input type="radio"/>
4000 Meters	<input type="radio"/>
5000 Meters	<input type="radio"/>
Ok	
Cancel	

Then select which days of the week you want the SafeZone to be active, to receive a notification if the watch goes in/out of the SafeZone. This sets the radius for all SafeZones created for this watch only.

Select Notification Days	
Sunday	<input checked="" type="checkbox"/>
Monday	<input checked="" type="checkbox"/>
Tuesday	<input checked="" type="checkbox"/>
Wednesday	<input checked="" type="checkbox"/>
Thursday	<input checked="" type="checkbox"/>
Friday	<input checked="" type="checkbox"/>
Saturday	<input checked="" type="checkbox"/>

Ok Cancel

 Set vibration and ring:

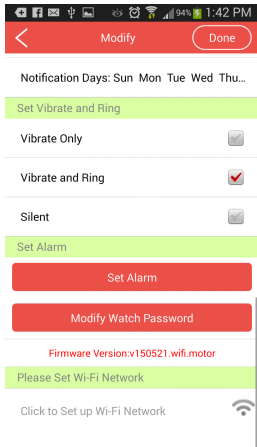

Press to tick the box or cancel the tick box, to activate or deactivate selected vibration mode on the watch. Press the “Save” button to save new settings.

Silent: Select the “Silent” tick box to place the watch into silent mode. This will stop the watch from ringing or vibrating for incoming calls, with the screen lighting up when a call comes in. Press the “Save” button to save new settings.

Alarm clock:

Set Alarm

Set Alarm

Dentist Appointment

18	6	2013	23	41
19	7	2014	0	42
20	8	2015	1	43
21	9	2016	2	44
22	10	2017	3	45

OK Cancel

Set the alarm clock for the watch from the App and the alarm will be received by the watch at the appointed time.

Modify device password:

< Modify Watch Password Done

Old Passw... Enter Password

Password: Enter Password

Enter Pass... Enter Your Password Again

To change your password, input your current password and input a new password. Press the “Save” button to save new settings.

WiFi network:

Please Set Wi-Fi Network

Click to Set up Wi-Fi Network



Wi-Fi Netwo... Please Input Network Name ✕




Click to select the preferred WiFi network, and click “Edit” to name the WiFi network. No WiFi passwords are required. For example, if you are at home you can detect your home WiFi network and save it to the app for each watch. When that WiFi network is detected or lost you will get a notification letting you know that the watch has “Entered” or “Exited” a WiFi network. You can add as many WiFi locations as you want for each watch.

Safe list: Only the phone numbers you pre-set in the App are allowed to call the watch. The watch can also see these numbers in the contacts list and call them.

The App will allow more than 10 Sub-Guardians for the same watch, but other Sub-Guardians besides the 10 pre-set numbers cannot call or silent monitor the watch. However they will have all of the functionality of the App such as checking the location, seeing the Location history, setting SafeZones and receiving notifications on the App.




Watches

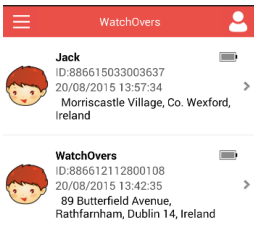

The screenshot shows the 'WatchOvers' app interface. At the top, there is a red header with a hamburger menu icon on the left, the text 'WatchOvers' in the center, and a profile icon on the right. Below the header, there are two watch entries, each with a red circular profile icon on the left and a battery status icon on the right. The first entry is for 'Jack' with ID:886615033003637, timestamp 20/08/2015 13:57:34, and location 'Morriscastle Village, Co. Wexford, Ireland'. The second entry is for 'WatchOvers' with ID:886612112800108, timestamp 20/08/2015 13:42:35, and location '89 Butterfield Avenue, Rathfarnham, Dublin 14, Ireland'. A right-pointing arrow is visible to the right of each entry.

Once you log into the App, it will automatically open on your Watches list.

Click on any watch to see the location of that watch, to call the watch, to check the location history and to set your SafeZones.

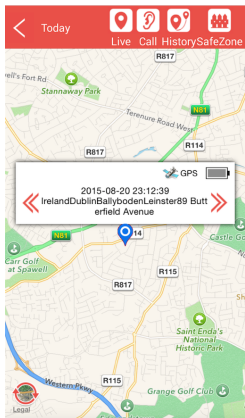



The screenshot shows the app's map view. At the top, there is a red header with a left-pointing arrow, the text 'Today', and four icons: a location pin, an ear, a location pin with a checkmark, and a group of people. Below the header, the text 'Live Call History SafeZone' is displayed. The map shows a street grid with various roads labeled (R817, R114, R115, N61, N14). A blue location pin is placed on the map. A white popup window is overlaid on the map, containing the following information: 'GPS' with a battery icon, the timestamp '2015-08-20 23:12:39', and the location 'IrelandDublinBallybodenLeinster89 Butterfield Avenue'. The popup has red double arrows on the left and right sides. The map also shows various landmarks like 'Stannaway Park', 'Carr Golf at Spawell', 'Saint Enda's National Historic Park', and 'Grange Golf Club'.

The blue pin shows the current location with the red pins showing the location history.

- GPS indicates satellite positioning
- LBS+ indicates cellular and WiFi positioning
- GPS accuracy is 3m to 30m,
- LBS (without WiFi) is accurate from 100m to 1000m
- LBS+ (with WiFi) is accurate from 50m to 500m

 
Positioning/Location: For normal use, the watch will operate under normal work mode, reporting the current location at 30 minute intervals. When you wish to see the current or Live watch location, the watch will operate under high-frequency positioning mode. High frequency will send the location every 60 seconds for the next 10 minutes.

Click the “Live” button and the App will display the current location of the watch and report the current location at a high frequency.

Click  or  on screen to check the location History.

Call: The “Call” button will activate a call to the watch.


Location History:

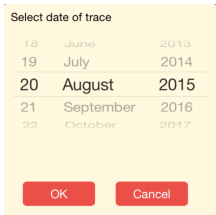


location of the watch during that date will be displayed.

Click ‹‹ or ›› to scroll through the location History.

 Press the “History” button and select the date by rolling up and down, click OK when the required date has been displayed. A map showing the

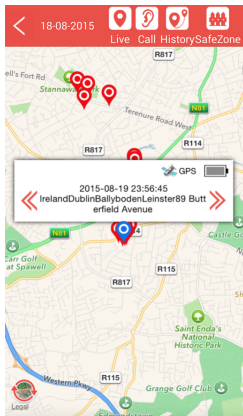

 
SafeZone: Set a SafeZone for the watch and when the watch exits or enters the SafeZone, depending on your chosen setting, you will receive a notification through the App.

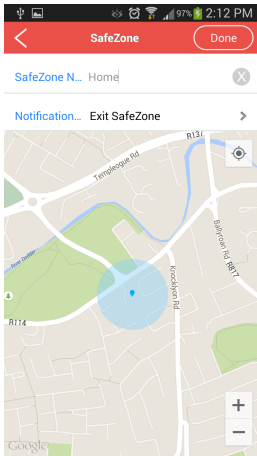


- Click “Add” and enter the “SafeZone Name”. Select “Notification Type”, move the watch location pin to where you want to set the centre of the SafeZone and pinch the map bigger or smaller to set the SafeZone area within the blue circle. The SafeZone will set to a radius of either 2,000m, 3,000m, 4,000m or 5,000m as per the Master Guardians settings in


the watch settings. Click “Done” to save the SafeZone.

 
- Note, if you wish to set a SafeZone in a location not displayed on the screen, such as a long distance from the current location, pinch the map smaller until you see the area or country you require and then pinch the screen again to zoom in on the location you require.
- If you have set several SafeZones, the SafeZone list will be shown in SafeZones. Tap the SafeZone on screen once to modify. Press the SafeZone on screen for 3 seconds to delete the SafeZone.

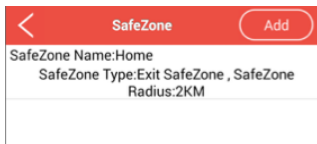

Notifications

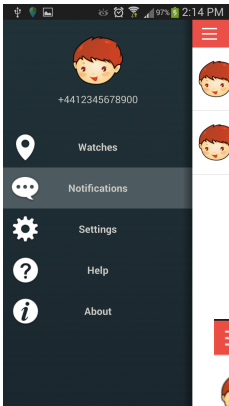 

 To view the notifications logs on your phone, click  on the App screen face or swipe right on the screen and click Notification, to view all notifications. When the watch enters or exits a SafeZone, receives a message or dials the SOS emergency numbers, your phone will receive the notifications on the App.

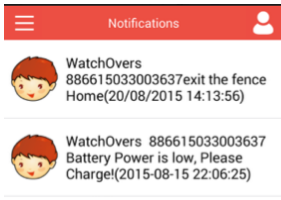

Multi Users

The first Guardian to add the watch to their Smartphone is

The screenshot shows the 'Modify' screen for a watch guardian. At the top, there is a red header with a back arrow, the word 'Modify', and a 'Done' button. Below the header, the 'Photo' field contains a cartoon character icon and the ID 'ID:886615033003637'. The 'Nickname' field is labeled 'Enter Nickname'. The 'Watch Phone Number' field is labeled 'Watch Tel No.'. The 'Set Emergency Numbers' section is highlighted in green and contains three input fields labeled 'Enter the 1st Phone Number', 'Enter the 2nd Phone number', and 'Enter the 3rd Phone Number'. The 'Set Friends Numbers' section is also highlighted in green and contains three input fields labeled 'Enter the 1st Phone Number', 'Enter the 2nd Phone Number', and 'Enter the 3rd Phone Number'.

designated as the Master Guardian. All subsequent Guardians will require the Master Guardians' password to add the watch to their smartphone. The Master Guardian can create all the watch settings such as the SOS numbers, Friends numbers, Silent monitoring numbers, SafeZone radius and Calendar, Watch Password, Watch WiFi Network, Alarms etc.

If you wish to be the Master Guardian, add and confirm your password.

Pairing Devices


Enter Password

Enter Password Again

OK


Cancel

Remember your password so you can give it to Sub-Guardians.

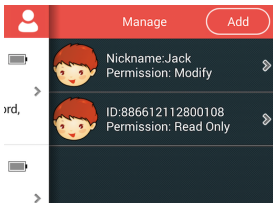


If you do not wish to be the Master Guardian, stop the set up and let another Guardian set up the watch first.

 You can then add the device as a Sub-Guardian.

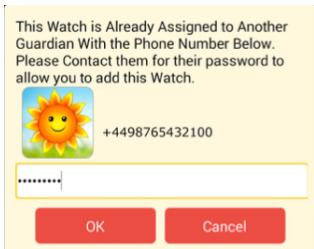


 When you see this screen, contact the Master Guardian for their password and add in the password to become a Sub-Guardian.

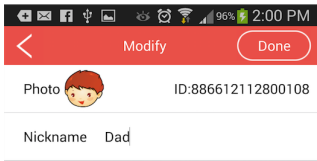

When you become a Sub-Guardian, you cannot see the full set up page, only the photo, ID and the Nickname.


For “Jack’s” watch, you are the Master Guardian:

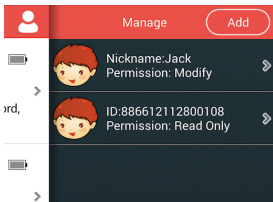

Modify: You are Master Guardian and have all settings rights.

Read Only: For the 2nd watch you are the Sub-Guardian. You cannot set SOS and other such settings.

 Alternatively the Master Guardian can delete the watch from their smartphone which will allow you to become the new Master Guardian after you pair the watch again.

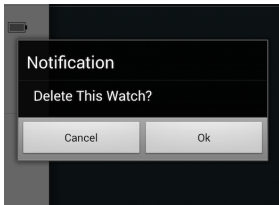

To delete the watch and release control, the Master Guardian can press the screen on the watch name for 3 seconds and press Ok.

Safety Warning

- Use only the original accessories recommended by the manufacturer. Using other accessories may be dangerous and invalidate all warranties and licences.
- Do not attempt to repair the watch yourself, as any modification to the product will affect the use of the product and affect the warranty.
- Avoid cleaning with corrosive cleaning agents and chemicals, use a soft, dry cloth to clean the watch.
- It is prohibited to use the watch at the petrol stations, restricted chemical plants or near oil depots as such use of the watch in the above environments may raise the risk of explosion.
- For Air travel please follow the airline mobile phone guidelines and power off the watch when requested. The manufacturer does not accept responsibility for any damage which may be caused by Airport X-ray equipment.

Note: Opening the back of the watch may make your warranty null and void, if not carried out by a qualified professional. We recommend that you do not open the back of the watch.

Instructions for handling batteries (where necessary)

- Batteries should be disposed of responsibly. Battery must be fitted with the positive and negative placed correctly, if fitted incorrectly, it may cause damage to the watch. It is dangerous to try to open the battery or throw the battery into a fire. Never place the battery in the hands of children.

App Version

There is continuous upgrading and updating to enhance this product, thus the content may be different to your product, which is subject to change without prior notice. The illustrations in the User's Guide are for your reference only. The manufacturer reserves the right to change the User's Guide. 01/08/2015

Friday Cottages

UPTON

R742

ryLife

Morriscastle Village

ckridge Ford



www.WatchOvers.com/help

t

Chapelwood

LITTER MORE

Littermore

