

Smart Wireless Doorbell & Chime

 
 
WatchOvers.com

User's Manuals

* Before using this product, please read the User's Manual carefully

Congratulations on your purchase of our Wireless Video doorbell and Chime. To ensure proper use and trouble-free operation, read this Quick set up guide and read our User's Manuals first before use.

Appearance

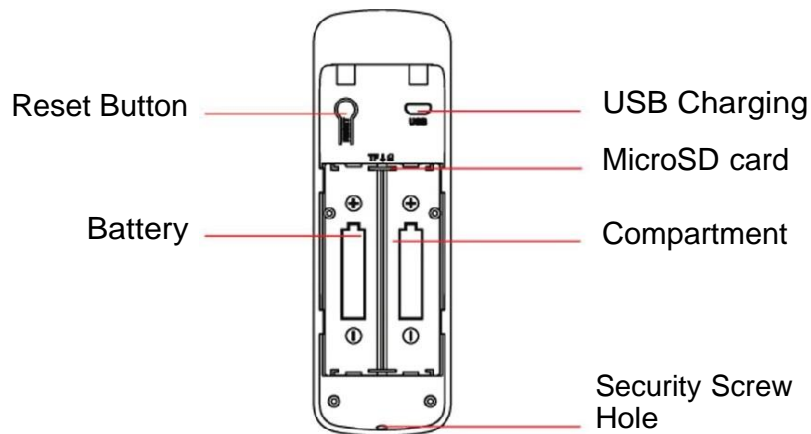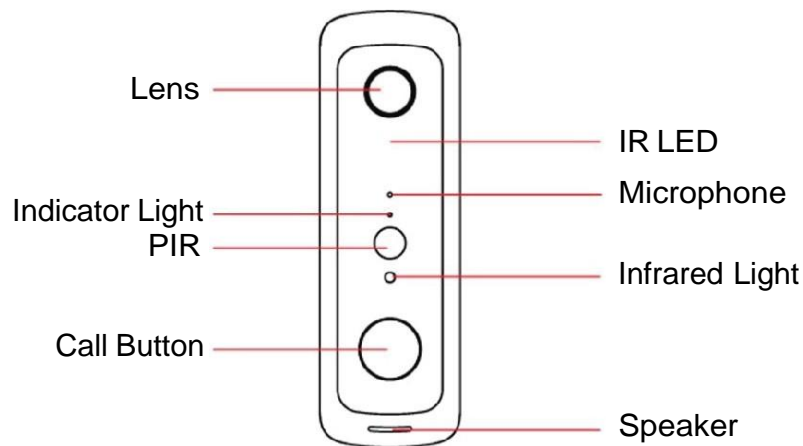

IR LED	In the event of inadequate ambient light, turn on the IR LED to increase the brightness
Light Sensor	To monitor the ambient brightness value, and when the illumination is less than 2 Lux, infrared is enabled.
Microphone Call	To pick up ambient sound and record dialogue.
Button	Short-press to activate and inform users that someone is calling and trigger a notification.
PIR	When someone or something moves in front of the device, the PIR activates recording and sends a notification. Used to record images and video (Micro SD memory card required).
Lens Indicator	When the Blue Indicator Light is blinking, the device is in the "Configuration" mode.
Light	When the Red Indicator Light is always ON, the Wi-Fi connection has failed. When the Blue Indicator Light is always ON, the device is successfully connected. When the Red and Blue Indicator Lights are ON at the same time, the device is not connected to Wi-Fi. When the Red and Blue Indicator Lights are OFF at the same time, the device is OFF or on STAND-BY.
Speaker	To support two-way conversation.
Reset Button	Long press for 5 to 10 seconds to restore factory settings in working status. You will hear a voice prompt to confirm the device is reset.
USB Interface	To charge the device using the Micro USB cable (Do not use a rapid charger).
MicroSD card	MicroSD card slot. Maximum supported storage capacity is a 64Gb MicroSD card.
Battery Compartment	Two 18650 specification batteries are required (included), take care to insert the batteries correctly with negative and positive in the correct position.

 
Set up Notes & Warnings

1. The device should be charged with the USB charging cable provided and a DC5V/1A charging plug. **Do not charge this device with a rapid charger as this may cause serious damage to the device and create a risk of fire.**
2. Smart Life App is constantly being improved and updated so screenshots may differ.
3. Please set up the device in range of your router. If the Wi-Fi signal is weak, you need to select the relay setting or enhance the Wi-Fi relay to improve the signal. A weak Wi-Fi signal will affect the battery life between charges.
4. This device is a low-power intelligent product to save battery life. It supports App remote wake-up, PIR wake-up, doorbell wake-up, and will enter sleep mode automatically for a short time after each wake-up. You can set the wake time in the App settings.

5. The device is equipped with 2 rechargeable lithium batteries. The battery life between charges will be affected by Wi-Fi connection and the number activities including Motion alerts. If the PIR sensor alarm detection function will be used in an environment with a lot of activity it is recommended to turn off this setting or set the device to low sensitivity or set for human recognition to extend battery life between charges. Please recharge the battery when the battery is low.
6. We recommend you use this device with a Micro SD memory card to record activity. Cloud storage is available with a monthly subscription through the App. Follow the instructions in the App to subscribe.

Features

When the doorbell is pressed, you will receive a notification to your phone, tap on the notification and this will bring you directly into the App. Choose any of the on-screen options to either take photo, record a video, or speak directly with the person at the door. If you are not available to go to the door, this is a very easy way to engage with the person calling and decide if you want to go to the door or tell them you are “just out of the shower” and cannot come to the door or for deliveries, to instruct them to leave the parcel on the step, behind the plant etc.

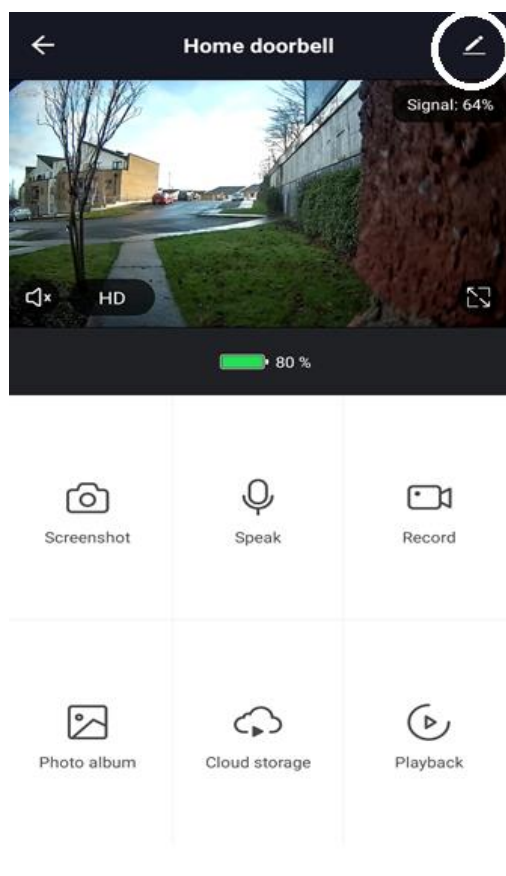


- **Screenshot** – Tap the Screenshot Icon to take a live view photo and this will be saved in App Photo Album within your App account.

- **Speak** – Tap on the Speak Icon to talk to the person at your door in real time. Ensure that Two-way Talk mode is set, Choose settings (Pen Icon on top right of mobile phone screen), then Basic Functions, Talk Mode, Choose the option Two-way Talk. Remember to always save each time you change settings. This is the default setting in the app.
- **Record** - Tap the Record Icon to record real time, Tap the Icon again to stop recording and the video will be saved to the App Photo Album. The App must remain open to record to the App album. If you want the camera to record video all the time, you can enter the local storage function after inserting a Micro SD memory card to the device and click Record in this interface. The camera will continue to record when you exit the App.
- **Photo Album** – Tap on the Photo Album Icon to view all stored photos and videos saved.
- **Cloud Storage** – Cloud storage is available to purchase within the App on monthly subscription, to subscribe follow the instructions within the App.
- **Playback** – This option is only available if you are using a Micro SD memory card in your doorbell or subscribed to Cloud storage.

Settings

Tap settings (Pen Icon on top right corner of the screen, highlighted above).

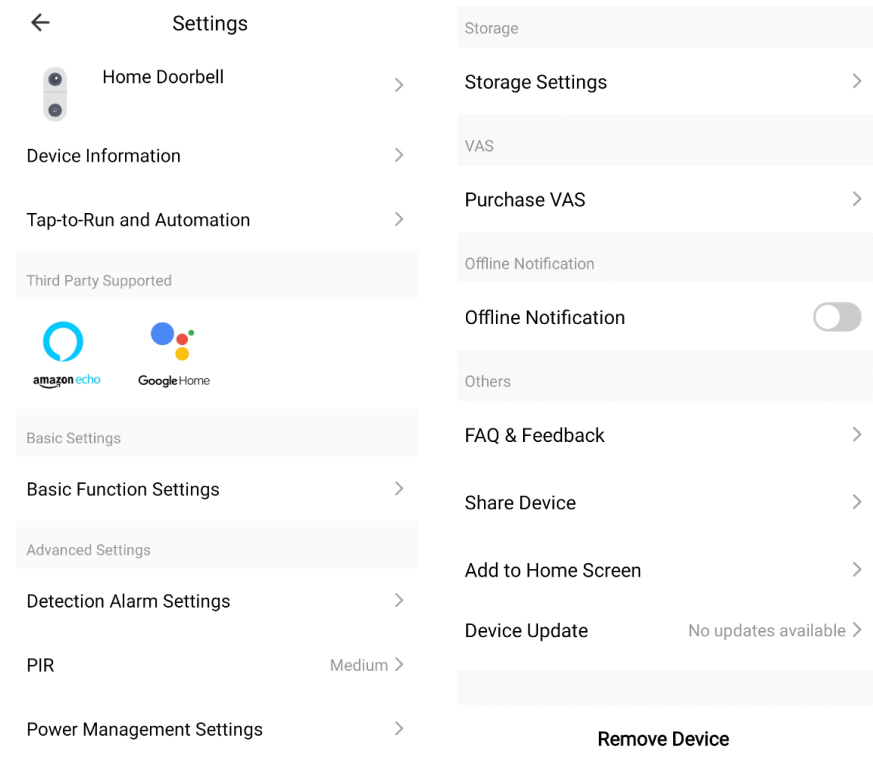

- **Battery Doorbell** – Tap on this option to name your doorbell and add location details.
- **Device Information** – Tap here to view device information.
- **Third Party Supported** – allows you to add third party devices such as Amazon Echo Dot – follow the instructions within the App for Set up.
- **Basic Function Settings** – Tap on this to Set Two-way Talk
- **Detection alarm Settings** – Tap on this to set Human Body Filter on or off. Setting this to ON, to reduce the number of alert notifications, it will only detect movement by a human body.
- **PIR** – Tap on PIR to set On or Off and to set the sensitivity of the camera to movement.
High Sensitive: the camera detects that there is an object moving, as long as there is a slight movement.
Medium Sensitive: the camera detects that a clearly visible object is moving.
Low Sensitive: the camera detects that a clearly visible object is moving significantly.
- **Power Management Settings** – Tap to check the battery level, and to set the low battery alarm threshold as to when you will receive a notification that the battery will need to be charged.
- **VAS** – Tap for value added services available to purchase on the app.
- **Offline Notification** – Tap to change the setting to On if you wish to receive notifications if the device goes offline for a period of more than 30 minutes.
- **FAQ & Feedback** – Tap here to access the FAQ's related to your doorbell. Enter a question or key word to view all related FAQ's. This information is produced by the App creators. If you are having problems locating the answer to your question, go to WatchOvers Support on the website.
- **Share Device** – Tap to share the doorbell with a member of your family or whoever you would like to share the doorbell with.
- **Add to Home Screen** – Tap this to add the doorbell to the home screen of your mobile phone. Follow the app instructions to set this up.
- **Device Update** - Tap to check on device updates available and choose to set any upgrades on automatic. Product version etc. available from this screen.
- **Remove Device** – Tap to remove the doorbell from your app. Follow the onscreen app instructions to do this. You will be asked to confirm before the device is removed.

Technical Specification

Resolution	1920 *1080/1280* 720 (Matching)
Field of View	1.7mm@F2.4/166
IR LED	6.850 mm high power infrared lamps 5- 10 meters for night vision
WIFI	802.11 b/g/n supported
Audio	Two- way speaking, with echo removal function
Recording	MicroSD card (Above C10 high speed brand card is required)
Storage	Supports up to 32Gb MicroSD Card
Battery	18650 battery (LI- lion,2600mAh)
Push	Quick Push within 1 second
Prompting	Press/PIR/remote Mobile phone activation
Power	Standby current:120 uA Working current:170 mA

Functions Wireless Doorbell



LONG BATTERY LIFE: The capacity of the 18650 battery is 2600mAh



HIGH DEFINITION: Million High Definition Pixels within the Ultra-Thin 1.7MM Lens



ANYWHERE, ANYTIME: Remote Mobile phone activation (via the app)



2.4G Wi-Fi connection



supported Clear two- way speaking



PIR supported. When someone is outside, an alert is immediately sent to your mobile phone via the app and a Photo taken



Automatic switching between Day/Night mode, with clear pictures to safeguard you and your family.

Wireless Door Chime

WatchOvers.com

 
User's Manual

Congratulations on your purchase of our Wireless Door Chime. To ensure proper use and trouble-free operation, read this User's Manual first before use.


Introduction

This product is a modern and stylish wireless door chime with 38 melodies and alarm chimes, 8 volume levels and a light ring. It can be expanded with multiple receivers and be set to independent ring tones for each transmitter.

At a Glance

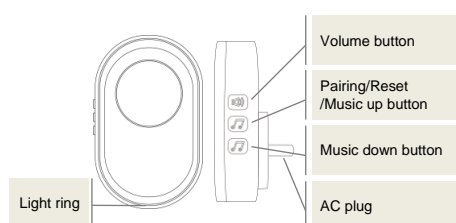

Push button

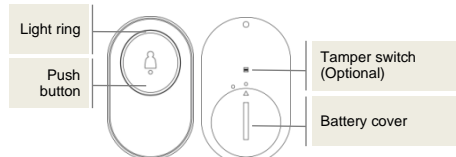

Note: Images may vary

Installation

Before installation plug the Chime into the socket. Use a socket near the doorbell to ensure door chime range first. Once set up, paired and working you can move the chime to your preferred location.

Pairing

The Chime supplied with your video doorbell is already paired. If you need to reset and pair it or you want to pair more than one chime, you can pair the devices as follows:

- ↓ Press and hold the pairing button until you hear one beep and the indicator light is blue, then the Chime is in the pairing mode.




- ↓ Press the button on the Video doorbell, then the Chime will beep and flash once to indicate the pairing is complete. The Chime will beep and flash twice to indicate that the pairing has failed if the Video doorbell is full (max 100).

Tip: One Video doorbell can be paired to more than one Chime and vice versa.

Volume Adjustment

Press the Volume Button to adjust the volume level of ringtone from highest to mute.

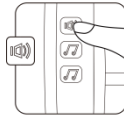

Change Ringtone

Press Music Up Button or Music Down Button to choose your favourite ringtone.



Change Melody

You need to pair the Video doorbell again if you want to change the chime tone. Please refer to **Pairing**.



Reset / Deleting Transmitters

This process resets the Chime to factory settings and removes all pairings. Press and hold the Reset Button until you hear four beeps with the light ring flashing four times.



Chime Specifications

Power Supply: 110/220VAC

Consumption: <5mA @Standby

Radio Frequency: 433Mhz

Selectable Melodies: 38

Volume Levels: 8(mute included)

Sound Level(typical): 85dBA

Expandable: up to 100 receivers

Operation Temperature: -10~55°C

Transmitting Distance: <80m (Without obstacles and no Interference)