 


300m WATCH

INSTRUCTIONS AND WARRANTY

 
OVERVIEW

- 1 Hour hand
- 2 Minute hand
- 3 Seconds hand
- 4 Date window
- 5 Unidirectional rotatable graduated bezel in ceramic
- 6 Winding crown

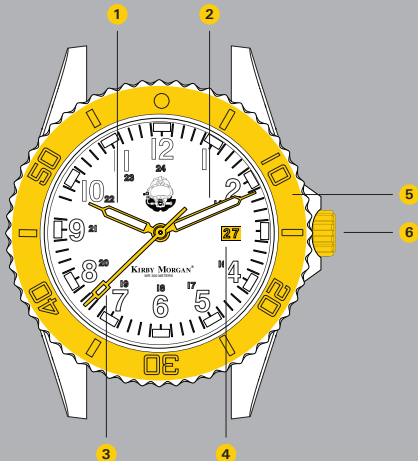

This page intentionally left blank

SETTING THE DATE

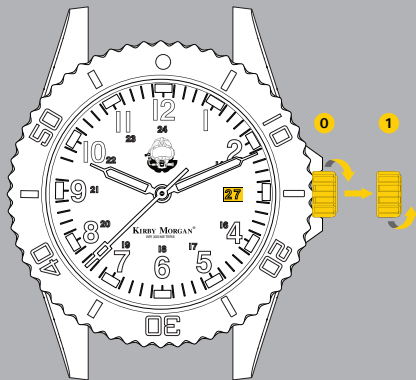

Unscrew the crown counter-clockwise until it spins freely (*position 0*), then pull the crown out to the first click (*position 1*).

Turn the crown clockwise to advance the date (*position 1*).

 
Push the crown back into the case. Turn the crown clockwise while applying pressure towards the case, until snug (*position 0*).



IMPORTANT

ENSURE THE CROWN IS FULLY CLOSED TO PREVENT FLOODING OF THE WATCH.

SETTING THE TIME

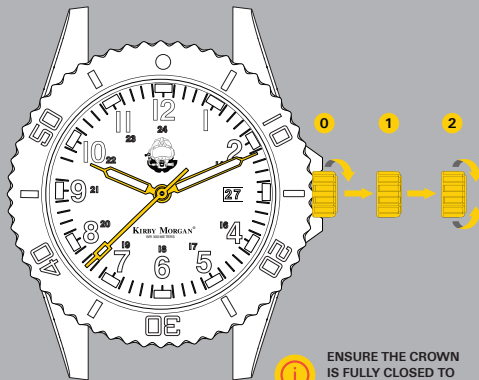

IMPORTANT

 
ENSURE THE CROWN IS FULLY CLOSED TO PREVENT FLOODING OF THE WATCH.

Unscrew the crown counter-clockwise until it spins freely (*position 0*), then pull the crown out to the second click (*position 2*).

Turn the crown clockwise (or counter-clockwise) to the appropriate time (*position 2*).


Push the crown back into the case. Turn the crown clockwise while applying pressure towards the case, until snug (*position 0*).

HOW TO REMOVE THE LINKS

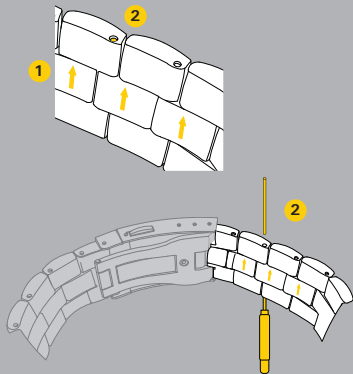

- 1 There are arrows on the inside links of the metal bracelet. These are the links that are removable.
- 2 Notice the small holes on the edge of the metal bracelet. To remove a link you will need to push out the small “hairpin” style pins using a pin pusher or similar tool—be careful not to scratch the metal. Press the “hairpin” style pins out in the direction of the arrow.
- 3 Reinstall the “hairpin” style pins in the reverse order.

 HOW TO CHANGE THE BANDS

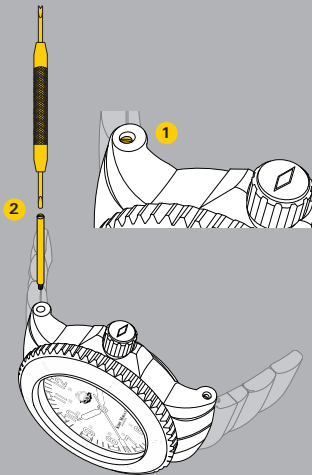

- 1 Locate the small holes and set screws at the end of the watch lugs on the crown side, this is where the band attaches to the watch.
- 2 The set screw is 22.5mm long and goes from one side of the watch lugs to the other. Use the provided screwdriver to unscrew the set screw until the threads fully release—you should feel less tension on the set screw. The set screw will not be fully removed, at this point pull the screw all of the way out.
- 3 To install a new strap, reverse the order of the strap removal procedures. **DO NOT OVER TIGHTEN THE SET SCREWS**, the screws only need to be snug.

This page intentionally left blank

CARING FOR YOUR WATCH

Your KIRBY MORGAN watch is a precision device, thus it requires appropriate care, both to protect your investment and to maintain good working order.

Daily activities, as well as normal sports activities, will not affect the integrity of the watch. A violent shock, such as a drop or impact may upset the movement, and the watch's ability to keep correct time, however.

Your watch should only be cleaned with water and a soft cloth.

Metal bracelets should be cleaned with a soft brush or cloth, warm

soapy water, rinsed clean and dried with a soft cloth.

If your watch is immersed in water on a regular basis, it should be inspected annually to verify water resistance.

If wearing your watch in salt water, thoroughly rinse the case and bracelet in fresh water when finished.

The maximum water resistance depth is engraved on the case back, or can be found on the dial. Never wind or pull out the crown when the watch is wet or underwater.

The water resistance indicated is

tested at a static level of pressure. Underwater activities create additional pressures on the watch, which are greater than the normal or actual depth.

Guidelines for water resistance

50 Meters / 5 ATM / 165 Feet
suitable for swimming

100 Meters / 10 ATM / 330 Feet
suitable for swimming and snorkeling

200 Meters / 20 ATM / 660 Feet
suitable for recreational scuba diving

300 Meters / 30 ATM / 1000 Feet
suitable for professional diving

Avoid wearing your watch in saunas and hot tubs, as the high temperatures can affect the watch's water resistance.

Avoid bathing or showering with your watch, as prolonged exposure to soap can reduce the watch's water resistance, over time.

WARRANTY AND REFUNDS

KIRBY MORGAN backs our watches with a one year conditional warranty. This warranty covers defects in the build quality of the watch, including movement. This excludes the strap, and normal wear and tear.

Further, the warranty does not cover damage to the watch from water leaking into the case due to an unsecured crown.

KIRBY MORGAN reserves the sole right to determine whether a watch is covered under the conditional warranty.



IMPORTANT

ENSURE THE CROWN IS FULLY CLOSED
TO PREVENT FLOODING OF THE WATCH.



www.KIRBYMORGAN.com