
 


HOW TO USE:

Power On/Off: Hold the  button for 3 seconds to turn your device on or off.

Vibration Modes: Press the  button to cycle through the 7 vibration patterns. Press the + or - button to cycle through the 5 vibration intensities.

Travel Lock: Press and hold the + and - button for 3 seconds to lock/unlock travel mode. The LED light will flash to confirm travel mode.

Charging the Device: Plug the included jack plug into the front top of the vibrator, and the USB end into your power source. An LED light will flash while charging and remain solid when

the item is fully charged. It takes approx 180 min for a full charge.

CLEANING, STORAGE, & SAFETY:

Always clean and dry your device thoroughly before and after use. **Do not** store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items. Clean the device with a soft, damp cloth.

Do not clean with an alcohol or chemical-based cleaner. Use water based lubricant as desired.

Not compatible with silicone lubricant.

Avoid leaving your device in direct sunlight and never expose it to extreme heat. Keep away from water, and never immerse it.

WARNING:

For adult use only. For external use only.

Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

Bodywand shall not be liable for incidental or consequential damages resulting from the misuse of this product.

DISPOSAL INFORMATION:

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

SPECIFICATIONS:

Material	Silicone + ABS
Size	215 mm X 50 mm
Weight	235 g
Battery	3.7V 1200 mAh / USB 2.0
Charging	180 min.
Use Time	up to 180 min.
Waterproof	IPX7, for cleaning the device, not to be used under water

XGEN, LLC

Horsham, PA 19044 All Rights Reserved

Email us at sales@xgenproducts.com for any unanswered questions.

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK. Phone: +44 2037692960, E-Mail: UKresponsibleperson@arangaranga.com

EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046, Spain. Phone: +34 910054258, E-Mail: EUresponsibleperson@arangaranga.com

www.thebodywand.com