

Material Silicone + ABS Size 112 mm X 38 mm Weight 56 g Battery 3.7V 240mah / USB 2.0 Charging 80 min. Use Time Up to 40 min. Waterproof IPX7, for cleaning the device, not to be used under water

HOW TO USE:

Power On/Off: Hold the \circlearrowleft button for 3 seconds to turn your device on or off.

Vibration Modes: There are 3 vibration intensities and 7 vibration patterns. Press the \circlearrowleft button to cycle through each mode.

Charging the Device: Plug the included jack plug into the bottom of the vibrator, and the USB end into your power source. An LED light will flash while charging and remain solid when the item is fully charged. It takes approximately 1.5 hours for a full charge.

CLEANING, STORAGE, & SAFETY:

Always clean and dry your device thoroughly before and after use. **Do not** store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items. Clean the device with a soft, damp cloth.

chemical-based cleaner.
Use water based lubricant as desired.
Not compatible with
silicone lubricant.

Do not clean with an alcohol or

Avoid leaving your device in direct sunlight and never expose it to extreme heat. Keep away from water, and never immerse it.

XGEN, LLC

Horsham, PA 19044 All Rights Reserved

Email us at sales@xgenproducts.com for any unanswered questions.

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK. Phone: +44 2037692960,E-Mail: UKresponsibleperson@arangaranga.com

EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046, Spain. Phone: +34 910054258, E-Mail: EUresponsibleperson@arangaranga.com

www. the body wand. com

WARNING:

For adult use only. For external use only.

Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.


Bodywand shall not be liable for incidental or consequential damages resulting from the misuse of this product.


DISPOSAL INFORMATION:

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

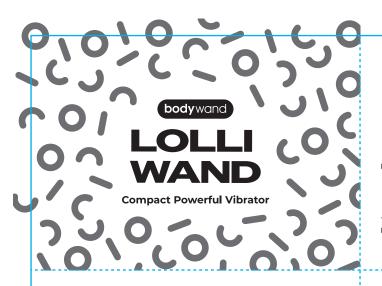

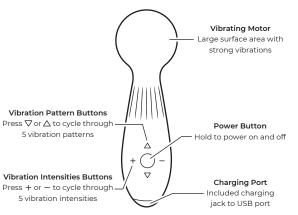

HOW TO USE:

Power On/Off: Hold the centre button for 5 seconds to turn your device on or off.

Vibration Modes: Press the ∇ or \triangle button to cycle through the 5 vibration patterns. Press the + or - button to cycle through the 5 vibration intensities.

Charging the Device: Plug the

included jack plug into the bottom of the vibrator, and the USB end into your power source. An LED light will flash while charging and remain solid when the item is fully charged. It takes approx. 15 hours for a full charge.

CLEANING, STORAGE, & SAFETY:

Always clean and dry your device thoroughly before and after use. **Do not** store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items. Clean the device with a soft, damp cloth.

Do not clean with an alcohol or chemical-based cleaner. Use water based lubricant as desired. Not compatible with

silicone lubricant.

Avoid leaving your device in direct sunlight and never expose it to extreme heat. Keep away from water, and never immerse it.

WARNING:

For adult use only. For external use only.

Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

Bodywand shall not be liable for incidental or consequential damages resulting from the misuse of this product.

DISPOSAL INFORMATION:

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

SPECIFICATIONS:

Material	Silicone + ABS
Size	154 mm X 46 mm
Weight	140.8 g
Battery	3.7V 600mah / USB 2.0
Charging	90 min.
Use Time	90 min.
Waterproof	IPX7, for cleaning the device, not to be used under water

XGEN, LLC

Horsham, PA 19044 All Rights Reserved

Email us at sales@xgenproducts.com for any unanswered questions.

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK. Phone: +44 2037692960,E-Mail: UKresponsibleperson@arangaranga.com

EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046, Spain. Phone: +34 910054258, E-Mail: EUresponsibleperson@arangaranga.com

www. the body wand. com