

USER GUIDE

HOW TO USE

• DEVICE POWER ON/OFF

Press and hold the \circlearrowleft button for 3 seconds to turn your device on or off. Press the \circlearrowleft button again to start vibration modes.

• VIBRATION MODES

There are 9 adjustable vibration modes for both the insertable ends.

To adjust the device's vibration modes, press the 🖒 button on your insertable to cycle through each mode.

• REMOTE POWER OFF

The remote will be automatically paired with the device. Ensure your main device is turned on before turning the remote on to use it.

With your main device turned on, press the \circlearrowleft button for 3 seconds on the remote to put your remote on or off standby mode.

VIBRATION MODES

To adjust the insertable vibration modes, press the \approx button on your remote to cycle through each mode.



BEND

Versatile Bendable Dual-Ended Massager, Compatible with a Wireless Rechargeable Remote, features a Textured Insertable End on one and Bulbous Girthy End at the other.

> Offering the ultimate reach, this flexible massager is great for dual stimulation, providing internal and external stim. It has nine vibration modes, so you can find your perfect setting.



Power Button/ Vibration Control

Remote Controls



Vibration Control



Device may be used with or without the remote control.

Ensure the main device is **ON** before use.

HOW TO USE

CHARGING THE DEVICE

Plug in your device using the included USB Pin charger.

The device will not function while charging, unplug the charger before using the device.

Flashing LED Light: Item is charging Solid LED Light: Item is fully charged.

It takes approx 95 minutes of charge for up to 45 minutes of use.

CHARGING THE REMOTE

Connect your remote using the included USB Magnetic charger.

The device will not function while charging, unplug the charger before using the remote.

CLEANING, STORAGE & SAFETY

Always clean and dry your device thoroughly before and after use.

DO NOT store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items.

Clean the device with a soft, damp cloth.

DO NOT clean with an alcohol or chemical-based cleaner.

Use water based lubricant as desired.

Avoid leaving your device in direct sunlight and never expose it to extreme heat. Keep away from water, and never immerse it.

Not compatible with silicone lubricant.

Front

WARNING

For adult use only. For external use only.

Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

Bodywand shall not be liable for incidental or consequential damages resulting from the misuse of this product.

SPECIFICATIONS

BEND

ABS + Silicone

ABS + Silikon

Tamaño: Taille: Größe:	197mm x 31mm x 31mm	
Weight: Peso: Poids: Gewicht:	95g	
Material:	ABS + Silicone ABS + Silicona	

Battery(Device):

Matériaut:

Material:

Batteria: 320mAh

SPECIFICATIONS

POWER:

3.7V 320mAh USB2.0

WATERRPOOF:

IPX7 (Device Only)
Remote Control is NOT waterproof.

BATTERY LIFE:

95 minutes for up to 45 minutes of use.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

XGEN, LLC

Horsham, PA 19044 All Rights Reserved

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK.

Phone: +44 2037692960,

E-Mail: UKresponsibleperson@arangaranga.com

EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046, Spain.

Phone: +34 910054258,

E-Mail: EUresponsibleperson@arangaranga.com

Email us at sales@xgenproducts.com for any unanswered questions

Back