

USER GUIDE

HOW TO USE

DEVICE POWER ON/OFF

Press and hold the 🕁 button for 3 seconds to turn your device on or off. The device will vibrate immediately once turned on.

• VIBRATION MODES There are 9 adjustable vibration modes

for insertable dual ends. To adjust the vibration modes, press the

button on your device to cycle through each mode.

Dual-ended C-Shaped Massager with a Clitoral Focused Tip and Textured Insertable Tip with Versatile Play for All Bodies.

Get the most pleasure from this versatile toy that provides internal and external stimulation for vulva owners, as well as penis stimulation with its circular shape that can wrap and rumble around a shaft.

HOW TO USE

CHARGING THE DEVICE

Connect your device using the included USB Magnetic charger.

The device will not function while charging, unplug the charger before using the device.

Flashing LED Light: Item is charging Solid LED Light: Item is fully charged.

It takes approx 80 minutes of charge for up to 60 minutes of use.

Vibrating Dual Ends

Power Button

CLEANING, STORAGE & SAFETY

Device Controls

Power Button / Vibration Control

Always clean and dry your device thoroughly before and after use. **DO NOT** store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items. Clean the device with a soft, damp cloth. **DO NOT** clean with an alcohol or chemical-based cleaner. Use water based lubricant as desired. **Not compatible with silicone lubricant.**

> Avoid leaving your device in direct sunlight and never expose it to extreme heat. Keep away from water, and never immerse it.

Front

WARNING

SPECIFICATIONS

For adult use only. For external use only. Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

Bodywand shall not be liable for incidental or consequential damages resulting from the misuse of this product.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

FC III C € LK

The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

Size: Tamaño: POWER: 135mm x 72mm x 27.5mm Taille: Größe: Weight: WATERPROOF: Peso: 107g IPX7 Poids: Gewicht: BATTERY LIFE: Material: ABS + Silicone ABS + Silicona Material: Matériaut: ABS + Silicone Material: ABS + Silikon Battery: Batería: 320mAh Batterie: Akku:

SWIRL

XGEN. LLC

Horsham, PA 19044 All Rights Reserved

SPECIFICATIONS

3.7V 320mAh USB2.0

80 minutes for up to 60 minutes of use.

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK. Phone: +44 2037692960, E-Mail: UKresponsibleperson@arangaranga.com

EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046, Spain. Phone: +34 910054258, E-Mail: EUresponsibleperson@arangaranga.com

Email us at sales@xgenproducts.com for any unanswered questions

Back