

UltraCleaner Scrubber 2

WELCOME GUIDE

ATTENTION


When using the electric spin scrubber, basic precautions should always be followed, including the following:

- Before the first operation, read this manual carefully and keep it for future reference.
- This product is not a toy. Close supervision is required when this machine is used by or near children. Store out of reach of children.
- To protect against the risk of electric shock, do not put the battery charger in the water or other liquid. Do not charge battery if it is wet or shows signs of corrosion, Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not incinerate the battery. It may explode in a fire. A small leakage from the battery cell may occur under extreme usage, charging or temperature conditions. This does not indicate a failure. However, if the outer seal is broken, cracked or damaged and this leakage gets on your skin, please wash it immediately with soap and water or neutralize with mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with dean water for at least of ten minutes. Seek medical attention.
- Do not charge the unit outdoors, store indoors after each outdoor use.
- This appliance can be used by children aged from 8 years, and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the charger in wet or damp conditions. It is intended for indoor use only. Do not use charger near sinks or tubs. Do not immerse it in water.
- Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces. The charger should be placed away from sinks or hot surfaces.
- For the best results, do not charge a battery when the air temperature is below 40°F (5°C) or above 105°F (40°C).
- Unplug the charger when not in use or before cleaning.
- Do not abuse the cord. Do not carry the charger by the cord or yank the cord to disconnect. Grasp the charger plug and pull to disconnect. Keep charger cord away from heat and sharp edges.
- Do not operate in the presence of explosives and/or other flammable fumes or liquids.
- If abnormal noise, smell, smoke or any other failure or breakage is found during the operation, turn off the switch and unplug it. Then, contact the customer support team immediately. Do not repair by yourself.
- Do not store or use it close to high temperatures.
- Always keep proper eye protection when using the scrubber with irritating substances. Rubber gloves are also recommended.
- Please make sure to turn off the machine first When changing accessories.
- Please make sure to charge the machine when in the OFF position,
- This appliance is only for household use, not for commercial or industrial use.


WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

- Always store the unit indoors.
- Keep hair, loose clothing, and all parts of the body away from moving parts.
- Do not use the appliance when charging.
- Do not submerge the handle in water or other liquid.
- Use only as described in this manual. Use only recommended parts.
- Only use attachments recommended or sold by the manufacturer.
- To disconnect, turn all controls to the OFF ("O) position, then remove the plug from outlet.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.

PACKAGE CONTENTS

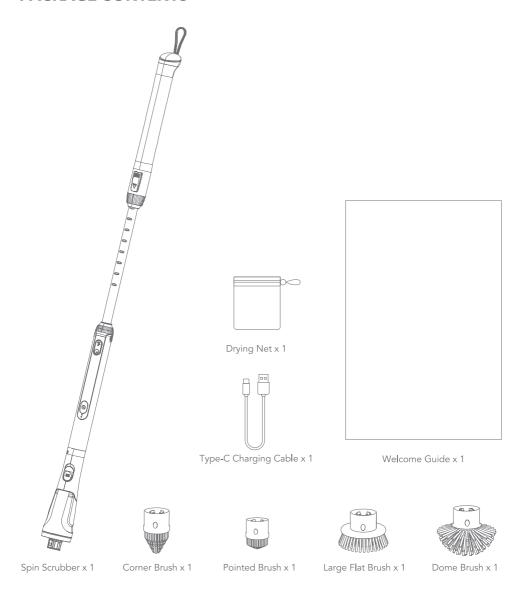

PRODUCT OVERVIEW

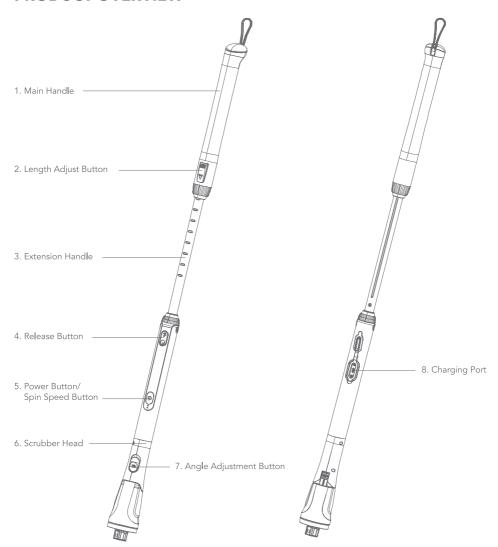

SPECIFICATIONS


Size:	1170*105*65mm	
Input:	5.0V 1A	
Battery Capacity:	3.7V 2500 mAh 9.25Wh	
Material:	ABS	

PRODUCT OPERATION INSTRUCTIONS

WARNING:

- Always use rubber gloves and keep proper eye protection to avoid contact from splashing of soaps or detergents on skin and/or eyes while brush head is spinning and when brushes are removed or attached.
- After using scrubber, turn the unit off while brush is still in contact with surface to avoid getting splashed with soaps or detergents.
- Always test on a small, inconspicuous area before using on a larger area. Always follow surface manufacturer's guidelines for cleaning and maintenance.
- Do not expose the unit to excessive water. If scrubber accidentally becomes submerged in water or water gets into "Charging Port", shake out liquid and air dry the machine 24 hours at least.
- 1. Choose proper brush attachment and attach to scrubber as directed in "Assembly Instructions."
- 2. Wet the intended area and apply desired cleaning product.
- 3. Press and hold the angle adjustment button backward to adjust the brush head to the right angle. Place tip of brush on surface to be cleaned.
- 4. Press power button to switch on the machine, then adjust the speed by press speed button.
- 5. When done, press power button to turn off.

CHARGING INSTRUCTIONS

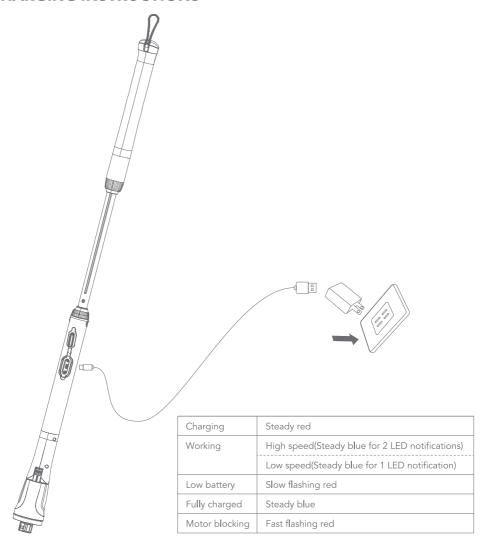

*In order to extend the battery life, please avoid consecutive charging exceed 12 hours. It is not necessary to wait until battery power is fully depleted before recharging.

- 1. Make sure turn off the machine before charging.
- 2. Open "Charging Port Cover" located on back of machine.
- 3. Insert cable end of " Charger" into "Charging Port."
- 4. Plug "Charger" into wall outlet. The power button indicator light will turn to RED to show the machine is charging.
- 5. The Red light turns to Blue after the machine is fully charged. Blue light will remain lit when the battery is completely charged.
- 6. When done, close "Charging Port Cover".

CLEANING & MAINTENANCE

1.Use a wet, non-abrasive cloth to clean scrubber. If needed, use a mild detergent. Then place it in a dry environment to allow it to dry thoroughly.

Note:

- ① Do NOT immerse or run under water.
- 2 Do NOT clean with alcohol or petrol.
- 2. Rinse Brush attachments under water and clean thoroughly after use. Then place them in a dry environment to air dry them thoroughly.

Problem	Remedy	
The charging indicator doesn't light up when charging.	 Check if the charging socket is abnormal or out of power. If the indicator light is blue after inserting the adapter, the product is fully charged and can be used by simply turning it on. If it is neither of the above two cases, please contact our customer service. 	
The charging indicator doesn't turn blue after charging for over 5 hours	 Check whether the electrical outlet and charging port are loose. Plug them in tightly before charging. If the product is immersed in water during use, it will damage the internal circuit and cause abnormal charging. If it is neither of the above two cases, please contact our customer service. 	
The brush head stops spinning while working.	 If charging indicator keep fast flashes red and doesn't stop, you may press the brush head too hard and the product automatically stops in the protected state. Just switch the Power button once or twice to return to normal. If charging indicator keeps flashing red slowly and doesn't stop, it means the product runs out of battery and needs to be fully charged before use. If it is neither of the above two cases, the product stops spinning after less than 10s, or if the spin does not resume after pressing Power Button twice, please contact our customer service. 	
The charging indicator turns blue(representing full charge) but the brush head does not spin after it is turned on.	 Check whether the brush head is tightly connected with the Main Handle. Please refer to Quick Installation Guide for more information. If it has been well-connected and the product has not been soaked in water before, but the brush head does not spin after turning on or it stops spinning without being pressed too hard, please contact our customer service. 	
The brush head spins less than 90 minutes.	Each user will use different downforce during use. If you keep pressing the brush head hard, the working time will be less than 90 minutes. In order to prolong the use time, please do not press the brush head too hard, as frequent pressing will break the brush head.	

WARRANTY CERTIFICATE

This product is covered by a guarantee from the date of purchase. The warranty is valid only when the warranty card is properly completed.

Warranty is limited to the core product. Accessories included in the package are not covered.

Please contact us if you have a question or experience a problem with the product promise we will give you a satisfied solution within 24 hours.





Scan to Visit Our Website

- e contact@oraimo.com
- @ us.oraimo.com

Made in China



Scan to Visit Our Website

♠ contact@oraimo.com

@ us.oraimo.com

Keep Exploring