



Scan to Visit Our Website

✉ contact@oraimo.com

🌐 us.oraimo.com

Keep Exploring

oraimo



User Manual

OIM-211A ICE MAKER

CONTENTS



1
**IMPORTANT
SAFETY
INSTRUCTIONS**
1-2

2
**KNOWING
YOUR
ICE MAKER**
3-5

3
**USING
YOUR
ICE MAKER**
6-8

4
**CLEANING
AND
MAINTENANCE**
9-11

5
**TROUBLE-
SHOOTING
GUIDE**
12-13

6
**WARRANTY
AND
SERVICE**
14

I C E M A K E R



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE



DO NOT touch or hold the mains plug with wet hands.



DO NOT tilt the ice maker. If tipped over, set it upright on a flat, level surface for at least 2 hours before use.



Fill the water tank with fresh potable water or connect with water filtration system to prolong the service life.

When using an electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

INTENDED USE

- / This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- / Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children.
- / Use the appliance only for intended household purposes as described in this User Manual.

ELECTRICITY SAFETY

- / This appliance must be provided with correct voltage via a professionally installed power socket. Make sure the voltage indicated on the label of the appliance is the same as your local supply.
- / **DO NOT** operate the appliance with a damaged cord or plug or if the product malfunctions, is dropped or damaged in any manner.
- / Always plug the appliance directly into a wall outlet / receptacle. Never use with an extension cord or relocatable power tap (outlet / power strip).
- / **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
- / **DO NOT** immerse any part in water or any other liquid.

RELATED TO USE

- / **DO NOT** attempt to disassemble, repair, modify or replace any part of the appliance. No user serviceable parts inside. All servicing should be performed by qualified personnel only.
- / Always place and use the appliance on a dry, stable, level, and horizontal surface. Make sure it cannot be easily knocked over by a person or object.
- / Always turn the appliance OFF and unplug it before cleaning, making any repairs or servicing, or whenever not in use.
- / **DO NOT** sit on or place any object on top of the appliance.
- / **DO NOT** use with water that is micro-biologically unsafe or of unknown quality.
- / **DO NOT** use mechanical devices to defrost. Carry out self-cleaning cycle to remove any frozen parts.
- / If the appliance is stored in a cold environment, wait at least 3 hours for the appliance to warm to room temperature before plugging it in.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

Specifications



Input	120V~ 60Hz
Rated Power	170W
Ice Basket Capacity	3.3lbs./1.5kg
Water Tank	0.74Gal./2.8L
Daily Production	26lbs./12kg

02

KNOWING YOUR ICE MAKER



This ice maker may have been tilted or placed upside down during transportation. Please set it upright for at least 2 hours before initial use to allow the refrigerant fluid to settle.

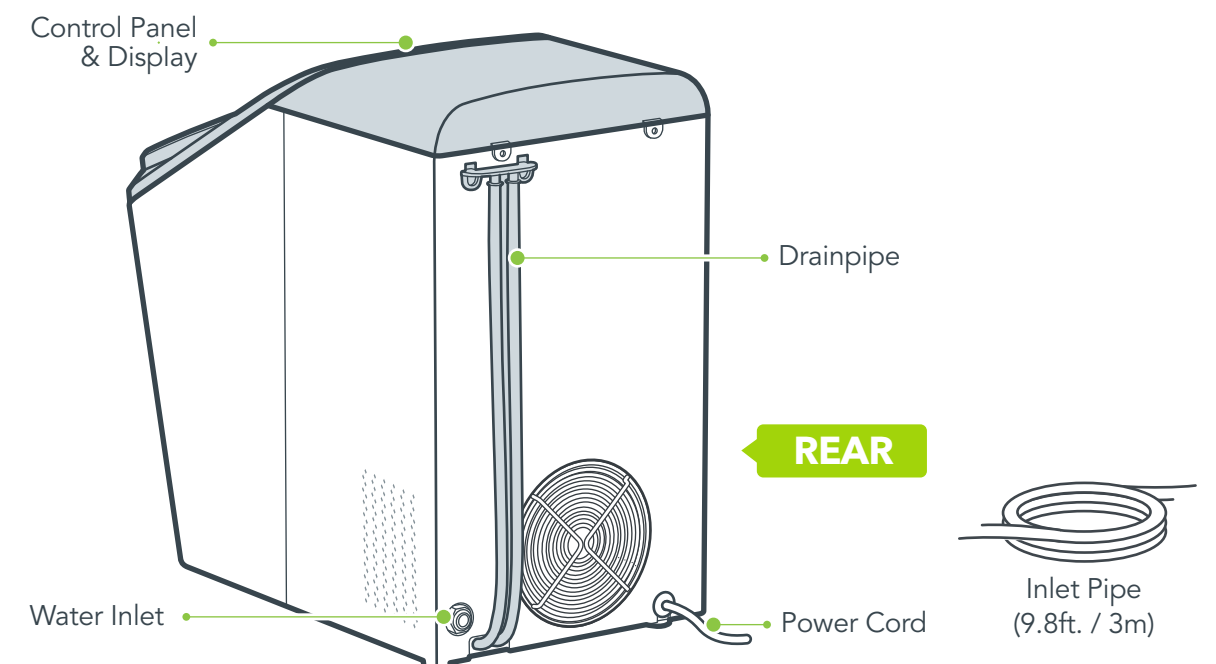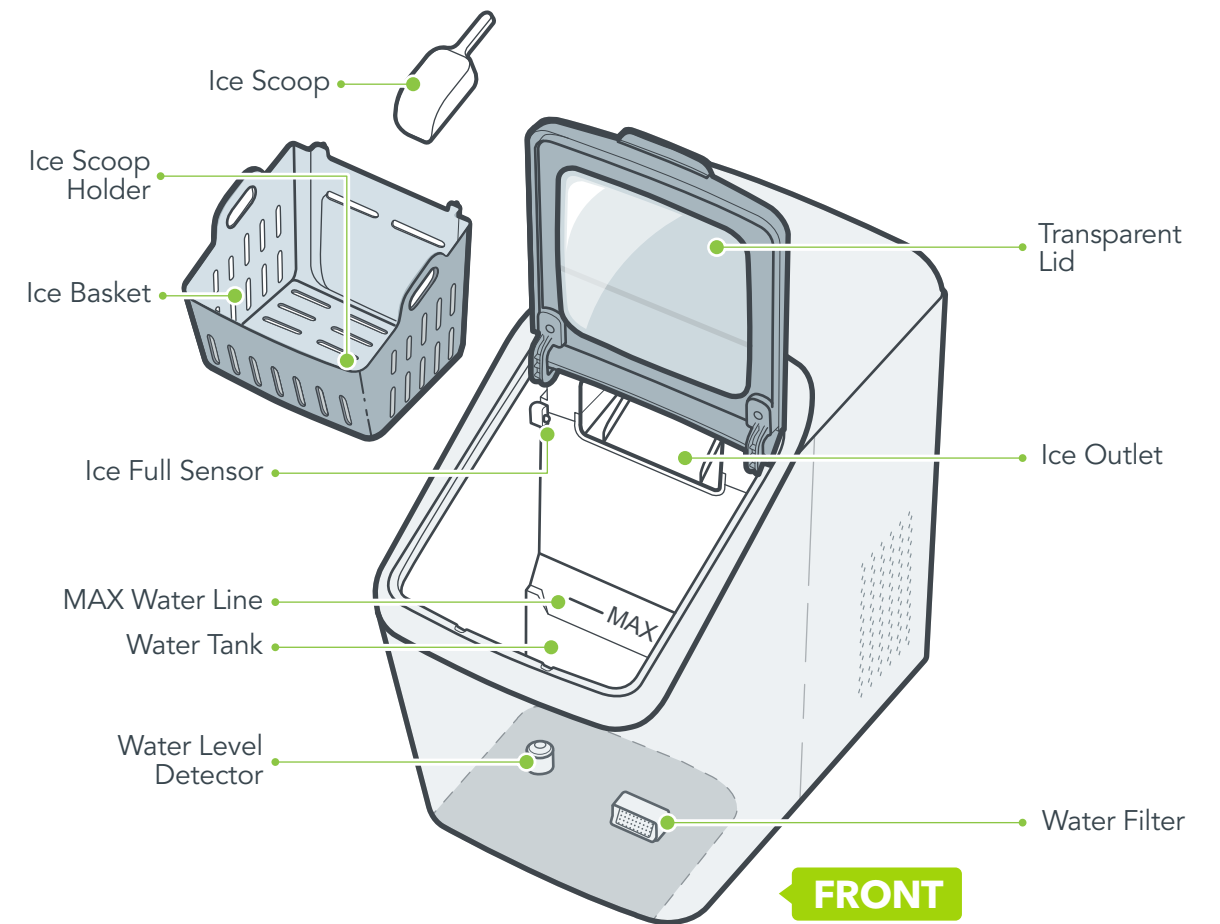

Control Panel & Display



Start/Stop

Press to start or stop making ice.



Self-cleaning

Hold for 3s to start or stop cleaning cycle.



Ice Making

Indicator stays solid on during ice making cycle.



Cleaning

Indicator stays solid on during cleaning cycle.



Add Water

Indicator flashes when lack of water. Add water in time.



Ice Basket Full

Indicator stays solid on when ice full. Remove ice in time.




03

USING YOUR
ICE MAKER

Getting Started




- / Make sure the drain plug is firmly inserted before use.
- / The ice maker will stop making ice when the ice bin is full and resume in 8 hours automatically. Remove the ice cubes timely, the unit will restart making ice immediately if there is plenty of water.

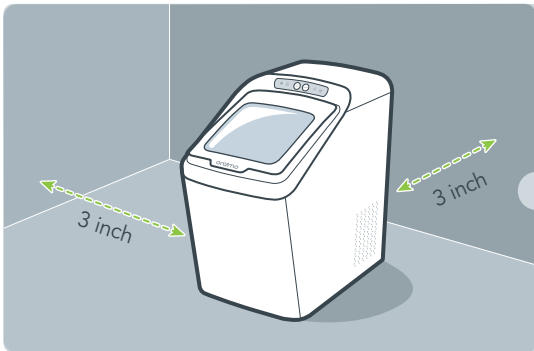

Locate and Clean


Locate upright on a flat, level surface with at least 3 inches of clearance on the sides and back. Clean the tank, ice basket and ice scoop, then settle for at least 2 hours before first use.

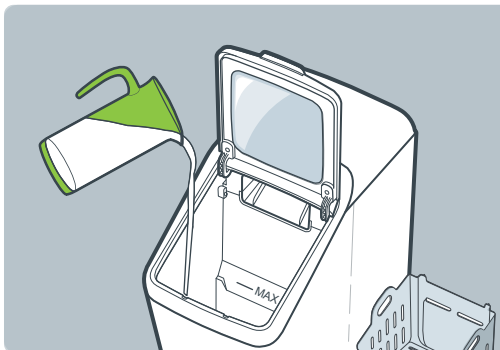


Add Water Manually


Take the ice basket out, fill the water tank with clean potable water below **MAX** line.

* Recommended water type: distilled or demineralized water at 40~ 82°F.

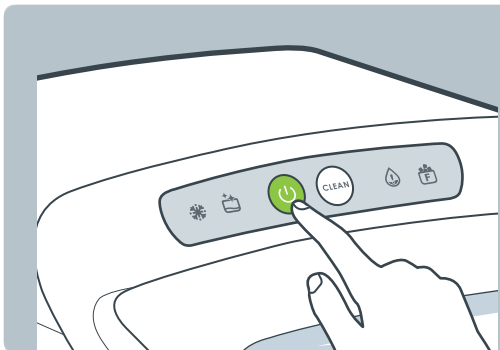

Start Making Ice

Plug into a properly installed grounded outlet, then press  button to start ice making cycle. It will keep making ice until the ice basket is full.

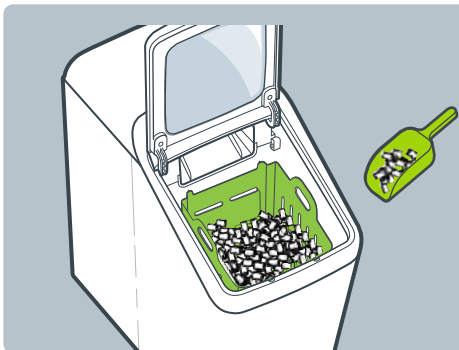


Scoop Ice Out

The ice maker will start to produce ice in 15 minutes. Scoop the ice cubes out once made. Put in use or store in freezer to avoid melting.

Automatic Refilling



- / To add water automatically, connect the included hose to the water supply system as instructed. An adapter (not included) may be required as per the type of water supply system in your home.
- / To avoid overflow of water, do not add water manually when the ice maker is already connected to the water supply system.

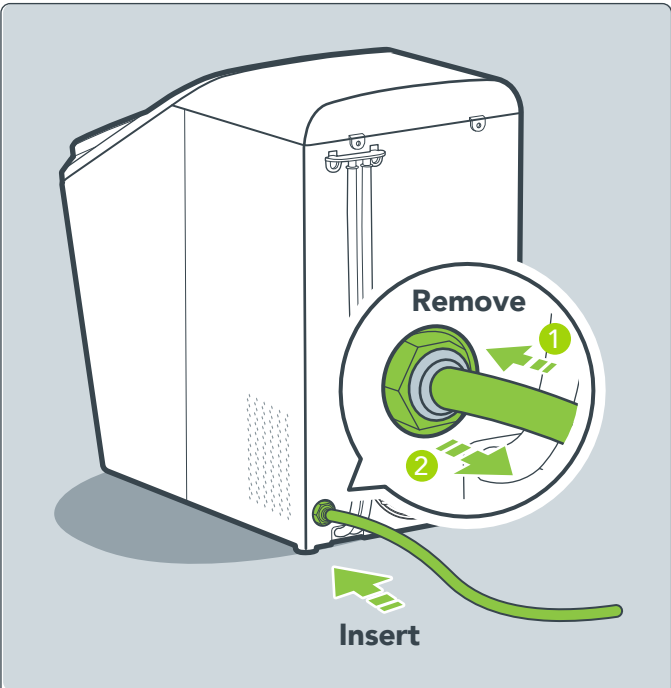


Insert the Hose

Fully insert the included hose into the water inlet till the end is reached.

To remove, hold against the gray ring and pull out.

1

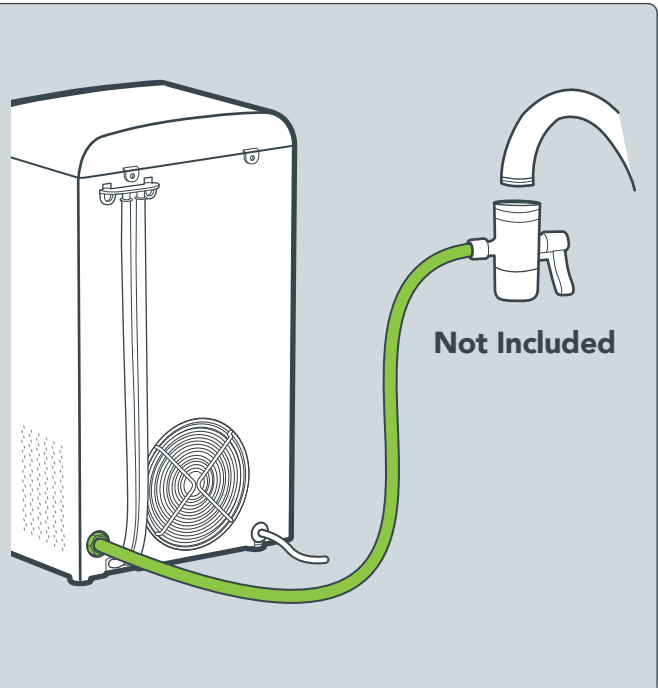

Connect with Water Supply System

Connect the other end with water supply system. A 1/4" connector may be required.

* It is recommended to connect with water filtration system to prolong the service life of the ice maker.

2

04


CLEANING AND MAINTENANCE




Self-Cleaning




To keep your nugget ice tasting fresh, we recommend that you carry out self-cleaning at least once every 1 to 2 weeks.

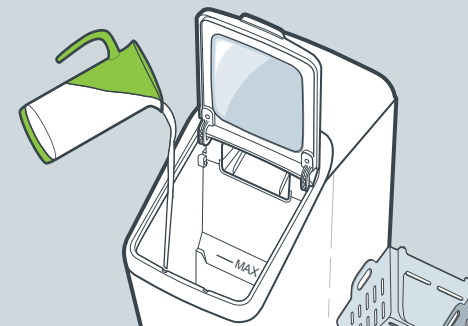


Fill the tank with water below **MAX** line or connect with water supply system.

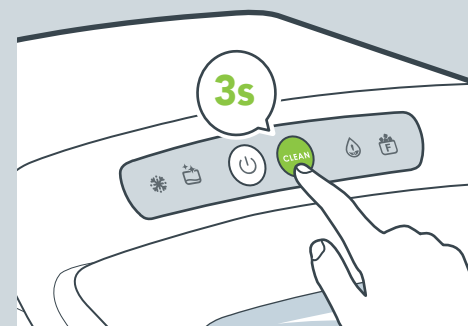

Hold **CLEAN** for 3s to start an 8-minute self-cleaning cycle ( stays solid on).

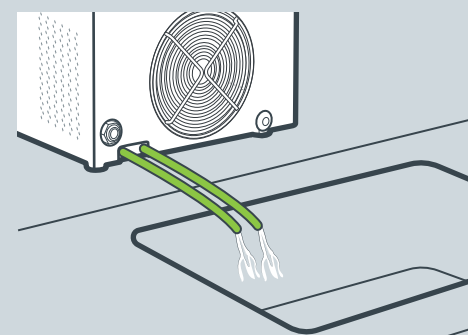

Once completed,  will turn off. Unhook the drainpipe and lay down to a sink.


Regular Cleaning



- 1 Unplug and take out the ice basket. Remove the water filter on the right corner of the tank.
- 2 Rinse clean the ice basket and water filter with diluted detergent and water.
- 3 Clean the water tank using a soft cloth moistened with water.
- 4 To clean the exterior, use a soft cloth dampened with soapy water. Dry with a soft cloth.

! To remove the fallen dirt or fibers, we recommend cleaning the ice basket and water tank once a week. Unplug before cleaning.

Removal of Scale /Mineral Build-up

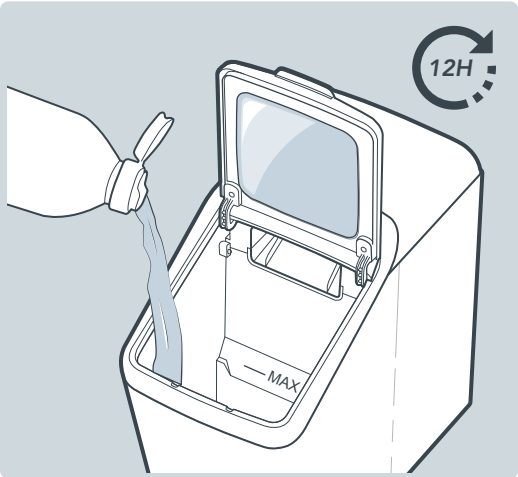

- 1 Fill the tank with water below MAX line.
- 2 Add in distilled white vinegar or citric acid descaling agent. Set aside for 12 hours or overnight.
- 3 Hold CLEAN for 3s to start self-cleaning cycle. Repeat up to 3 cleaning cycles.
- 4 Drain the mixture and continue running 3 cleaning cycles with fresh water for each rinse.










! For scale or mineral build-up, follow the directions to deep clean periodically or when needed. Do not clean with solvents or chemicals.



When not in use for an extended period of time, drain the water tank and clean as instructed. Cover and store in a cool, dry location away from direct sunlight.

TROUBLESHOOTING GUIDE

The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support at contact@oraimo.com

PROBLEM	SOLUTION
 flashing	<ul style="list-style-type: none">• Lack of water. Fill water up to the MAX level and press  to restart.• Disassemble the water filter. Check and clean when necessary.• Check if the water level detector is blocked. Clear and restart.
 solid on	<ul style="list-style-type: none">• Ice bin full. Remove ice and press  to restart.• Ice full sensor damaged. Contact Customer Support for help.
 solid on,  flashing	<ul style="list-style-type: none">• Ice-making assembly is defrosting. Wait 30 to 45 minutes for the ice maker to return to normal automatically.• Or you can hold  for 3s to carry out a self-cleaning cycle, then press to restart after cleaning is done.
 flashing,  flashing	<p>Ice-making assembly is frozen. Wait 20 minutes for the ice maker to defrost automatically. Unplug after 20 minutes then restart.</p>

<p>The ice maker does not work or stops making ice suddenly</p>	<ul style="list-style-type: none"> • Check if  lights up.  stays solid on during ice making cycle. • Check if the tank is lack of water. Fill with water and press  to restart. • The ice maker will stop making ice when the ice basket is full and resume in 8 hours automatically. Remove the ice cubes timely, the unit will restart immediately. • Hold  for 3s to carry out a self-cleaning cycle. • Disassemble the filter at the bottom of tank. Check and clean when necessary.
<p>Noise during ice making</p>	<ul style="list-style-type: none"> • Make sure the ice maker is placed upright on a flat, level surface with at least 3 inches of clearance on the sides and back. • Check if the fan at the back is blocked by any foreign objects. • Carry out a self-cleaning cycle to remove any frozen parts.
<p>Water leaks</p>	<ul style="list-style-type: none"> • Check if the hose is fully inserted into the water inlet till the end is reached. • Unplug the hose and check if the inserted end is intact and flat. Cut for a new flat end when necessary. • Wrap the connection part with PTFE thread seal tape for a tight connection.
<p>Ice making cycle is normal but no ice is being formed</p>	<ul style="list-style-type: none"> • Ice making capacity goes down as the environmental temperatures go up, and will be severely reduced at temperatures over 90°F. • A restricted drain or standing water in the water tank. Check the drainpipe for kinks.
<p>Ice cubes easily melted</p>	<p>The ice basket is not refrigerated and the ice cubes will melt if not used. Please put the ice cubes in use or store in freezer once made to avoid melting.</p>

Thanks for choosing Oraimo Ice Maker.

This product is covered with Oraimo product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Misuse, dismantling, or repairs performed by unauthorized personnel.
- Any appliance that has been tampered with or used for commercial purpose.
 - Use of force, natural hazards, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
 - Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or alteration to the product or any of its parts that have been performed by unauthorized personnel.

We can only provide after-sales service for products that are sold by Oraimo or Oraimo authorized retailers and distributors.

If you have purchased your appliance from a different place, please contact your seller for return and warranty issues.

✂ **Please have your order ID ready before contacting Customer Support.**

WARRANTY AND SERVICE

Warranty Certificate

Customer's Name	
Order ID	
Product Model	
Problem Description	

This product is covered by a guarantee from the date of purchase. The warranty is valid only when the warranty card is properly completed. Warranty is limited to the core product. Accessories included in the package are not covered. Please contact us if you have a question or experience a problem with the product, we promise we will give you a satisfied solution within 24 hours.



Scan to Visit Our Website

✉ contact@oraimo.com
🌐 us.oraimo.com

Made in China



Keep Exploring

