

USER MANUAL

Contents Page

Switching the arcade machine ON and OFF.....	Page 3
Navigating the games list menu.....	Page 3
Selecting a game to play.....	Page 3
Exiting a game to return to main menu.....	Page 3
Adjusting the volume.....	Page 4
Installation of coin acceptor.....	Page 4
Accessing user settings (Admin. control).....	Page 5
Switching from Free-Play (Default) to Pay-To-Play (Custom pricing).	Page 5
Customising games list.....	Page 5
Downloading additional games.....	Page 5
Troubleshooting Guide.....	Page 6
Issues with buttons and joysticks.....	Page 6
Rearranging button layout.....	Page 6
Empty games list.....	Page 7

Switching the arcade machine ON and OFF

The outlet of the console is located on the rear door panel. Use the supplied power cable to plug the console into a power socket.
It is best to switch off the unit after use to reduce power usage and overall wear and tear of the arcade machine.

Navigating the games list menu

Player 1 START button acts as a *Home/Go Back* button when navigating the main menu. Click this button when the console is on to navigate to one of the game-selecting lists; All, Categories, Recents, Search

Button A acts as a Selecting button. Use this button to select keys on the Search Keyboard.

Selecting a game to play

 
Use Button A to select a game to play. It will instantly display a loading screen followed by the selected game.

Exiting a game to return to main menu

Press Player 1 START button and Button A simultaneously to exit the game and return the games list menu.

Adjusting the volume

Use the supplied key to open the rear door of the unit and adjust the volume using the Volume dial as shown in the below image.

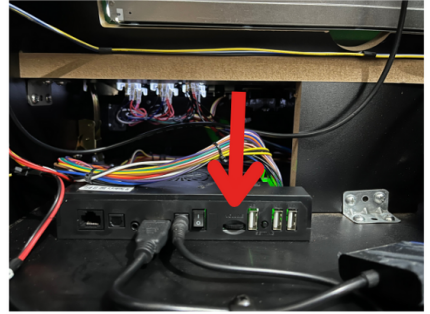

Installation of coin acceptor

Insert the supplied coin acceptor into the opening on the side panel and secure it in place using the bolts and nuts provided.

 


Ensure the console is switched OFF and plug in the coin acceptor as shown. NOTE: yellow wire should line up with top pin.



See page (5) for instructions relating to switching from Free-Play to Pay-To-Play and setting a custom price.

Accessing user settings (Admin. control)

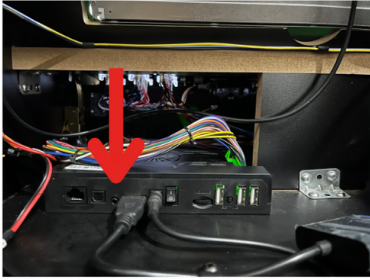

Use the supplied key to open the rear door of the unit and click the *Settings button* as shown in the below image to access the console's administrative settings.

 
Switching from Free-Play (Default) to Pay-To-Play (Custom pricing)

Move the joystick left and right while hovering on *Coin setting* to set a price-per-play within a range of \$1-10.




Customising games list

Select *Enter game settings* on the main page to customise the games list by hiding, deleting or adding games to a favourites list.

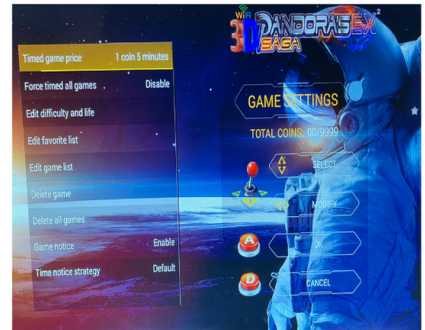

Downloading additional games

 Select *Enter game market* on the main page after connecting to WIFI to download additional games from the built-in marketplace.

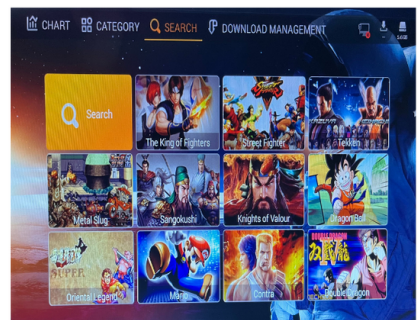

Troubleshooting Guide

Issues with buttons and joysticks

 
Select *Key settings* > *IO test* on the Settings menu (Refer to Page 5 of this User Manual for instructions on how to access the settings menu).

An input/output test allows the user to check that each button and joystick is working as it should.



Open the keyboard up by unlocking the two latches. Access the latches via the rear door. Reconnect any loose wiring.

Ensure that the arcade machine is switched off and disconnected.

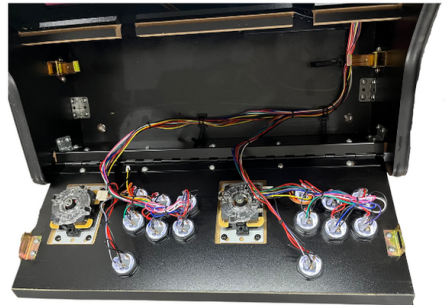

Rearranging button layout

 
Select *Key settings* > *Redefine key* on the Settings menu (Refer to Page 5 of this User Manual for instructions on how to access the settings menu).

Follow on-screen instructions.



Empty games list

If no games show up on the main games list menu, follow the below instructions to instantly restore the games list.

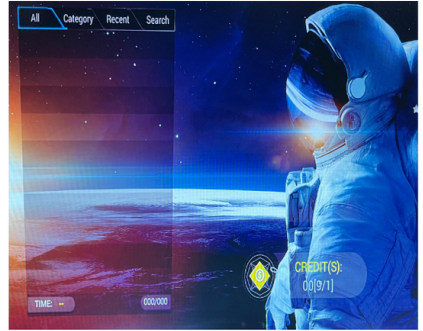

Ensure that the arcade machine is switched off and disconnected. Locate the SD card, click it out and then back in. Switch the console back on. The games should reappear instantly.

