Scan Dictionary Pen X5 PRO


User Manual



WhatsApp ID:8618820461144 Consumer Service:support@vomor.cn

Introduction Description

VORMOR Scanner is an AI product that integrates image stitching, OCR, text translation, voice and other technologies. Effectively solve language barriers in scenarios such as overseas travel, foreign language learning, and business communication.

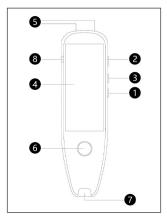

 Power button
 Voice red button/volume +
 Voice blue button/volume Touch screen (5): Microphone
A/B and webcam
(6): Return button/
Al button
(7): Scan head
(8): Type-C

Power button:

 Power on/off: Press and hold the power button for more than 3 seconds, and you can choose to power on/off or restart.
 Standby: Short press the power button to wake up or standby. Volume button (shared Voice button): Short press the Voice blue/red button to adjust the volume.

Return button (shared Al button): Short press the device "Round button" or tap the return icon "<" to return.

Touch screen: Touch screen to select the function. In the function interface, press and hold the left side of the screen and slide right to make selection; press and hold the right side of the screen and slide left to return. Voice blue/red key:This is the voice input key for the voice translation feature, and it corresponds to the screen's blue/red language. Long-press the key to begin speaking, then release it to see the translation result and broadcast.

First of all, thanks for using vormor products!

Preparation before use:

1. Device Charging: Before using this device, please ensure that it has enough power. If the device cannot be turned on or the power is insufficient, please use the special charging cable provided to charge the device first, preferably for one hour or until the power is sufficient before turning it on.

When charging the device when it is off, the screen will display the charging logo and battery percentage in about 8-10 seconds. When the device is turned on, the battery is marked with "lightning" in the upper right corner of the screen. 2. Network connection: After turning on the device, go to the Settings--WIFI interface to connect to the network.

This product works better in the networked state, it can be connected to WIFI or mobile phone hotspot.

3. Interface language: Settings—Interface Language, select the language you need for the operation interface.

 
4. Scan operation

 A kind reminder, during the scanning operation, the equipment should be inclined 45-80 degrees with the plane, and the front sight should be aligned with the centerline of the text;

(2) Press the pen tip and when the light starts to turn on, drag the pen tip to the right to scan at a constant speed. During the scanning process, keep the pen tip light always on;

(3) Aim the crosshair at the blank space in front of the first letter and start scanning. After the crosshair has passed the last letter, raise the nib;

(4) View the results and click the screen to perform corresponding operations;



5. Offline use: This product supports offline use, and the electronic dictionary, offline scanning, and translation functions can be used normally without connecting to the Internet; however, it is recommended that you connect to the Internet first, as the effect will be better. The top of the device screen displays some status information about the device, such as WIFI, power, and charging status.

Main function introduction: (In the main interface, if you directly press the pen to scan, the electronic dictionary function will be automatically used by default)

7.Main functions

7.1-Scan Translation

Support 56 kinds of languages multilanguage scan translation.

(1) Before scanning, you can select the language that needs to be scanned and translated



(2)After scanning, the screen will automatically display the results.



7.2-Phonetic Translation


Support online scanning and reading up to 112 languages (with software upgrades, the supported languages will increase).

(1) After setting the language, long press the voice blue/red button on the device's side, then release it after speaking the corresponding language; the screen will automatically display and broadcast the result.



7.3-Photo Translation

(1)Before taking a photo, you can choose the text language of the picture, at the same time, choose the language you need to translate.

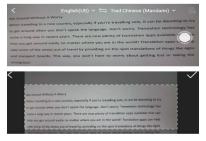

(2)After the photo translation is completed, the translation result will be displayed on the screen



7.4-Text Excerpt

Support multi-language text excerpts, import them to the computer through the USB cable and view and edit them on the computer. (1)First select the language you need. Click the "plus" sign, then start to scan.



(2)After saving, you can choose to upload to you PC. Click here "upload sign", and connect the translator with you computer through USB cable, you can find the saving text on "Excerpt File"

< When trave		\$
upload to yo		•
1		逾
商 → VORMOR-X5-pro → Internal	shared storage →	
Alarms	Android	DCIM
Download	excerpt	Movie
mtklog	Music	Notific

7.5-Recording

Click "red" button start to record, and click here to save.





7.6-Scan Translation

Currently only supports Chinese-English and English-Chinese dictionaries, Chinese, idioms, and Tang poetry

(1)Setting the language first, then vertically scan the text you need to translate, and you can saving your favorite words.



7.7-Favorites

View favorite words.



7.8-MP3

Audio files in MP3 format are supported, downloaded from the computer to the "Music" folder in the device memory, and played on the device.

Setting

1. WIFI: Please connect to wifi first, and the effect will be better.

2. Volume: adjust the volume.

3. Brightness: adjust the screen brightness. 4. Bluetooth: Connect audio devices such as Bluetooth headsets and Bluetooth speakers. Bluetooth headsets and Bluetooth speakers. Language: The operation interface supports simplified Chinese, traditional Chinese, English, Japanese, etc., which will increase with the software upgrade.
 Holding pen direction: suitable for left-hand or right-hand pen holding habit.
 Upgrade: check whether there is a newer software version and update it.
 About: check the current device model,

SN number, software version and other information.

Precautions

 When upgrading, do not perform any operations during the program download and automatic program installation and restart.

 Please connect to network first, the effect is better; the quality of the network will affect the use of the equipment, try to keep the network unblocked.

3. When scanning, keep the device inclined at 75-90 degrees, aim the front sight at the center of the text, and drag at a constant speed; if the recognition is inaccurate, you can try again.

4. Point the front sight to the blank space before the first letter and start scanning. After the front sight has passed the last letter, lift the pen.

5. During voice translation, the best effect is when the distance between the mouth and the MIC of the device is within 30cm.

6. Please speak coherently at a normal speed, and do not pause multiple times during the speech. The above situations may easily cause inaccurate translation.

 Please make your pronunciation as standard as possible, and don't use mantras or slang.

 8. The recognition result can be verified by displaying text on the screen, and if there is an error, it can be manually input and edited.
 9. If the words you say are recognized correctly, but the translation is not accurate, please change the way of expression.

Exception handling

 Forced shutdown: When the device cannot be shut down normally or crashes, long press the power button for more than 10 seconds to force shutdown and restart automatically.
 Restore factory settings: Through "Setting-Reset", all usage records and local cache data can be cleared.

Name	VORMOR Scanner	N.W	94g
Size	155*43*14mm	Capacity	1500mAh
DC	5V/1A	Stand-by	7days
Charge interface	Type-C	Screen size	3.5"
Network	WIFI	Material	ABS

Caveat

 Do not use this equipment in gas stations, fuel depots and other places where the use of electronic equipment is prohibited, otherwise it may cause an explosion or fire.
 Please do not use unapproved or incompatible power supplies, chargers, which may cause fire, explosion or other hazards.

 When charging is complete or not charging, disconnect the charger from the device and unplug the charger from the power socket.

⁴. It is strictly forbidden to place the device in an environment with excessively high or low temperature to avoid fire, explosion or product failure; it is strictly forbidden to put the device near heat sources such as ovens, electric heaters, etc., and do not put into fire; lithium batteries shall not be exposed to such as sunlight, Fire roasting or similar overheated environment.

5. It is strictly forbidden to allow children or pets to swallow the device or its accessories to avoid injury.

Disclaimer

 Please read the product manual carefully before use, and operate with the manual.
 This product is not responsible for the translation results.

Text Reading

Support for English Text Reading

1.Before scanning, you can choose to read sentences or words.




 Enter the settings icon in the upper right corner - Add mode to make corresponding settings.



3.When selecting a sentence to read, click on the first word after scanning, and the scanning reading pen will play it in sequence.



4.When selecting a word to read, click on one of the words and scan the reading pen to play. Click on the second icon on the right to view the word explanation and analysis. Click on the third icon on the right to collect.

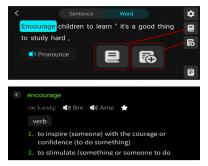

5.Click on the fourth icon on the right to view the included words. Click on the trash can icon to delete it.



Collins Dictionary

1.Starting from a 60~90 degree angle with the paper, you can scan Collins Dictionary to save your favorite words



Warranty regulations

1. The free warranty period of this product is 12 months.

 During the warranty period, the faults caused by normal use in accordance with the manual (determined by our after-sales personnel or our authorized service personnel) will be repaired free. 3. During the warranty period, the following conditions are not covered by the free warranty:

(1) Cannot provide warranty certificate and valid purchase certificate.

(2) Unauthorized maintenance, misuse, collision, negligence, abuse, accident, incorrect use of this product, etc.

(3) Because of prolonged exposure to strong light, fire or similar overheating environment.

(4) Machine damage or performance failure caused by human factors such as water ingress.

(5) Loss caused by the use of unqualified power supplies and adapters above 5V/2A.

4. The company is not responsible for any special, accidental or indirect loss and damage.

Warranty certificate

Seller's name: Where to buy: Customer Name: Phone number: Address: Product SN:

Date	Failure phenomenon	Maintenance records	Dealer