








⚠ WARNING

To avoid injury during assembly, disassembly, use, adjustment and/or movement of the PRIMED 12x6 Soccer Instant Net, the following warnings **MUST** be observed at all times:


- Keep fingers away from hinges and joints.
- Goal to be used with soccer balls only.
- Do not climb or swing on any part of net / goal.
- Adult supervision is required.
- Goal must be staked into ground or held down with weights (ie sand bags).

Parts List

| # | DESCRIPTION | PHOTO | NUMBER OF PARTS |
|----|--|---|---|
| 1. | CARRY BAG. MAIN FRAME WITH NET ATTACHED. |  | BAG x1 MAIN FRAME x1 NET x1 |
| 2. | Pole A |  | x4 |
| 3. | Pole B |  | x4 |
| 4. | Bungee Cord |  | x2 |
| 5. | Stake |  | x2 |

ASSEMBLY INSTRUCTIONS

1. PLACE DOUBLE HINGE ON GROUND WITH NET SPREAD AWAY FROM YOU. PULL ONE SIDE OF FRAME UP UNTIL IT LOCKS (FIG. A). REPEAT FOR OTHER SIDE. OPEN THE FRAME UNTIL IT LOCKS INTO PLACE (FIG. B).

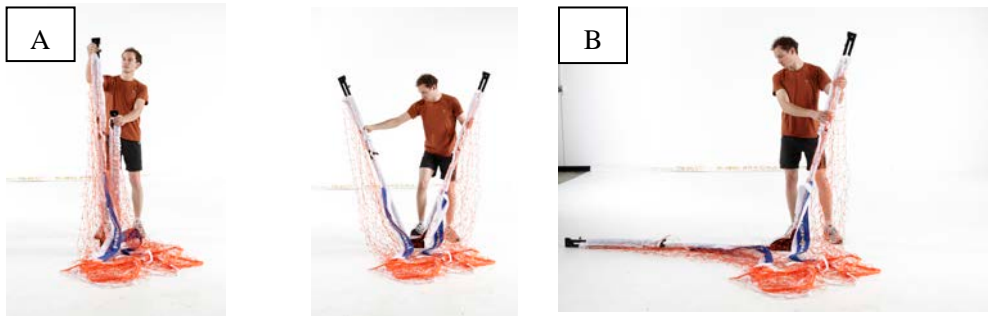

2. OPEN OUTER HINGES OF FRAME UNTIL THEY LOCK INTO PLACE



3. THREAD STAKE BUNGEE CORD OVER FRONT ANGLED TUBES AS SHOWN.



- 4. JOIN POLES (FIG. C). INSERT UPPER POLE "B" (2) INTO LOWER POLE "A" (2), THEN INTO THE REAR ANGLED FRAME.



- 5. THREAD TWO REMAINING POLES THROUGH SLEEVES AND INSERT INTO FRONT ANGLED TUBES.



- 6. PLACE WHITE ROPE OVER POLE TOP (FIG. D). START WITH THE FRONT POLES (FIG. E) FOLLOWED BY THE REAR POLES (FIG. F).



7. PULL BLACK WEBBING LOOP OVER LIP OF FRAME UNTIL THE LOOP RESTS IN FRONT OF RUBBER FOOT (FIG. G). REPEAT FOR BOTH SIDES.



8. STAKE GOAL TO GROUND (OUTSIDE OF GOAL MOUTH) USING BUNGEE STAKE LOOPS.





Limited Warranty

Limited Warranty

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the Company.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS LIMITED WARRANTY, DICK'S SPORTING GOODS, INC. MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCT.

Material Covered

Except as detailed below, this Limited Warranty covers defects in materials and workmanship. This Limited Warranty is void if the Product is:

- ° Damaged through improper use, negligence, abuse, misuse, transportation, damage, acts of nature, or accident, to include failure to follow the assembly and or operating instructions supplied with the product.
- ° Used in commercial or rental applications.
- ° Modified or repaired by anyone not authorized by the Company.

Material Not Covered

This Limited Warranty does not cover expendable items including but not limited to: Batteries, light bulbs, fuses, accessories, and other items that experience wear as a result of normal use.

Terms of Coverage

If during the one year LIMITED WARRANTY period, the Company deems any part or component of the Product to be defective, the Company will repair the Product without charge, or at the option of the Company, will replace the Product with new product, either the same or an equivalent item.

The Company's liability is limited to the repair or replacement, at its option of any defective product.

THE COMPANY ASSUMES NO RESPONSIBILITY NOR LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND.

THIS LIMITED WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS OTHERWISE PROVIDED BY APPLICABLE LAW.

Please direct all Product inquiries to:

Dick's Sporting Goods, Inc.
345 Court Street
Coraopolis, PA 15108
Customer Service
1 866 677 4771
customer.service@dcs.com