



Overview

1. POWER ON/OFF Multi Function Button (**MFB**)
2. ANC ON/OFF
3. Volume up/Skip track forward
4. Volume down/Skip track back
5. Micro-USB charge port
6. Battery charging indicator LED
7. AUX port

Button Functions

Play/Pause music: Press **MFB**

Power ON: Press & hold **MFB** for 1 seconds

Power OFF: Press & hold **MFB** for 3 seconds

Bluetooth pairing: Press & hold **MFB** for 3 seconds when OFF

Answer/End call: Press **MFB**

Reject call: Press & hold **MFB** for 2 seconds

Volume up: Press + button

Volume down: Press - button

Skip track forward: Press and hold + button

Skip track back: Press and hold - button

ANC ON/OFF: Slide ANC button

Reset: Press and hold - & + buttons for 5 seconds

Navigator

Wireless Volume Limited ANC Headphones

Contents

- 1 x Moki Navigator Wireless Volume Limited ANC Headphones
- 1 x Micro-USB to USB-A Charge Cable
- 3.5mm to 3.5mm Audio Cable
- Two-Pin Airline adaptor

Charging

- Please charge headphones before first use.
- Connect the included charge cable to a USB port on a PC or USB charge adaptor (USB-A connector).
- Confirm orientation and connect the Micro-USB connector to the port on your headphones.
- The LED on the headphones will glow solid red indicating the headphones are charging.
- Depending on the power of the charge port used, the charge time will be approximately 2-4 hours.
- When the headphones are fully charged, the LED will turn off.
- Disconnect the charge cable.

Note: *The headphones will not work if the charge cable is still connected.*

Pairing

You must pair the headphones with a Bluetooth enabled device before they will function wirelessly. You only need to pair your headphones to each play device once.

The headphones will automatically reconnect to each device when in wireless range. If two or more devices are available, the last device paired will be the reconnected device.

When using a Bluetooth enabled audio device, make sure the distance is within 10 meters. Certain environments may affect the working distance.

1. Turn on Bluetooth mode on your play device.
2. Press and hold the **MFB** button for approximately 5 seconds until the LED starts blinking red/blue.
3. Your headphones are now ready to be paired with your play device.
4. Search for "Moki Navigator" from the list of available devices in Bluetooth settings on your play device.
5. Select "Moki Navigator" to pair the headphones with your play device.
6. When pairing is successful, the LED on your headphones will glow solid blue.
7. Adjust the volume on your play device to the desired level.

Note: *If headphones do not pair with a new device within 90 seconds they will enter "Standby mode".*

Wired Mode

These headphones are supplied with a 3.5mm audio cable. This enables the headphones to be used when not using Bluetooth mode, or when the battery has been depleted. To enable wired mode, follow these steps:

1. Make sure the headphones are powered off.
2. Connect one end of the supplied 3.5mm audio cable to the aux port on the headphones.
3. Connect the other end of the 3.5mm cable to the 3.5mm audio output port on your audio source device.
4. On your audio source device, navigate to the audio settings and ensure that the output is set to the 3.5mm audio output.
5. Use the volume controls on your audio source device to adjust volume.

Airplane Use (with adaptor)

Connect the included 3.5mm audio cable to the 3.5mm headphone jack on the headphones - refer to headphone diagram for location.

Connect the other end of the audio cable to the included airline adaptor. You can now connect the two-pin airline adaptor to the two-pin airplane port.

Active Noise Cancellation (ANC)

Active Noise Cancellation (ANC) is a feature designed to elevate your audio experience. ANC actively identifies and neutralizes external ambient sounds, allowing you to immerse yourself in your favourite music, podcast or movie without interference from background noise.

Whether in a bustling city or a noisy airplane, ANC enhances audio clarity while providing a tranquil listening environment to suit your needs.

Specifications

Speaker dimension: 40 mm

Impedance (speaker): 32 ohm +/-15% At 1KHZ

Frequency: 20Hz-20KHz

Sensitivity: 89dB+/-3dB at 1KHz

Rechargeable Battery: 350mAH, Lithium polymer battery

Playing Time: around 27 Hrs @ 70% volume

Charging time: ~2 hours

Working distance: 10 meters

Care & Disposal

To prevent the possibility of the battery from leaking, heating or catching fire, please follow these precautions:

Warnings

- Please use supplied audio cable to charge headphones.
- Please disconnect audio cable after headphones are fully charged.
- Do not continue to charge headphones after they are fully charged.
- Do not use or leave the headphones near a heat source such as a fire or a heater.
- Do not place headphones in any liquid, fire or on a heater.
- Do not hit or throw the headphones.

Cautions

- Do not use or leave headphones in very high temperatures (ie. in direct sunlight or in a vehicle in extremely hot conditions).
- Do not use headphones where there is a lot of static electricity, otherwise the safety devices within the headphones can be damaged.
- The headphones should be stored at room temperature.
- The headphone's battery should be charged and discharged every so often in order to activate and restore the battery's energy.
- Please follow battery waste recycling guidelines when disposing

E-waste

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste.

Please dispose of product thoughtfully.



visit [moki.au](https://www.moki.au)

