




**MokiBuds**  
TWS Earphones

**PRODUCT OVERVIEW**

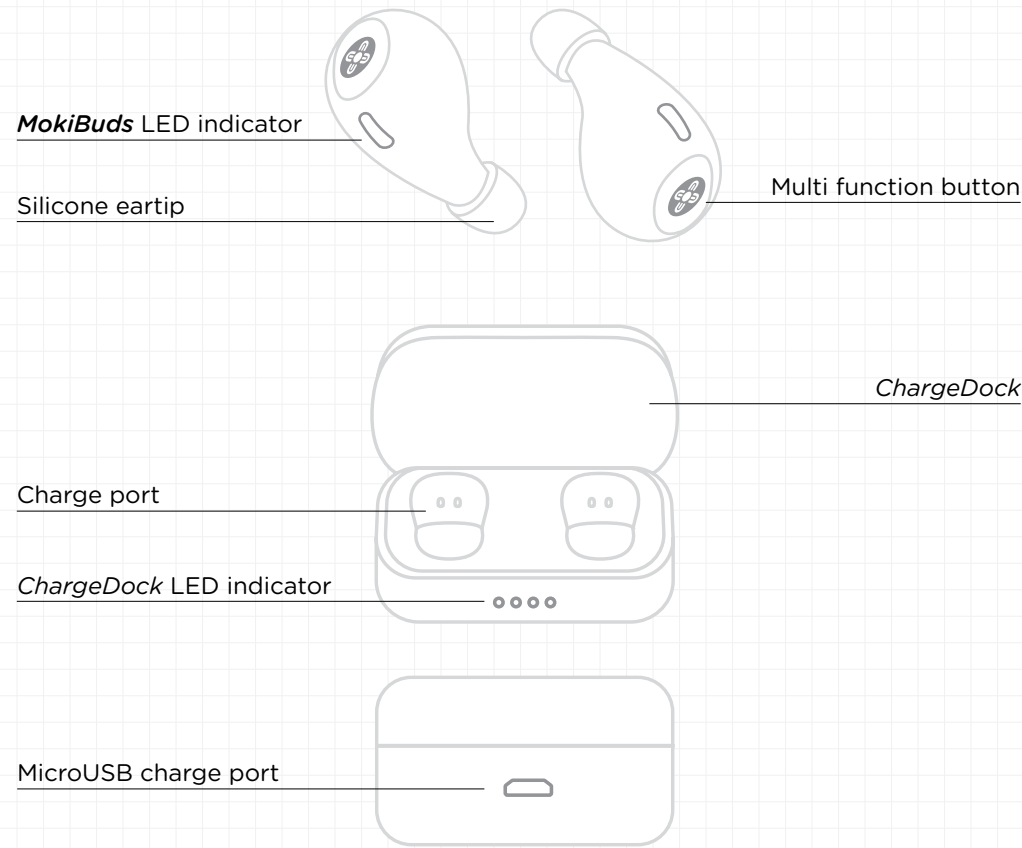

**FUNCTION**



- Double Tap**
- Play/Pause
  - Answer call/hang up call

- Long Press**
- Activate voice assistant (via mobile phone)

**LED INDICATOR GUIDE**

LED colour	Action
Flashing blue (both earbuds)	Pairing mode (looking to connect)
Solid blue (both earbuds)	Pairing successful (paired with device)
Solid red (both earbuds)	Charging (when placed in ChargeDock)
Flashing red & blue (both earbuds)	Looking to re-pair (existing paired device)

**WARNING - PLEASE READ FIRST**

Please do not force silicone eartip of *MokiBuds* TWS Earphones into ear canal.

**CHARGING**

Please charge earphones before first use.

Use the *included microUSB to USB charging cable*. Plug the microUSB end into the microUSB port located on the back of the *ChargeDock* (see *Product Overview*).

The red LED indicates the unit is charging. The charge time for the *ChargeDock* battery will be approximately 1.5 hours

When the *ChargeDock* battery is fully charged, the red LED will turn off. Disconnect the charge cable.

**PAIRING YOUR MOKIBUDS**

1. When using a wireless enabled audio device, make sure the distance is within 10 meters. Certain environments may affect the working distance.
2. Turn on wireless mode on your play device.
3. Pick up both of the earphones from the *ChargeDock* at the same time, they will be paired automatically. The LED indicator light will flash red and blue to show the left and right earphones have been paired successfully.
4. Search for new device “MokiBuds” on your phone or play device. No password will be required. If your device requires a password, use “0000”.
5. When pairing is successful the LED on your earphones will glow solid blue.
6. Adjust the volume on your phone or play device to the desired level.

**Note:** If earphones do not pair with a new device within 90 seconds they will enter “Standby mode”.

**TROUBLESHOOTING**

Issue	Possible Solution
No power	<ul style="list-style-type: none"> <li>• Make sure your earphones are completely charged, and the <i>ChargeDock</i> has charge.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• Make sure the volume of your earphones is not at the lowest setting.</li> <li>• Make sure the connected audio device is playing audio.</li> </ul>
Sound is distorted	<ul style="list-style-type: none"> <li>• Turn down the volume of the earphones or the connected device.</li> </ul>
Cannot pair with my play device	<ul style="list-style-type: none"> <li>• Make sure wireless mode on your device is turned on.</li> <li>• Your play device may be out of range. Try moving it closer to the earphones.</li> <li>• Move your wireless device and/or earphones away from other devices that generate electromagnetic interference, such as phones, microwave ovens, wireless network routers, or other wireless devices.</li> </ul>

**BATTERY HEALTH**

To prevent the possibility of the battery from leaking, heating or catching fire, please follow these precautions:

- Warnings**
- Please use supplied USB charging cable to charge the *ChargeDock*.
  - Please disconnect charge cable after earphones are fully charged.
  - Do not continue to charge *ChargeDock* after they are fully charged.
  - Do not use or leave the earphones or *ChargeDock* near a heat source such as a fire or a heater.
  - Do not place the earphones or *ChargeDock* in any liquid, fire or on a heater.
  - Do not hit or throw the earphones or *ChargeDock*.

- Cautions**
- Do not use or leave the earphones or *ChargeDock* in very high temperatures (ie. in direct sunlight or in a vehicle in extremely hot conditions).
  - Do not use the earphones or *ChargeDock* where there is a lot of static electricity, otherwise the safety devices within the earphones can be damaged.
  - The earphones and *ChargeDock* should be stored at room temperature.
  - The *ChargeDock*'s battery should be charged and discharged every so often in order to activate and restore the battery's energy.
  - Please follow battery waste recycling guidelines when disposing of the earphones.

**E-WASTE**

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste. Please dispose of speaker thoughtfully.

SCAN THIS CODE

Visit our website for more information about this, and many other great products.