


Katana

Wireless Headphones

PRODUCT OVERVIEW

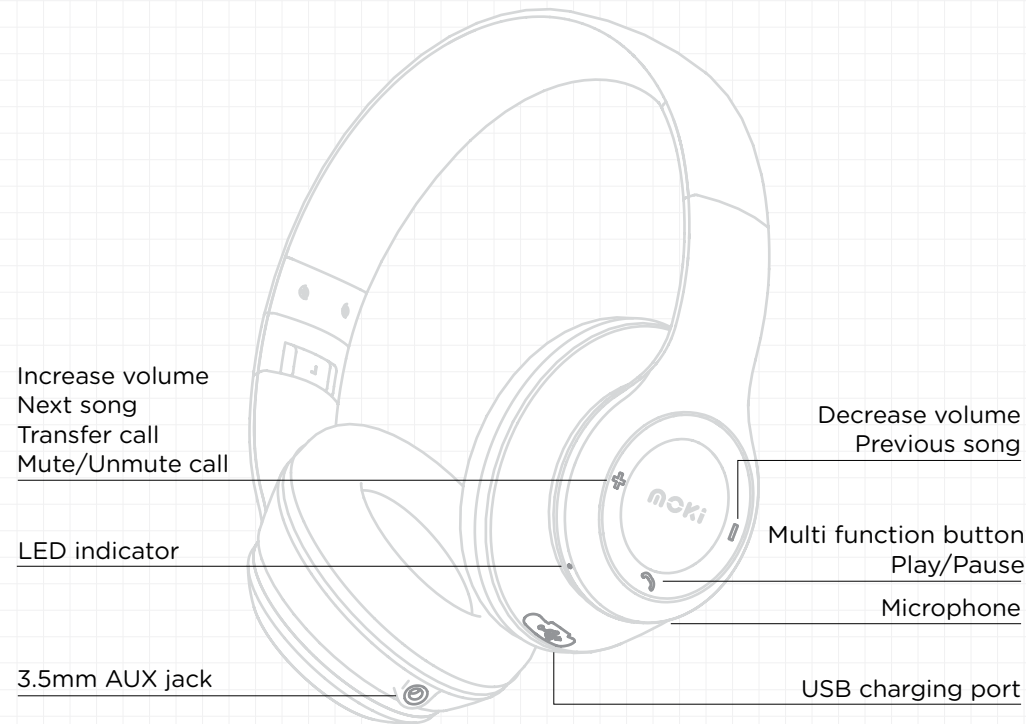

CONTROL PANEL

- Power ON : Press MFB (Multi function button) for 3 sec
Blue LED will flash 3 times and the voice prompt "Power on" will sound
- Power OFF : Press MFB for 3 sec
Red LED will flash twice and the voice prompt "Power off" will sound

CHARGING

The Moki headphones battery comes pre-charged, but we recommend that you fully charge it using the included USB cable before use.

The battery is fully charged in approximately 2-3 hours. The red LED light indicates that the headphones are charging. The red LED light will turn off when the headphones are fully charged. If the battery is lower than 3.3V the headphones will alert the user by a tone every 60 seconds.

Headphones will automatically turn the power off when the battery will reach 3.2V and lower.

Charge the headphones using the included USB cable through a computer USB port or a USB wall charger (output 5V).

Please fully charge the battery before use if the headphones have not been used for a long period of time.

PAIRING YOUR KATANA HEADPHONES

You must pair your Moki Katana Headphones with a wireless play device before they can be used wirelessly.

You only need to pair your headphones to each play device once.

The headphones will automatically reconnect to each device when turned on in wireless range. If two or more devices are available, the last device paired will be the one that reconnects.

1. Turn on wireless mode on your play device.
2. Press and hold the MFB (Multi function button) on the headphones. Immediately release the button when you hear the voice prompt "Power on".
3. The LED indicator will flash blue and red intermittently and you will hear the voice prompt "Pairing".
4. Find "Moki Katana" in the list of available devices in wireless settings on your play device.
5. Select "Moki Katana" on your play device to pair your headphones. No password will be required. If your device requires a password, use "0000".
6. When pairing is successful, the voice prompt "Paired" will sound.

Note: If the headphones do not pair with a play device within 5 minutes, they will enter "Standby mode".

If the headphones do not pair with a play device within 10 minutes, they will automatically turn off.

Moki Katana Wireless Headphones may be paired to a mobile phone, tablet or a laptop with wireless capability. Go to your computer's wireless settings and follow the prompts to connect in a similar way as described above.

After pairing, ensure the "Sound Output" is set to your wireless device (not "Internal Speakers"). Some computers may require wireless audio output to be enabled each time you connect.

AUXILLARY PLAY MODE

- Connect the included 3.5mm AUX cable to the 3.5mm AUX jack on the headphones (see Product Overview).
- Connect the other end to your play device.

Note: When connecting the AUX cable, wireless mode will turn off automatically.

HANDS FREE CALLS

- Press MFB (Multi function button) once to answer or end a call
- Press MFB twice to reject the call
- Press MFB twice to re-dial the last number
- Long press MFB to manually disconnect/reconnect

Note: The last number to re-dial is available for the first connected device if two mobile phones are connected to the headphones.

TROUBLESHOOTING

Issue	Possible Solution
No power	<ul style="list-style-type: none"> • Make sure your headphones are completely charged, and hold the ON button to turn on (see Product Overview).
No sound	<ul style="list-style-type: none"> • Make sure the volume of your headphones is not at the lowest setting. • Make sure the connected play device is playing audio.
Sound is distorted	<ul style="list-style-type: none"> • Turn down the volume of the headphones or the connected device.
Cannot pair with my play device	<ul style="list-style-type: none"> • Make sure wireless mode on your play device is turned on. • Your play device may be out of range. Try moving it closer to the headphones. • Move your play device and/or headphones away from other devices that generate electromagnetic interference, such as phones, microwave ovens, wireless network routers, or other wireless devices.

BATTERY HEALTH

To prevent the possibility of the battery from leaking, heating or catching fire, please follow these precautions:

Warnings

- Please use supplied audio cable to charge headphones.
- Please disconnect audio cable after headphones are fully charged.
- Do not continue to charge headphones after they are fully charged.
- Do not use or leave the headphones near a heat source such as a fire or a heater.
- Do not place headphones in any liquid, fire or on a heater.
- Do not hit or throw the headphones.

Cautions

- Do not use or leave headphones in very high temperatures (ie. in direct sunlight or in a vehicle in extremely hot conditions).
- Do not use headphones where there is a lot of static electricity, otherwise the safety devices within the headphones can be damaged.
- The headphones should be stored at room temperature.
- The headphone's battery should be charged and discharged every so often in order to activate and restore the battery's energy.
- Please follow battery waste recycling guidelines when disposing of the headphones.

E-WASTE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste.

Please dispose of headphones thoughtfully.

SCAN THIS CODE

Visit our website for more information about this, and many other great products.

