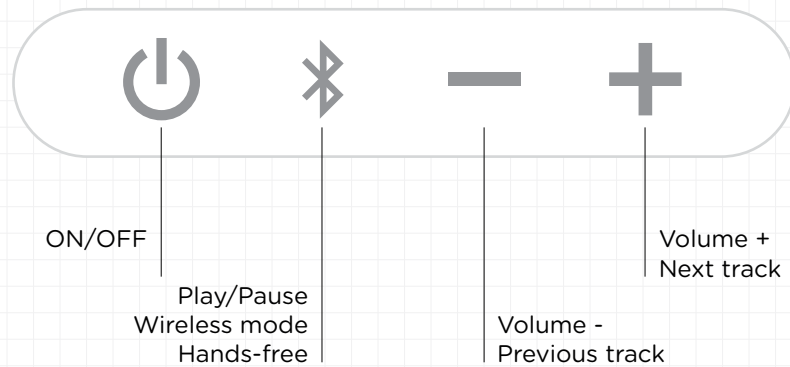


CONTROL PANEL

LED/SPEAKER FUNCTION INDICATOR

Speed	Colour	Action
Rapid flash	Blue & Red	Searching for wireless devices
Solid	Blue	Paired with device
Flash slowly	Red	Battery low
Solid	Red	Charging

BACK OF SPEAKER OVERVIEW

BEFORE FIRST USE

The Moki Mojo TWS-enabled Wireless Speaker must be fully charged before first use. Refer to *Charging*.

Carefully remove Moki Mojo Speaker and included charge cable from packaging.

Pair Moki Mojo with a wireless-enabled device. Refer to *Pairing Your Mojo Speaker*.

The pairing name for the Moki Mojo Speaker is "Moki Mojo".

CHARGING

Use the *included MicroUSB charge cable*. Plug one end into the DC 5V MicroUSB port of the unit, and plug the other end into a USB powered port or any other USB adaptor (not included).

The battery is fully charged in 2-3 hours. Charge time will be longer if speaker is being used during charging.

The red LED light indicates that the unit is charging.

The red LED will turn off when the battery is fully charged. The charge cable can then be disconnected.

TURNING SPEAKER ON/OFF

- Hold the button for approximately 2 seconds to turn on the speaker. The speaker will make a beep sound, and the LED will flash white.
- Hold it again for approximately 2 seconds to turn off the speaker.

PAIRING YOUR MOJO SPEAKER

1. Turn on Moki Mojo Speaker to begin wireless pairing.
2. The LED will flash blue and red, indicating pairing mode.
3. Turn on wireless mode on your phone or play device.
4. Add new wireless device (first time pairing).
5. Find "Moki Mojo" in the list of available devices in wireless settings on your play device.
6. LED will turn solid blue when pairing is successful.
7. Paired devices will remember each other - if you need to pair speaker to another device, make sure previous device is disabled.

VOLUME/TRACK BUTTONS

1. Control volume from your phone or play device.
2. Short press buttons to increase/decrease the volume.
3. Long press buttons to go to the Next or Previous track.

HANDS FREE CALLS

1. Press button once to answer an incoming call.
2. Press button once to hang up.

TWS CONNECTION

Two speakers can be synced and connected via TWS (True Wireless Stereo) Technology.

1. Make sure you have 2 x Moki Mojo Speakers.
2. Quickly double click the buttons on both speakers; the speakers will go into pairing mode to pair with each other first.
3. Wait for approximately 5-10 seconds until the two speakers "beep" once in sequence. This means both speakers have been paired.
4. The LED on the main speaker will be ON (blue), the LED on the second speaker will be OFF.
5. Connect the main speaker to your phone or play device.

Note: Once the speakers have been paired via TWS, they will pair again each time they are turned on. If you want to unpair them, press the button on either speaker twice. The speakers will "beep" indicating they are no longer paired.

AUXILLARY PLAY MODE

1. Connect your 3.5 auxillary cable (not included) to the speaker.
2. Connect the other end to your audio device.

TROUBLESHOOTING

Issue	Possible Solution
No power	<ul style="list-style-type: none"> • Make sure your speaker is turned on and make sure your speaker is completely charged.
No sound	<ul style="list-style-type: none"> • Make sure the volume of your speaker is not at the lowest setting. • Make sure the connected audio device is playing audio.
Cannot pair with my play device	<ul style="list-style-type: none"> • Make sure wireless mode on your device is turned on. • Your wireless device may be out of range. Try moving it closer to the speaker. • Move your wireless device and/or speaker away from other devices that generate electromagnetic interference, such as phones, microwave ovens, wireless network routers, or other wireless devices.

BATTERY HEALTH

To prevent the possibility of the battery from leaking, heating or catching fire, please follow these precautions:

Warnings

- Please use supplied USB charging cable to charge speaker.
- Please disconnect charge cable after speaker is fully charged.
- Do not continue to charge speaker after it is fully charged.
- Do not use or leave the speaker near a heat source such as a fire or a heater.
- Do not place speaker in any liquid, fire or on a heater.
- Do not hit or throw the speaker.

Cautions

- Do not use or leave speaker in very high temperatures (ie. in direct sunlight or in a vehicle in extremely hot conditions)
- Do not use speaker where there is a lot of static electricity, otherwise the safety devices within the speaker can be damaged.
- The speaker should be stored at room temperature.
- The speaker battery should be charged and discharged every so often in order to activate and restore the battery's energy.
- Please follow battery waste recycling guidelines when disposing of the speaker.

E-WASTE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste. Please dispose of speaker thoughtfully.

SCAN THIS CODE

Visit our website for more information about this, and many other great products.

