


HEADPHONES OVERVIEW

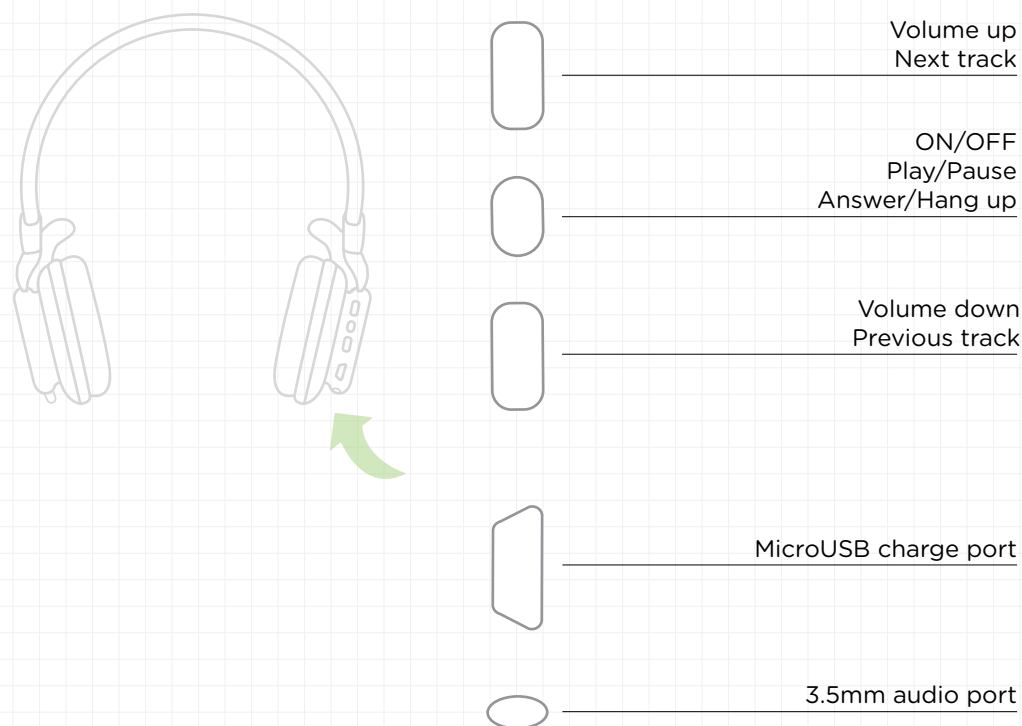

LED INDICATOR

Speed	Colour	Action
Solid	Red	Charging
Solid	Blue	Fully charged
Flashing	Blue/Red	Wireless pairing mode

CHARGING

Using the *included MicroUSB to USB charging cable*, plug the MicroUSB end into the MicroUSB charge port located on the left earcup, towards the bottom (see *Headphones Overview*).

The battery is fully charged in roughly two hours.

The red LED light indicates that the unit is charging. The red LED light will turn blue when the battery is fully charged. The charge cable can then be disconnected.

PLAY MODE

Auxiliary Play Mode

1. Connect one end of the *included 3.5mm audio cable* to the 3.5mm audio port at the back of the speaker (see *Headphones Overview*)
2. Connect the other end of the audio cable to the audio source.
3. Wireless mode and the in-built microphone will not work while using auxiliary mode.

Wireless Play Mode

1. When using a wireless enabled audio device, make sure the distance to the headphones is within 10m. Certain environments may affect the working distance.
2. Press and hold the ON button to turn on the headphones. The unit will give a beeping sound to indicate it is in wireless pairing mode. The LED will rapidly blink blue and red.
3. Turn on wireless mode on your audio device.
4. Search for new device "Moki Pro Kumo". No password will be required. If your device requires password, use "0000".
5. Adjust the volume on your audio device to the desired level.

TROUBLESHOOTING

Issue	Possible Solution
No power	<ul style="list-style-type: none"> • Make sure your headphones are completely charged, and hold the ON button to turn on (see <i>Headphones Overview</i>).
No sound	<ul style="list-style-type: none"> • Make sure the volume of your headphones is not at the lowest setting. • Make sure the connected audio device is playing audio.
Sound is distorted	<ul style="list-style-type: none"> • Turn down the volume of the headphones or the connected device.
Cannot pair with my play device	<ul style="list-style-type: none"> • Make sure wireless mode on your play device is turned on. • Your play device may be out of range. Try moving it closer to the headphones. • Move your play device and/or headphones away from other devices that generate electromagnetic interference, such as phones, microwave ovens, wireless network routers, or other wireless devices.

BATTERY HEALTH

To prevent the possibility of the battery from leaking, heating or catching fire, please follow these precautions:

Warnings

- Please use supplied audio cable to charge headphones.
- Please disconnect audio cable after headphones are fully charged.
- Do not continue to charge headphones after they are fully charged.
- Do not use or leave the headphones near a heat source such as a fire or a heater.
- Do not place headphones in any liquid, fire or on a heater.
- Do not hit or throw the headphones.

Cautions

- Do not use or leave headphones in very high temperatures (ie. in direct sunlight or in a vehicle in extremely hot conditions).
- Do not use headphones where there is a lot of static electricity, otherwise the safety devices within the headphones can be damaged.
- The headphones should be stored at room temperature.
- The headphone's battery should be charged and discharged every so often in order to activate and restore the battery's energy.
- Please follow battery waste recycling guidelines when disposing of the headphones.

E-WASTE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste.

Please dispose of headphones thoughtfully.

SCAN THIS CODE

Visit our website for more information about this, and many other great products.