
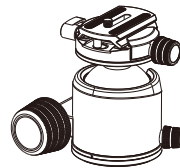


GX/G SERIES
LOW-PROFILE BALL HEAD
OPERATING INSTRUCTIONS

Thank you for making BENRO your choice for professional photographic equipment. Your BENRO gear is manufactured to provide years of dependable service. In order to obtain optimum satisfaction and performance, we suggest that you carefully read these instructions.











ベンロプロフェッショナル撮影機材をご購入いただき、誠にありがとうございます。ベンロ製品ユーザーの皆様には信頼性の高いアフターサービスを提供することをお約束いたします。ベンロ製品をより快適にご利用いただくために、次の取扱説明書を必ずよくお読みください。

部品名 Name of components

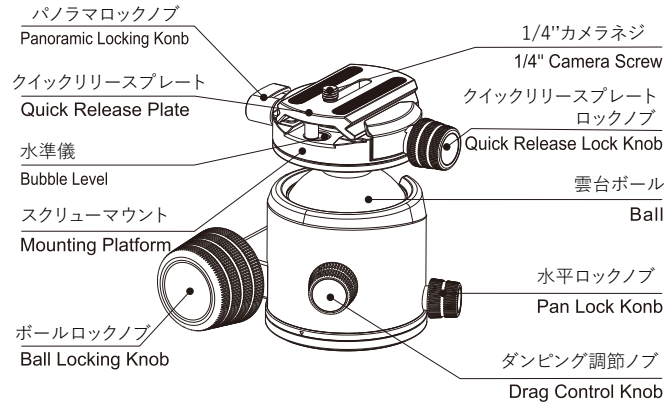

注：
型番G30、G36、G40、GX25、GX30、GX35
にはダンピング調節ノブが実装されていません。

Note:
G30、G36、G40、GX25、GX30、GX35
Do not have a Drag Control Knob. The
Ball Locking Knob can aid in providing
drag on those models.

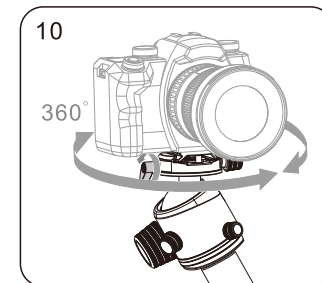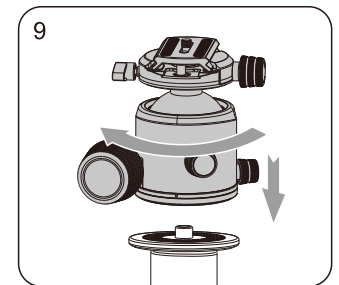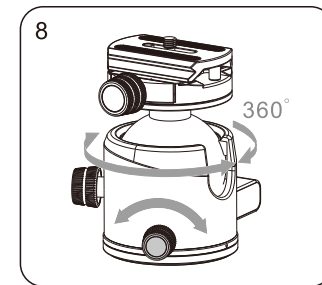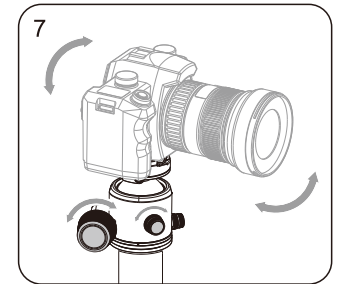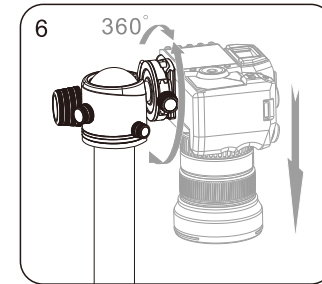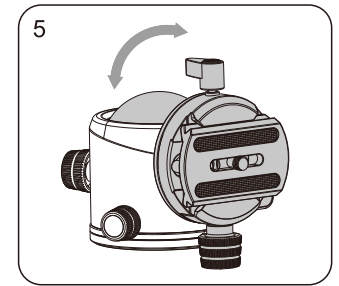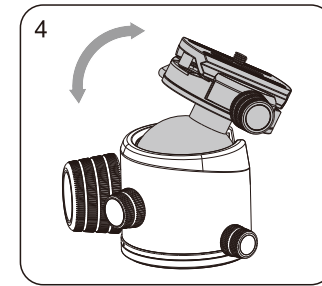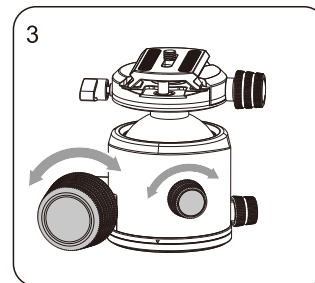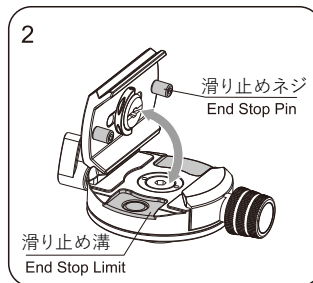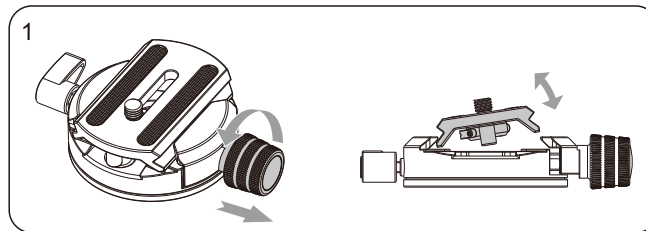

OPERATING INSTRUCTIONS

Quick Release Knob with Pull and Twist Safety (Figure 1,2)

- Based on the Benro quick release system, we have incorporated a safety system to prevent any accidental equipment releases.
- Loosen the quick release knob in a counterclockwise direction until it stops. Pull out the lock knob slightly and continue to loosen the knob in the same direction, this will allow you to dismount the camera plate.
- The quick release plate has 2 end stop pins that allow you to position your camera before final lock down without the fear of any unexpected dismounts. The plate is captive until you pull and twist the quick release lock knob.