 


F I I I®

THE ART OF AUDIO

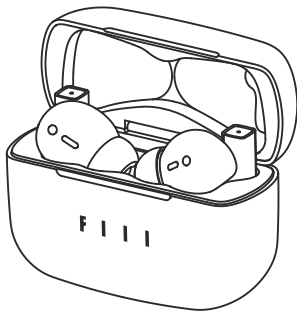

F I I I CC Pro
ANC TRUE WIRELESS EARBUDS

USER MANUAL

Important Safety Instructions

Please read the following safety instructions carefully before using this product. Please make sure to include these safety instructions with the product when delivered to a third party.

Health and safety

- Do not use the product in case it is apparently damaged;
- Do not use the product at a high volume level for an extended period of time;
- Do not use the product while driving or being engaged in activities that require full concentration;
- Keep the product, its packaging and accessories out of the reach of children and pets to avoid choking hazard;
- Keep the product away from medical devices that may be affected by magnetic field, such as an implanted cardiac pacemaker.

Product care

- Keep this product dry and at room temperature, avoid long time exposure to high temperature or humidity environments;
- Use accessories only provided by FIIL;
- Excessive signal level may cause damaging overload;
- Clean the product only with dry and soft cloth.

Battery warning!

The product uses lithium polymer battery. Improper usage may lead to the risk of fire or burn. Please use the charger only supplied by qualified manufacturer (recommended output: voltage 5V, current ~500mA) or charge the product via PC USB port.

Specification and disclaimer

- The product is designed for portable devices and high-fidelity systems;
- Any usage other than those specified in the user manual is deemed as misuse;
- Please note that FIIL will accept no responsibility for any loss incurred by misuse.
- FIIL CC Pro is designed & made by Jiangxi Feier Technology Co., Ltd.

Scan QR code to download and use fiil + APP

- This product supports fiil+ APP to config earbuds settings.



Scan to download fiil+

 


Scan to visit iOS APP store

By using fiil+ APP, you can register products and configure eadbud settings.

- For Customer Service, please send email to: fiilsupport@fiil.com
- “FIIL” is a registered trademark® of Jiangxi Feier Technology Co., Ltd.


Packaging Content

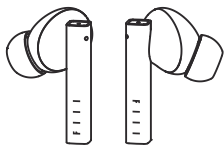

Earbuds X2
(L/R)



 Charging Case X1

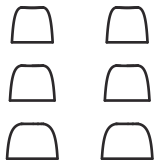


Eartips X3
L/M/S



Type-C Charging
Cable X1

Main User Interfaces

 
● Earbud

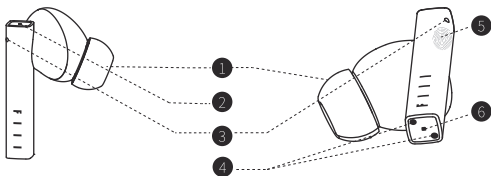


- 1 Ear tip
- 2 LED indicator
- 3 ENC microphone

- 4 Charge pins
- 5 Touch control
- 6 Call microphone

 ● Charging Case

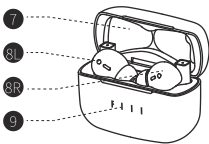

 - 7 Charging case
- 8L Left earbud
- 8R Right earbud

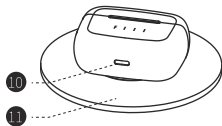


- 9 Charge indicator
- 10 Type-C connector
- 11 Wireless charge (not include)


Wear and Usage

● Get Started

 Please follow below steps to activate and start to use.






USB-C Cable

 

Remove all protection films on earbuds and charging case prior to use. It is recommended to charge the earbuds for at least 10 minutes with USB-C cable or wireless charger (not included).

   ● How To Wear

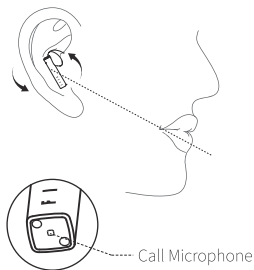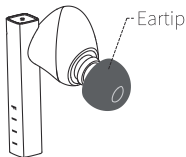

Slightly rotate earbuds after put in ears to make it stable, and pay attention to the microphone position towards the mouth for the best call performance.

Bluetooth Pairing

 
● Bluetooth Pairing

For first usage of brand new FIIL CC Pro please refer to page 5 “Get Started”, the earbud status indicator will continue to blink blue once entered pairing mode.

For a paired FIIL CC Pro, please delete its pairing history in the device list or when the earbuds are turned off, press and hold any one of earbuds until the LED indicator blinks blue.

● Search Connection


Enter setup menu of audio source devices, select “search device” in “Bluetooth” then select “FIIL CC Pro” in the device list to connect.

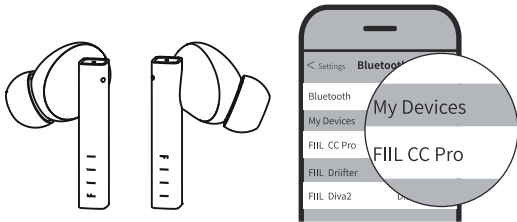

Touch Control


● Power On

 Take earbuds out of charging case, they will automatically power on and reconnect cell phone, or you can press and hold earbuds for 2 seconds to force power on, you will hear opening music and notice blue LED light on.

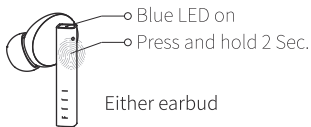


● Power Off

 Put earbuds into charging case, they will automatically power off, or you can press and hold earbuds until white LED on.

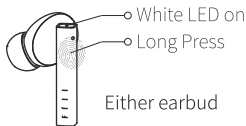

● Answer/End Call

 
When incoming call, tap any earbuds to answer call.

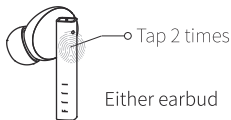

Touch Control


●Reject Call

 When incoming call, please press and hold 2 seconds to reject a call.

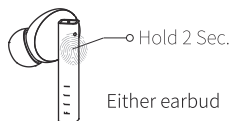

●Play /Pause

 
Tap 2 times to play or pause music.

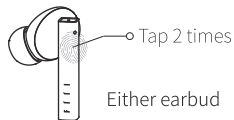

●Voice Assistant

Tap 4 times to activate voice assistant, like Siri etc.

 
Note: please enable this function via fil+ APP.

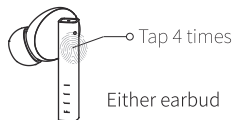

Touch Control

●Volume Up/Volume Down

 
Tap left earbud to Vol+, tap 3 times to Vol-.

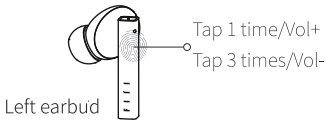

Note: enable full control mode in fiil+ APP.

●Next /Prev. Track

 Tap Right earbud to play next, tap 3 times to play Pre. track.

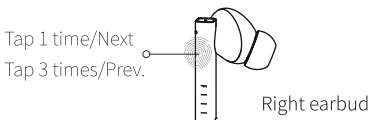

Note: enable full control mode in fiil+ APP.

●Wearing Detection

 
Take off earbuds to pause and wear to resume music.



Touch Control

● Switch Device

Press 4 seconds until heard beep sound then release, earbud will disconnect current device and switch connection to previous device.

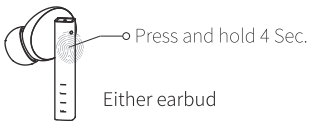

Note:

 
1. Earbuds should have been connected with 2 or more devices.
2. If switch failed earbud will resume connection.

● Reset Earbud

Please contact after service to reset earbud.
For Customer Service, please send email to: fiilsupport@fiil.com

● Charging Case Indicator

When earbuds or charging case is charging, LED lights will be on. After fully charged, LED light will be off.




Note: Charging with Type-C and wireless chargers at same time is **NOT allowed**

Touch Control


●MAF™ Noise Tuning

 Press and hold for 2 seconds to switch between “Noise Cancelling Mode” and “Open Mode”. By using fiil+ APP, you can enable another set of “Wind Cancelling Mode” and “Monitor Mode” for more scenes.

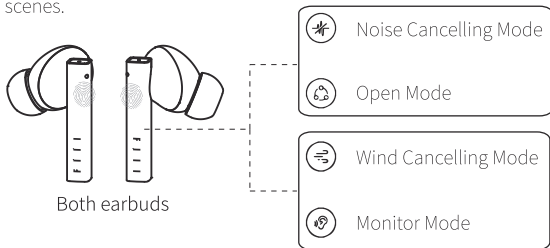

●MAF™ Mode Switching

 You can directly set any MAF™ Mode for earbuds in fiil+ APP.

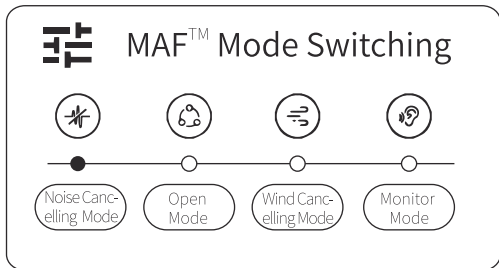

Production Parameters

Item	Specification
Earbud Weight	~5.2g/each
Charging Case Weight	~ 35.7g
User Mode	Bluetooth True Wireless
Bluetooth	V5.2, Support protocols:HSP、HFP、A2DP、AVRCP BT range:10m. Pairing code: 0000. Both iOS and Android devices are supported.
Audio Specification	Support Code:AAC,SBC; Speaker Specification :Diameter 10mm Frequency range: 20Hz-20KHz
Power and Battery	Rechargeable lithium-polymer battery; music time: up to 6.5 Hrs (mediums level) on a single charge; Bluetooth standby time: up to 5 days; charging time: ~ 50 minutes. Support total 30 Hrs battery time with charging case.
Operation environment	Operating temperature : 0°C~ 50°C; Storage temperature: -30°C ~70°C; IEC60529 IPX4 Certified (earbuds).
Voice reminder	English
Certification	BQB,Bluetooth 5.2, SRRC,RoHS,REACH,IPX4

Trouble Shooting

Problem	What to do
Earbuds Don't turn on	<ul style="list-style-type: none">• Power on the earbuds.• Charge the battery.
Earbuds don't pair with Bluetooth device	<ul style="list-style-type: none">• On your Bluetooth device;<ul style="list-style-type: none">- Turn the Bluetooth feature on and then off.- Delete you FIIL CC Pro earbuds from Bluetooth list on your device, and pair again.• Move your Bluetooth device closer to the earbuds and away from any interference or obstructions.• Pair a different Bluetooth device.
No sound	<ul style="list-style-type: none">• Power on the earbuds and charge the battery.• Increase the volume on your earbuds and Bluetooth device.• Press the power/ Bluetooth button to hear the connected device. Make sure you are using the correct device.• Move your Bluetooth device closer to earbuds and away from any interference or obstructions.• Use a different music source.• Pair a different Bluetooth device.• If two Bluetooth devices are connected, pause the first device and play the other device.

Trouble Shooting

Problem	What to do
Poor sound quality	<ul style="list-style-type: none">• Use a different music source.• Pair a different Bluetooth device.• Disconnect the second device• Move the Bluetooth device closer to the earbuds, and away from any interference or obstructions.• Clear any debris or wax buildup from the earbuds and earbud nozzles.
Earbuds don't charge	<ul style="list-style-type: none">• Open the USB connector and securely connect the small end of the USB cable to the USB connector. Make sure the connector on the cable is correctly aligned with the connector on the earbuds.• Secure both ends of the USB cable.• If your earbuds have been exposed to high or low temperatures, let the earbuds return to room temperature and then try charging again.



FCC and IC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules and Industry Canada License-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules / with Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the radio or television off and on, the user is encouraged to try to correct interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on another circuit.
4. Consult the dealer or an experienced radio/TV technician for help.

CAUTION STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Correct disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.



CAUTION

Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.



To prevent possible hearing damage, do not listen at high volume levels for long periods.