


USER MANUAL

MODEL NAME: LOVECOOK PRO 7-IN-1 BABY FOOD PROCESSOR

MODEL NUMBER: LOV12001



loveamme
love in every drop

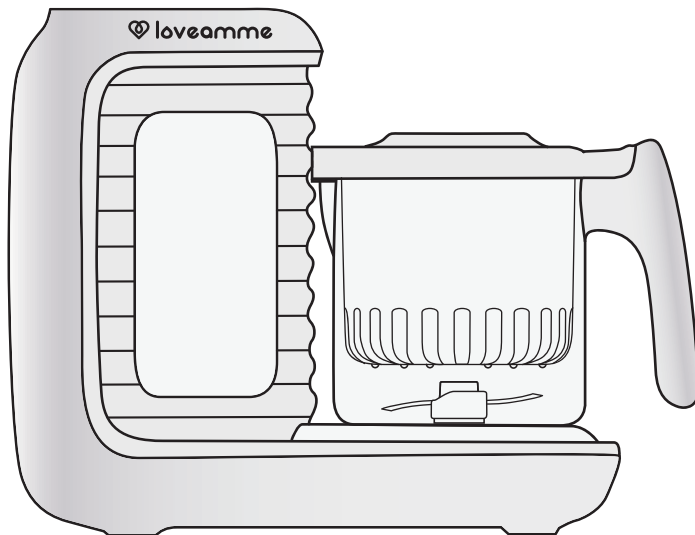

Thank you for choosing LoveAmme®'s products!

You now own an appliance that offers you an all-in-one solution for your little one's weaning journey. LoveCook Pro will ease and simplify your preparation of healthy home-made meals. This 7-in-1 food processor is able to steam, auto and pulse blend, warm milk, defrost (using the "Warm" function), cook porridge, rice and pasta (using the "Steam" function), and sterilise small items. It even self-cleans! It is designed for the easy preparation of fresh food for your baby. Please operate the appliance in accordance to this user manual. Please read this user manual before use and keep it for the lifespan of your product.


CONTENTS

01	Warnings	3
02	Product Overview	4
	2A. Product Specifications	4
	2B. Panel Features	5
03	Using the LoveCook Pro	6
	3A. Preparing for Use	6
	3B. Steam	6
	3C. Blend	7
	3D. Defrost	7
	3E. Warm Milk	7
	3F. Sterilise	8
	3G. Cook Porridge/Rice/Pasta	8
	3H. Steaming and Blending Durations	9
04	Cleaning & Maintenance	10
05	Water Tank Cleaning & Descaling	10
06	Troubleshooting	11
07	Safety Features	12
08	Authorised Distributors	12



- 1) Before using for the first time, run a steaming cycle of 15 minutes without any food in the blender cup, and with the water tank's water level at the "MAX" mark. When cycle is complete, rinse blender cup and cover in clean water.
- 2) Before connecting the power, please ensure that the voltage indicated on the bottom of the appliance corresponds to your mains voltage of your power supply.
- 3) Do not use the appliance if the power plug, mains cord or any part of the appliance is damaged. Do not use accessories or parts produced by other brands as doing so will void the warranty of this product.
- 4) For your safety, repairs and replacements must be carried out only by LoveAmme® authorised service centres. Not doing so will void your warranty. This product is not a toy. Do not place this product within reach of children or babies. This appliance should not be used by children.
- 5) This appliance contains sharp blades, please do not touch the blades. If the blades are stuck, remove them following cleaning instructions in Section 4. Dislodge food pieces carefully from the blades with a spoon or spatula. Be careful when handling the blades.
- 6) The water tank and blender cup may reach high temperatures during steaming. Do not touch the water tank or blender cup during or immediately after the steaming process. Please use the cup handle.
- 7) Please be careful of steam emitted during steaming or when opening any of the covers.
- 8) Ensure that the blender cup and single/double deck cover are properly locked in position, failing which the appliance will not work.
- 9) Please be careful when adding water to the water tank, blender cup or during cleaning. Do not add too much water. Follow the level markings on the water tank and blender cup. Overfilling may cause water to overflow and cause a short circuit and/or other problems.
- 10) Do not immerse the appliance's main body, cord or plug in water.
- 11) Do not place the appliance near the stove or any heated surfaces. Switch off the appliance and disconnect from power supply before touching movable parts or dismantling for cleaning.
- 12) Do not sterilise the blender cup or any other parts of the appliance in a steriliser or microwave oven. Sterilisers and microwave ovens are not suitable for use on the blender cup handle and blades.
- 13) This product is designed for household usage only. The warranty will be void and LoveAmme® shall not be liable for damages resulting from usage not in accordance to the user manual, inappropriate usage and/or usage for commercial purposes.
- 14) Always use the appliance on a solid and flat surface. Ensure sufficient clearance around the appliance, to prevent damage from the steam emitted.
- 15) Do not lift or move the appliance when in use.
- 16) Do not drip any puree or juice into the water tank as they may corrode the heating plate.
- 17) Do not insert any objects into the water inlet or steam outlet.
- 18) Do not open the blender cup or water tank lids until the steaming cycle is complete to avoid burn injuries or scalding.
- 19) Check that the food is evenly and fully cooked before serving.
- 20) For multiple steaming cycles, remove the blender cup and single/double deck cover to stir food thoroughly between each cycle, in order to cook the food fully and evenly.
- 21) Do not blend hard foods that may dull the blade, such as bones and nuts (e.g. walnuts, macadamia nuts, etc).
- 22) Do not blend an empty cup.
- 23) Do not blend for more than 15 seconds each time. Please allow an interval of 10 seconds for the appliance to cool before the next round of blending.
- 24) Staining of the blender cup may occur due to colouring from the food and such colour staining is normal. Clean the blender cup immediately after each use and clean regularly as part of the maintenance routine.
- 25) Use only clean water in the water tank. Tap water and mineral water are not recommended as minerals may cause scaling build-up in the water tank.
- 26) Descale the water tank whenever you notice limescale build-up to maintain working efficiency.

02 PRODUCT OVERVIEW

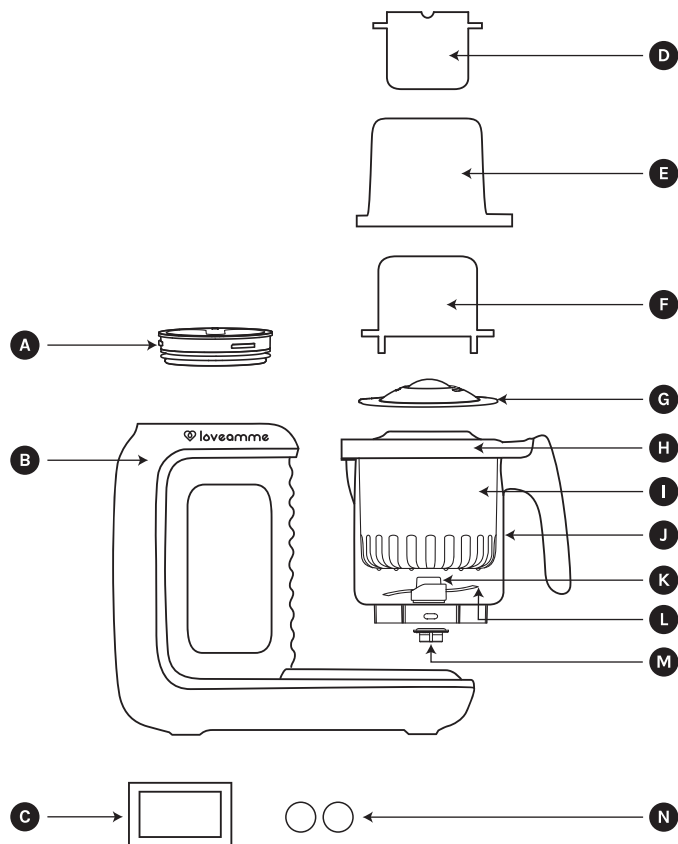

Item	Name	Material	Maximum Temperature	Minimum Temperature
A	Water Tank Lid	Food-Grade PP	120°C	-20°C
B	Food Processor Base Unit	ABS	80°C	-20°C
C	Descaling Powder	-	-	-
D	Porridge/Rice/ Pasta Cooker	Food-Grade PP	120°C	-20°C
E	Double Deck Cover	Food-Grade PP	120°C	-20°C
F	Upper Steamer Basket	Food-Grade PP	120°C	-20°C
G	Anti-Spill Clear Cover	Food-Grade PP	120°C	-20°C
H	Single Deck Cover	Food-Grade PP	120°C	-20°C
I	Lower Steamer Basket	Food-Grade PP	120°C	-20°C
J	Blender Cup	Eastman Tritan	120°C	-20°C
K	Blender Screw	Food-Grade PA	120°C	-20°C
L	Blending Blade	304 Stainless Steel	120°C	-20°C
M	Blender Holder	Food-Grade PP	120°C	-20°C
N	Silicone Ring	Food-Grade Silicone	200°C	-20°C

Product Specifications:


Model Name: LoveCook Pro 7-in-1
 Baby Food Processor
 Model Number: LOVI2001
 Net Weight: 1.81 kg
 Gross Weight: 2.63 kg
 Product Dimensions: 295 x 148 x 245 mm
 Heating Capacity: 300W
 Blender Power: 130W
 Rated Power: 220-240V~, 50/60Hz
 Water Capacity: 200ml
 Blender Capacity: 300ml


Safety Certification:


LoveCook Pro has been independently certified by international third party labs to meet German Standards and IEC/EN 60335 standards, which is the European Standards governing the safety of electrical appliances intended for household use. We only use FDA Food-Grade Materials and all parts are BPA-Free. We use 100% Eastman Tritan for clear plastic parts; oxidation-resistant 304 stainless steel for the blender blade; and high-quality food-grade silicone for our silicone components.




2B. CONTROL PANEL FEATURES

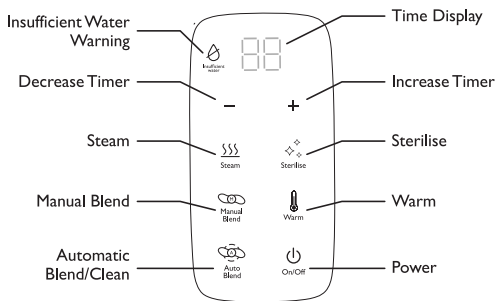



 **Insufficient Water Warning** This warning light will flash if there is insufficient water in the tank (when operating the following functions: Steam, Sterilise, Warm) and the water heating will stop automatically. The warning light will stop flashing once the water tank has been filled and the temperature of the water tank has gone down.

  **Timer Display** Displays the remaining duration for the Steam, Warm and Sterilise functions and status for the Cleaning and Blend functions.


- + Decrease Timer/ Increase Timer For adjustments to the duration of Steam, Warm and Sterilise.

 
 **Steam Function** When the “Steam” function button is pressed, the time display will show 15 minutes. A single “beep” indicates the start of the steaming cycle. You can adjust the duration using the Decrease Timer or Increase Timer buttons. Completion of the cycle will be indicated by 5 consecutive “beeps”.

 **Sterilise Function** When the “Sterilise” function button is pressed, the time display will show 10 minutes. A single “beep” indicates the start of the sterilising cycle. You can adjust the duration using the Decrease Timer or Increase Timer buttons. Completion of the cycle is indicated by 5 consecutive “beeps”.


 **Manual Blend** When the “Manual Blend” button is pressed and held on, pulse blending will start with a single “beep”. The LED will light up to indicate that the function is in use. When the button is released, pulse blending will stop and the LED light will go off.

 **Warm Function** Warming milk bottles is done in the water tank. It will last for 2.5 minutes and completion of the process will be indicated by 5 consecutive beeps.

 **Automatic Blend / Clean** When the Automatic Blend / Clean button is pressed, automatic blending will start with a single “beep”. The LED will light up to indicate that the function is in use. It will last for approximately 1.5 minutes. Completion of the cycle is indicated by 5 consecutive “beeps”.

 **Power** Connect the appliance to a power source. The power icon on the panel will turn blue to indicate the appliance is powered. To switch on or off, press and hold the power button for 3 seconds. All icons on the panel will turn white (except for Insufficient Water Warning light). The appliance is on stand-by mode when the Time Display shows “00”.

When a function is in use, the corresponding buttons will turn bright white. Press and hold the power button for 3 seconds to power off the appliance.

Cancel To cancel any cycles in the middle of operation, press the power  button.



3A. PREPARING FOR USE

Please fill the water tank before use by pouring clean water into the water tank to reach the "MAX" mark, and twist on the cover after filling.


⚠ Caution:

1. Tap or mineral water are not recommended for use as the minerals found within may cause scaling in the water tank.
2. Do not overfill water tank. The water level must not exceed the "MAX" marking.
3. Do not pour liquids apart from clean water into the tank.

3B. STEAM

Sterilising the Unit

- 1) Twist to remove lid from water tank. Fill the water tank with ~ 200ml water. Replace lid.
- 2) Lock the single deck cover onto the blender cup. Lock the blender cup onto the base. The "↓" marking on the blender cup should be aligned to the "CLOSE" marking on the cup seat.
- 3) Press and hold the power button for 3 seconds to switch on the appliance.
- 4) Press the "sterilise" button to sterilise the unit before steaming food. A 5-minute sterilising cycle is recommended. Press Decrease Timer to select this duration.
- 5) After sterilising, fill the water tank with clean water to the MAX level or according to your needs. More water is needed for a longer steaming time.

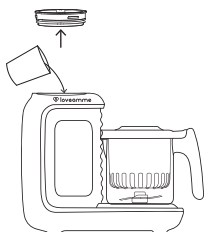

- 6) Twist the single deck cover clockwise while holding the handle to remove the cover.




- 7) Solid foods should be cut into small pieces no larger than 1.5 cm before they are placed into the steaming basket.




Caution: Do not steam large amounts of solid foods at a time. Large amounts of solid foods should be steamed in several batches to ensure even and complete cooking.

- 8) Put the lower steamer basket into the blender cup and affix the cover.
- 9) Turn the single deck cover counterclockwise to lock in position. The "▶" marking on the single deck cover should be aligned to the "◀" marking on the blender cup handle.

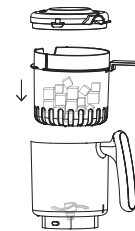

- 10) Put the blender cup on the cup seat and twist the blender cup counterclockwise to lock in position. The "↓" marking on the blender cup should be aligned to the "CLOSE" marking on the cup seat.
- 11) Turn on the power button and press the "steam" button. Adjust the steaming duration using the Decrease Timer or Increase Timer buttons as required. Steaming will start automatically.

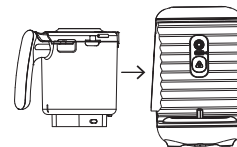


03 USING THE LOVECOOK PRO




The upper steamer basket may be used to steam more food, or to steam 2 different types of foods at the same time.

- 12) Put some food into the lower steamer basket as per steps 6 and 7.
- 13) Place the upper steamer basket above the lower steamer basket. The notch on the upper steamer basket should be aligned to the notch on the lower steaming basket.
- 14) Place the remaining food in the upper steamer basket and operate as per steps 8 to 10. The double deck cover should be used instead of the single deck cover.

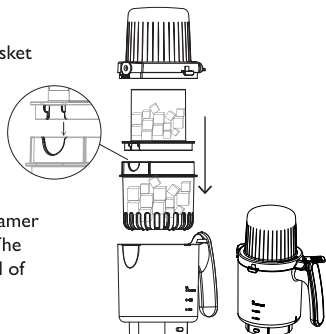


- 15) After steaming, remove the blender cup and unlock the double deck cover. Pour the steamed food from the steamer baskets into the blender cup and add other ingredients as required. Affix the anti-spill clear cover and single deck cover. The steamer basket should be cleaned immediately after use.

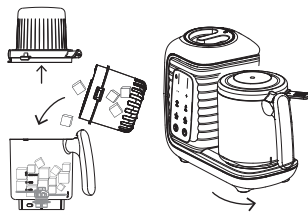

3C. BLEND

- 1) Place food for blending directly into the blender cup and use the single deck cover. Lock the blender cup onto the base.
- 2) Press "Auto Blend". The default duration is 1.5 minutes.
- 3) For controlled blending, use the Manual Blend function. Stop the Auto-Blend by pressing the power button. Press and hold the

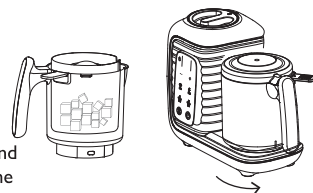

"Manual Blend" button for pulse-blending. It will start with a single "beep". The LED will light up to indicate that the function is in use. When the button is released, blending will stop. **WARNING!** Do not exceed 15 seconds for each cycle. Pause for 10 seconds between cycles.


- 4) When blending is complete, check the puree with a spoon to ensure that there is no coagulation or foreign objects. Allow puree to cool before feeding.

! Caution:

If there are small chunks of food on the walls of the blender cup, remove the blender cup from the base and retrieve the food chunks with a spoon or spatula.


3D. DEFROST

- 1) Add about 60ml water into the water tank. Place milk bottle
- 2) or food container in the water tank. Press the "Warm" button. Press the Increase Timer button to select 4 minutes for frozen milk, or 5 minutes for frozen
- 3) food. The defrosting process will start automatically. Completion of cycle will be indicated by 5 consecutive "beeps".

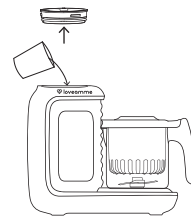

3E. WARM MILK

- 1) Add about 60ml water into the water tank. Place milk bottle in the water tank.
- 2) Press the "Warm" button and the milk warming process will start automatically. The process will last for about 2.5 minutes which is suitable for milk volumes above 120ml. For milk volume of 120ml and below, please decrease the timer to 1 minute to prevent overheating your milk.
- 3) Completion of cycle will be indicated by 5 consecutive "beeps".

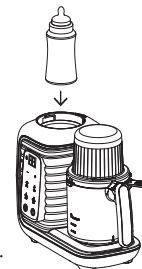

Note: Temperature of milk warming will be affected by the ambient temperature, amount of water, material and thickness of milk bottle. Always test the temperature on the back of your hand before feeding.



3F. STERILISE

The sterilise function may be used to sterilise baby products such as bottles, pacifiers, feeding spoons, teethers etc. Please wash the blender cup thoroughly with soapy water before sterilisation.

- 1) Place items for sterilisation into the blender cup and put on the single/deck cover. Lock the blender cup onto the base.
- 2) Press the "Sterilise" button. The process will start automatically. The default duration is 10 minutes. Adjust the sterilisation duration by using the Decrease Timer or Increase Timer buttons as required.
- 3) Completion of the sterilisation process will be indicated by 5 consecutive "beeps".




- 5) After sterilising, fill the water tank with clean water to the MAX level or according to your needs. More water is needed for a longer steaming time.

- 6) Twist the single deck cover clockwise while holding the handle to remove the single deck cover.



- 7) Solid foods should be cut into small pieces no larger than 1.5 cm before they are placed into the porridge/rice/pasta cooker.


Caution: Do not steam large amounts of solid foods at a time. Large amounts of solid foods should be steamed in several batches to ensure even and complete cooking.

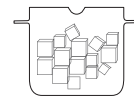


3G. COOK PORRIDGE/RICE/PASTA

Sterilising the Unit

- 1) Twist to remove lid from water tank. Fill the water tank with ~ 200ml water. Replace lid.
- 2) Lock the single deck cover onto the blender cup. Lock the blender cup onto the base. The "↓" marking on the blender cup should be aligned to the "CLOSE" marking on the cup seat.
- 3) Press and hold the power button for 3 seconds to switch on the appliance.
- 4) Press the "sterilise" button to sterilise the unit before steaming food. A 5-minute sterilising cycle is recommended. Press Decrease Timer to select this duration.

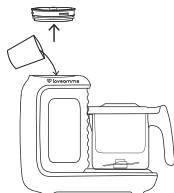


- 8) Put the porridge/rice/pasta cooker into the blender cup and cover the single deck cover.
- 9) Turn the single deck cover counterclockwise to lock in position. The "▶" marking on the single deck cover should be aligned to the "◀" marking on the blender cup handle.

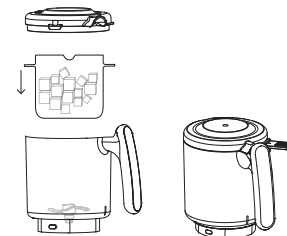



- 10) Put the blender cup on the cup seat and twist the blender cup counterclockwise to lock in position. The “↓” marking on the blender cup should be aligned to the “CLOSE” marking on the cup seat.
- 11) Turn on the power button and press the “steam” button. Adjust the steaming duration using the Decrease Timer or Increase Timer buttons as required. Steaming will start automatically.

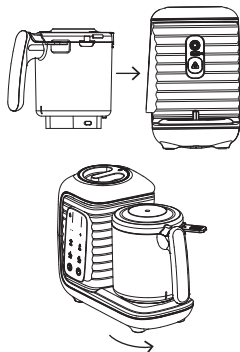

Note:

1. To cancel any operations mid-cycle, press the power button.
2. After each use, power off the appliance and disconnect from mains. Empty the remaining water from the water tank and thoroughly dry the water tank with a dry cloth.

3H. STEAMING AND BLENDING DURATIONS

STEAMING DURATIONS

All durations are estimated per 200g. Do not steam more than 200g in one cycle. Always check that food is fully cooked and food temperature is suitable for your baby before feeding.

VEGETABLES

Potatoes	15min
Carrots	15min
Broccoli	15min
Courgette	15min
Cauliflower	15min
Pumpkin	15min

FRUIT

Apple	10min
Pear	10min
Oranges	10min
Peach	10min
Plum	10min

MEAT

Fish	15min
Chicken	25min
Veal / Beef	25min

When cooking meat, please pause the unit every 10 minutes and stir food thoroughly to ensure even cooking.

BLENDING DURATIONS

The blending duration controls the texture of the food. Do not exceed the MAX fill line on the container when using the blend function. You can use these durations as a guideline to achieve different consistencies for each weaning stage.

4+ Months

Pureed food for introducing first foods. Blend for ~ 2 minutes to get a smooth consistency.

6+ Months

For a combination of flavours and textures smooth lumpy chunks, blend for ~ 15 seconds.

10+ Months

Chunky texture for seasoned eaters. Blend for ~ 4-10 seconds.

The fluids collected in the blender cup is nutrient-rich, tasty and blends into a smooth texture for first foods. It can be discarded to create chunkier textures.

Blend durations outlined are estimates.

04 CLEANING & MAINTENANCE



Storing

- 1) Empty all water from the water tank before storage.
- 2) Ensure that all parts are clean and dry before storage.
- 3) Keep the blender blades in the blender cup during storage to prevent damage.

Cleaning

- 1) Switch off and disconnect from power.
- 2) Remove blender cup and single/double deck cover.
- 3) To remove the blade from the blender cup, hold on to the blender screw with one hand and twist the blender holder clockwise with the other hand. (Refer to the parts in Figure A)
- 4) Remove the silicone ring from the blender screw by gently tugging it out.
- 5) Wash blender blades and clean the inside of the silicone ring under running water immediately after use.
- 6) Wash the other parts with soapy water and air dry.
- 7) When necessary, clean the appliance's main body with a dry cloth.
- 8) Check for food particles in the water tank. If food particles are present, please clean and descale the tank immediately.
- 9) Keep the water tank as dry as possible when not in use to prevent bacterial and/or mold growth.
- 10) To reassemble unit, carry out steps 2-4 in reverse order. Please ensure that the silicone ring notch is aligned to the blender screw notch when refitting. The silicone ring should face downwards.

*1 x silicone ring is included in the box as a replacement part

Auto-Cleaning The Blender Cup

- 1) Remove blender cup from the appliance and fill with water and mild dish washing liquid up till the "MAX CLEANING" mark.

05 WATER TANK - CLEANING & DESCALING


Descaling of the water tank should be carried out every week to maintain working efficiency. Scaling can be reduced by using purified or filtered water. If you are living in a hard water area, limescale builds up more quickly, which will require more frequent descaling. Check with your water provider regarding your water quality.

- 1) You can use descaling powder or homemade descaling solution.
 - a) A sachet of descaling powder is included. Fill water to MAX level and empty sachet into water tank. Mix well and replace lid; OR
 - b) Mix 10g of citric acid with about 200ml clean water. Pour into the water tank and replace lid; OR
 - c) Mix 150ml water and 50ml white vinegar (8% concentration acetic acid). Pour into the water tank and replace lid.

- 2) Tighten the single/double deck cover and lock the blender cup in place.
- 3) Start the cleaning process by pressing the Automatic Blend/ Clean button.
- 4) Completion is indicated by 5 consecutive beeps. When the process is completed, pour away the water and repeat 2-3 times.

⚠ Caution:

- 1) Always clean the appliance immediately after use.
- 2) Do not immerse appliance, cord or power plug in water.
- 3) Do not use bleaching solutions and/or tablets on the appliance.
- 4) Do not use steel wool, abrasive cleaners or corrosive substances (e.g. petroleum, acetone or alcohol) on the appliance.
- 5) Please be careful when handling sharp blender blades to prevent injury.
- 6) Blender blades may be washed in a dishwasher after rinsing with water. All parts of the appliance (except for the main body) can be washed in a dishwasher.

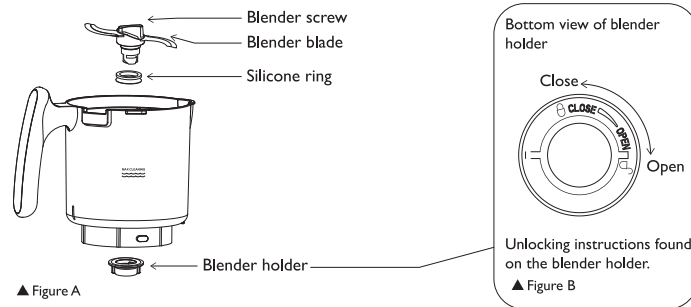

▲ Figure A

- 2) Lock blender cup with cover in place. Press the "Steam" function. Adjust duration to 5 minutes using the Decrease Timer or Increase Timer. Descaling process begins automatically.
- 3) When cycle is complete, switch off the power and disconnect from mains.
- 4) Empty the used citric acid solution or vinegar mixture from the water tank.
- 5) Wash the water tank and blender cup thoroughly with clean water.
- 6) Before using the appliance, add 100-200 ml water into the water tank. Run the Steam function on an empty blender cup for 10 minutes to remove any remaining odours.
- 7) Keep the water tank as dry as possible when not in use to prevent bacterial and/or mold growth.



This chapter summarises commonly faced problems. If the problem is not found below, please contact your distributor or the manufacturer for assistance.

Problem	Analysis	Solution
The appliance is not working	Check if the power plug is properly connected and switched on.	Connect the plug to a power supply and switch on the power. Standard voltage of 220V should be used.
There is no steam generated	Check if the water tank is filled. Check if the single/double deck cover and blender cup are properly fixed in position.	Add water to the water tank and begin the steam process after 1-2 minutes. The “▶” marking on the blender cup lid should be aligned to the “◀” marking on the blender cup handle. The “↓” marking on the blender cup should be aligned to the “CLOSE” marking on the base.
The blender blades are not rotating	Check if the blender cup and single/double deck cover are properly fixed in position.	The “▶” marking on the single/double deck cover should be aligned to the “◀” marking on the blender cup handle. The “↓” marking on the blender cup should be aligned to the “CLOSE” marking on the base.
The steam function is not working	Overheat protection by thermostat	Wait 2-3 minutes between each steam process, or add more water to the water tank and wait 1-2 minutes before the next steam cycle.
The blend function is not working	<ol style="list-style-type: none"> 1) Single/double deck cover is not properly closed. 2) Blender cup is not properly fixed. 3) Too much food placed in blender. 	<ol style="list-style-type: none"> 1) The “▶” marking on the blender cup lid should be aligned to the “◀” marking on the blender cup handle. 2) The “↓” marking on the blender cup should be aligned to the “Close” marking on the base. 3) Maximum blending capacity should not exceed 300ml.
Blending power is not strong	<ol style="list-style-type: none"> 1) Voltage used is too low. 2) Food is too hard or too thick. 3) Too much food placed in blender. 	<ol style="list-style-type: none"> 1) Use power sources with standard voltage 220V. 2) Steam food before blending or add water to soften the food. 3) Maximum blending capacity should not exceed 300ml.
Steam is not strong enough, my food is not completely cooked	<ol style="list-style-type: none"> 1) Steam outlet vent may be blocked. 2) Surface area of food is too large. 	<ol style="list-style-type: none"> 1) Clear the steam outlet vent. 2) Cut the food into smaller pieces of not more than 1.5cm and/or increase the steaming time.
Water is coming out from the steam outlet	Water level in the water tank is too high.	Water level in the water tank should not exceed the MAX marking.



07 SAFETY FEATURES

- 1) This product comes with a built-in safety lock feature. The appliance will not work if the blender cup or the single/double deck cover is not properly fixed in position.
- 2) This product comes with an overheating protection feature. Overheating may occur when there is insufficient water in the water tank for the selected function, if the interval between two steaming processes is too short; if the blending duration is too long; or if there is too much food being processed. If the overheating protection feature is activated during usage of the appliance, the Insufficient Water Warning will light up. Please switch off the power and allow the appliance to cool down for a few minutes before continuing use.

08 AUTHORISED DISTRIBUTORS

Singapore:

Kim Hin Innovation Labs Private Ltd.
601 Sims Drive, Pan-I Complex,
Singapore 387382
Tel: (65) 6831 5020
care.il@kimhinintl.com

Malaysia:

Global Retail Network Sdn Bhd (921399-V)
Wisma Pang Cheng Yean,
Lot 5205C, Jalan Perindustrian Balakong Jaya 1/3,
Taman Perindustrian Balakong Jaya,
43300 Seri Kembangan,
Selangor Darul Ehsan, Malaysia
Tel: (03) 8940 6638
contactus@globalretail.com.my

Hong Kong:

Trade Solutions Ltd.
Unit D, 13A, Gemstar Tower,
No. 23 Man Lok Street, Hung Hom,
Kowloon, Hong Kong
Tel: (852) 2264 1282

Connect with Mums

At the heart of LoveAmme® is a community of mums supporting and helping each other. Be a part of our community at [LoveAmmeOfficial@facebook](#) and [loveamme.official@instagram](#), tap into our feeding resources at [www.loveamme.com](#), or simply email us at [welcome@loveamme.com](#) to get connected.





loveamme
love in every drop

感谢您选购 LoveAmme® 产品!


您现在已拥有一台提供全方面功能的婴儿辅食机。LoveCook Pro让您能够更快速、简单地为您的宝宝准备既健康又充满爱心的餐点。此7-合-1 婴儿辅食机能够蒸煮、自动和手控搅拌、暖奶、解冻（使用暖奶功能）、烹煮粥/饭/意大利面（使用蒸煮功能）及消毒小物件。它甚至拥有一键全自动清洗功能！使用前请仔细阅读此说明书并妥善保管此说明书以备日后参考。

目录

01	注意事项	14
02	产品介绍	15
	2A. 产品参数	15
	2B. LED面板介绍	16
03	LoveCook Pro功能使用及操作	17
	3A. 开机前准备	17
	3B. 蒸煮	17
	3C. 搅拌	18
	3D. 解冻	18
	3E. 消毒	18
	3F. 暖奶	19
	3G. 烹煮粥/饭/意大利面	19
	3H. 蒸煮与搅拌时间	20
04	清洁和保养	21
05	水箱清洁和除垢	21
06	故障分析和诊断	22
07	安全功能	23
08	授权转销商	23



- 1) 首次使用此产品前，请先将水箱填满至“MAX”标志的位置，并在没有任何食物在搅拌杯的情况下进行一次15分钟的蒸煮过程。蒸煮过程后用清水把搅拌杯和配件彻底冲洗干净。
- 2) 在将本产品连接电源前，请先检查产品底下所标志的电压和供电的电压是否符合。
- 3) 切勿在插头、电源线或产品本身受损的情况下使用本产品。切勿使用其他制造商所生产的配件或零件，否则本产品的保修将失效。
- 4) 为了您的安全，本产品的维修或更替必须由LoveAmme®授权的服务中心来进行维修或更换，否则本产品的保修将失效。
- 5) 本产品不是玩具。切勿将本产品置于儿童或婴孩能触及到的地方。切勿让儿童或婴孩使用本产品。
- 6) 本产品中有锋利的刀片，请勿触摸刀片。如果刀片被卡住，请先拔下电源插头后再根据第四节的清洁步骤，把刀片取出。您可以使用汤匙或刮刀清除堵塞刀片的食物。在清空搅拌杯或清洗过程中请多加注意刀片。
- 7) 在蒸煮过程中，水箱、搅拌杯及搅拌杯旋盖可能会达到高温。请勿在蒸煮程中或蒸煮刚结束时触碰水箱及搅拌杯。请使用搅拌杯手柄。
- 8) 请务必小心辅食机在蒸煮过程中或打开搅拌杯/水箱盖子时所冒出来的高温蒸汽。
- 9) 使用辅食机时，请务必确保搅拌杯、搅拌杯平盖/高盖旋扣到位，否则辅食机将无法启动。
- 10) 在注水至水箱/搅拌杯或在清洁时请多加注意。请按照水箱内或搅拌杯上的水位标志加水，切勿超出。超出水箱内或搅拌杯的水容量会导致水溢出并流入机器内，因而导致机器内部短路或其它问题。
- 11) 切勿将本产品机身，电源线或插头浸入水里或者任何其他液体中。
- 12) 切勿将产品置于正在使用或仍有预热的炉具炊具上方或周围。
- 13) 在拆装产品的任何部件以及清洁本产品前，请务必断开产品电源并拔出插头。
- 14) 切勿使用消毒器或微波炉来对搅拌杯或本产品的任何部件进行消毒。消毒器或微波炉的消毒方式不适用搅拌杯于手柄和刀片组建。
- 15) 本产品仅限于家庭使用。未按照此说明书中的指示操作本产品或将本产品用于商业/半商业用途，可能对本产品造成损伤。因而本产品的保修将失效，LoveAmme®也将拒绝承担任何损伤的责任。
- 16) 始终在牢固且平整的表面上使用本产品。请确保使用本产品时四周留有足够的空间，以防使用期间散发出的高温蒸汽对橱柜或其他物件造成损坏。
- 17) 切勿在使用期间提起及移动本产品。
- 18) 切勿在蒸煮食物时将果泥、果汁滴入水箱内，以防食物的酸碱性腐蚀在发热盘内胆。
- 19) 切勿将任何物体塞入注水口或蒸汽出口中。
- 20) 为避免被烫伤，切勿在蒸煮过程结束前打开搅拌杯盖或水箱盖。
- 21) 哺喂宝宝前，请确保食物已完全煮熟并已搅拌至适合喂食的温度和均匀度。
- 22) 连续使用蒸煮功能时，在每个循环之间彻底搅拌食物，以便充分均匀地烹饪食物。
- 23) 严禁搅拌会使刀片变钝的食材（例如：骨头、坚果、核桃，夏威夷果等硬物）。
- 24) 严禁空杯搅拌。
- 25) 严禁搅拌辅食时间超过15秒。每轮搅拌完成后，必须让辅食机冷却10秒方可再次搅拌。
- 26) 蒸煮带有颜色的食物所导致搅拌杯着色是属正常现象。每次使用本产品并等其冷却后，请立即清洗。本产品也需定期除垢。
- 27) 建议在水箱内使用净水。请避免使用自来水或矿泉水，因此类水中所含的矿物质容易导致水箱内聚集水垢。
- 28) 每当你注意到水箱里有水垢的聚集，请勤劳除去水箱里的水垢。

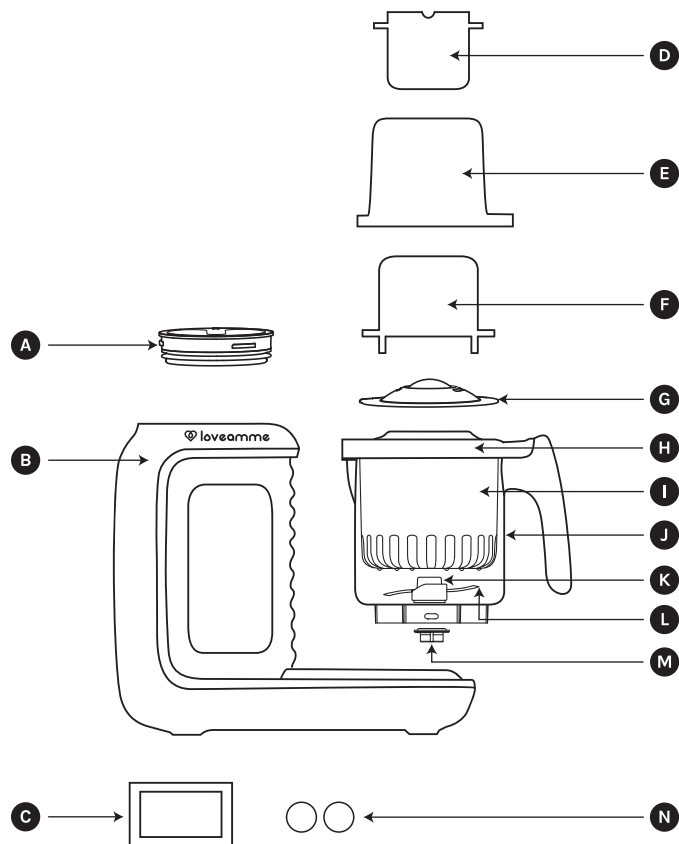

编号	名称	材质	耐热温度	耐冷温度
A	水箱盖	食品级PP	120°C	-20°C
B	主机	ABS	80°C	-20°C
C	除垢粉	-	-	-
D	粥/米饭/意面烹饪杯	食品级PP	120°C	-20°C
E	搅拌杯高盖	食品级PP	120°C	-20°C
F	上层蒸篮	食品级PP	120°C	-20°C
G	防溢盖	食品级PP	120°C	-20°C
H	搅拌杯平盖	食品级PP	120°C	-20°C
I	底层蒸篮	食品级PP	120°C	-20°C
J	搅拌杯	Eastman Tritan	120°C	-20°C
K	搅拌刀架旋螺	食品级PA	120°C	-20°C
L	搅拌刀片	304 不锈钢	120°C	-20°C
M	搅拌刀架	食品级PP	120°C	-20°C
N	硅胶环	食品级硅胶	200°C	-20°C

产品参数:


产品名称: Lovecook Pro 7-合1 婴儿辅食机
 产品型号: LOV12001
 产品净重: 1.81 kg
 产品毛重: 2.63 kg
 产品尺寸: 295 x 148 x 245 mm
 加热功率: 300W
 搅拌功率: 130W
 额定电源: 220-240V~, 50/60Hz
 水箱容量: 200ml
 搅拌容量: 300ml


执行标准:


LoveClean小型消毒器经国际协力厂商认证机构的测试, 并被认证已通过IEC/EN 60335标准。本标准为家用及类似用途电器安规标准通用要求。本产品只使用FDA食品级材料, 所有部件均不含BPA。我们的透明塑料部件均使用100%的Eastman Tritan。搅拌机刀片均使用抗氧化的304不锈钢。所有硅胶部件均使用高品质的食品级硅胶。




2B. LED面板介绍

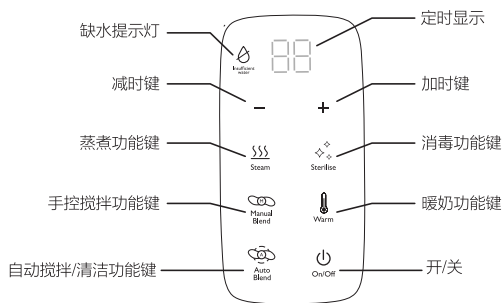



 **缺水提示灯** - 若水箱在蒸煮、消毒或暖奶功能进行中出现缺水的现象，此提示灯将会闪烁，水箱也会自动停止加热。当再次加水到水箱内使其的温度下降后，提示灯会停止闪烁并自动熄灭。


 **定时显示** - 显示蒸煮、消毒及暖奶功能的运作时间以及清洗、自动搅拌功能的运作状态。


—+ 定时减/定时加 - 蒸煮、消毒及暖奶功能的定时调整。


 **蒸煮功能键** - 当您按下此键，定时显示将会自动显示15分钟。与此同时，辅食机也会发出一声“滴”的提示音以代表蒸汽功能已启动。您可根据个人需求使用加、减时键来调整蒸煮时间。蒸煮功能完成时，辅食机会连续发出五声“滴”的提示音。

 **消毒功能键** - 当您按下此键，定时显示会自动显示10分钟。与此同时，辅食机也会发出一声“滴”的提示音以代表消毒功能已启动。您可根据个人需求使用加、减时键来调整消毒时间。消毒功能完成时，辅食机会连续发出五声“滴”的提示音。


 **手控搅拌功能键** - 当您长按此键，手控搅拌功能将被启动，辅食机会随着手控搅拌功能的开启发出一声“滴”。而LED面板会亮起以表示此功能正在进行中。当您放开此键，辅食机将停止手控搅拌功能，而LED面板也会同时熄灭。

 **暖奶功能键** - 暖奶功能会在水箱内进行。当您按下此键，辅食机会自动进行约2分钟半的暖奶功能。暖奶功能完成时，辅食机会连续发出五声“滴”的提示音。

 **自动搅拌/清洁功能键** - 当您按下此键，自动搅拌功能将自动开启。与此同时，辅食机会随着自动搅拌功能的开启发出一声“滴”。而LED面板会亮起以表示此功能正在进行中。它会持续大约1.5分钟。自动搅拌功能完成时，辅食机会连续发出五声“滴”的提示音。

 **开/关键** - 当辅食机连接电源后，开/关键会显示蓝色。当您长按此键3秒后，辅食机会开启。除了缺水提示灯，所有按键灯和灯条会显示暗白色以表示所有功能可以使用。当定时显示数为“00”时，辅食机进入待机状态。

当一项功能被开启时，此功能的按键会呈现亮白色。当您长按开/关键3秒后，辅食机将关机。

取消 - 在任何功能进行的过程中按下开/关键可终止此功能的运作。



3A. 开机前准备


开机前请用纯净水或蒸馏水将水箱填满至“MAX”标志的位置并旋上水箱旋盖。

① 注意：


1. 建议不要使用自来水或矿泉水，因此类水中所含有的矿物质会导致水箱易聚集水垢。
2. 切勿把水箱装得太满，水位不可超过水箱上的“MAX”标志的位置。
3. 切勿往水箱内注入纯净水或蒸馏水以外的液体。

3B. 蒸煮 进行消毒

- 1) 按照顺时针方向将水箱盖顺旋开，给水箱加入约200ml的净水。装上水箱盖。
- 2) 按照逆时针的方向将平盖旋到位。然后再把搅拌杯旋到位。搅拌杯上的“↓”应对准杯座上的“Close”标志的中心位置以确保其锁到位。
- 3) 长按开/关键3秒以启动辅食机。
- 4) 在蒸煮前，请先按下消毒键给水箱和搅拌杯消毒。建议进行5分钟的消毒。点击LED面板上的加时键或减时键(+/-)以设定消毒的时间。
- 5) 消毒完成后，请按照您的需求再次给水箱加入净水。蒸煮时间越长，所需加入的水就越多。

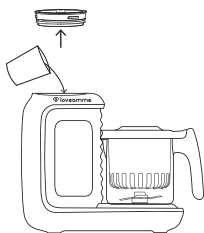

- 6) 握住搅拌杯手柄，并按照顺时针方向将搅拌杯平盖顺旋开。

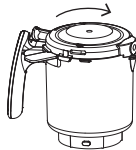


- 7) 固体食材放入蒸篮蒸煮之前，请先将它们切成不超过1.5cm的小块。

注意：请不要同一时间蒸煮大量的固体食材。大量的固体食材应分批，依次进行蒸煮以确保所以食材完全煮熟。




- 8) 将装有食材的下层蒸篮放入搅拌杯中。

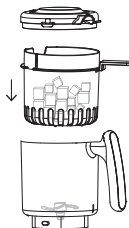

- 9) 装上搅拌杯平盖并按照逆时针的方向将平盖旋到位。搅拌杯平盖上的“▶”应对准搅拌杯手柄上的“◀”以确保其锁到位。

- 10) 将搅拌杯放在搅拌杯座上并按照逆时针方向将搅拌杯旋到位。搅拌杯上的“↓”应对准杯座上的“Close”标志的中心位置以确保其锁到位。

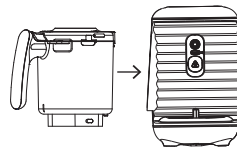

- 11) 先按下开/关键，再点击蒸煮键以启动蒸煮模式。点击LED面板上的加时键或减时键(+/-)以设定蒸煮食物的时间。食物蒸煮将自动开始。






03 LoveCook Pro功能使用及操作

当您需要蒸煮更多食材或需要蒸煮两种不同的食材时，可以使用上层蒸篮。以下是具体的操作步骤：


12) 先依照以上第6、7步骤将一部分或者一种食材切好放进下层蒸篮内。

13) 将上层蒸篮放在下层蒸篮上。上层蒸篮的缺口位置应对准下层蒸篮的弧形缺口内)。

14) 将其余食材放进上层蒸篮内并重复以上第8至10步骤。在这种上、下层蒸篮同时使用的情况下，请使用搅拌杯高盖。

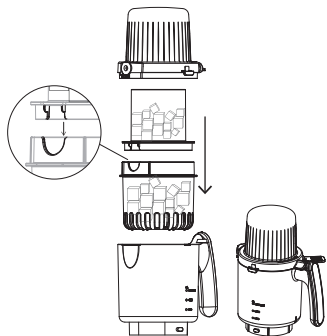


15) 当蒸煮完成后，请从搅拌杯座上取下搅拌杯并旋开搅拌杯盖子。将蒸篮中蒸好的食物倒入搅拌杯内并根据个人需要加入其他配料。随后，请盖上防溢盖并旋紧搅拌杯盖子。使用蒸煮模式后请及时清洗蒸篮。

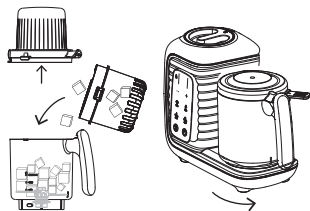

3C. 搅拌

1) 将您所需要搅拌的食材放进搅拌杯内并旋上搅拌杯平盖。将搅拌杯放在杯座上并按逆时针方向将搅拌杯旋到位。

2) 点击LED面板上的自动搅拌/清洁功能键以启动自动搅拌模式。它会持续大约1.5分钟。

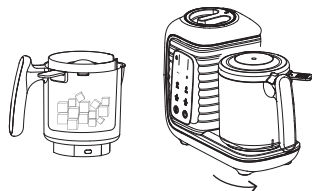

3) 如果您想操纵搅拌功能，请先按下开/关键 终止自动搅拌功能的运作。点击并长按LED面板上的手控搅拌功能键以启动手控搅拌模式（**注意!** 每个循环不可超过15秒。在循环之间请暂停10秒）。

4) 搅拌完成后，请用勺子检查辅食中没有任何凝块或异物。在喂食您的宝宝之前，请将辅食倒入一个杯子或碗里冷却。

! 注意:


如有小块食材粘在搅拌杯的表面上，请先将搅拌杯从搅拌杯座上取下并旋开杯盖。用勺子将食材从搅拌杯的表面上刮下。

3D. 解冻

1) 打开水箱盖并加入约60ml水至水箱内。把奶瓶或食物容器放进水箱内。

2) 点击暖奶功能键 后，点击LED面板上的加时键以将时间调整至4分钟(冷冻奶)或5分钟(冷冻食品)。辅食机将自动进行解冻功能。

3) 完成解冻后，辅食机会连续发出5声“滴”的提示音。

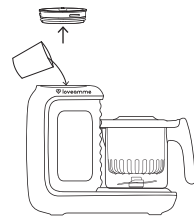


3E. 暖奶

1) 打开水箱盖并加入约60ml水至水箱内。把奶瓶或食物容器放进水箱内。

2) 点击暖奶功能键后，辅食机将自动进行暖奶功能。当您要加温120ml以上的奶水时，请定时至约2.5分钟。当您要加温120ml以下的奶水时，请将时间调整至1分钟，以避免奶水过度加热。

3) 在完成暖奶后，辅食机会连续发出5声“滴”的提示音。

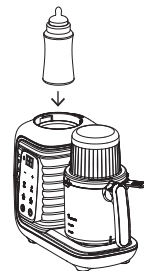


注意: 暖奶功能的温度会受周围环境温度、加入的水量以及奶瓶的材质和厚度所影响。请在喂奶给您的宝宝之前，从奶瓶中倒出几滴奶在手背上试温以确保不会烫伤宝宝。



03 LoveCook Pro功能使用及操作

3F. 消毒

 此辅食机可消毒的物件包括宝宝的奶瓶、奶嘴、勺子、磨牙棒等物品。请在启动消毒功能之前，把搅拌杯清洗干净。

- 1) 将需要消毒的物品放入搅拌杯内并旋上搅拌杯高盖。将搅拌杯放在杯座上并按照逆时针方向将搅拌杯旋到位。
- 2) 点击消毒功能键 。定时显示会显示“10”，并自动开启消毒功能。您可根据个人需求点击LED面板上的加时键或减时键 (+/-) 以设定消毒时间。
- 3) 在完成消毒功能后，机器会发出5声“滴”的提示音。



- 5) 消毒完成后，请按照您的需求再次给水箱加入净水。蒸煮时间越长，所需加入的水就越多。

- 6) 握住搅拌杯手柄，并按照顺时针方向将搅拌杯平盖顺旋开。



- 7) 将固体食材放入粥/米饭/意面烹饪杯蒸煮之前，请先将它们切成不超过1.5cm的小块。


注意：请不要同一时间蒸煮大量的固体食材。大量的固体食材应分批，依次进行蒸煮以确保所以食材完全煮熟。



3G. 粥/米饭/意面烹饪杯


进行消毒

- 1) 按照顺时针方向将水箱盖顺旋开，给水箱加入约200ml的净水。装上水箱盖。
- 2) 按照逆时针的方向将平盖旋到位。然后再把搅拌杯旋到位。搅拌杯上的“↓”应对准杯座上的“Close”标志的中心位置以确保其锁到位。
- 3) 长按开/关键3秒以启动辅食机。
- 4) 在蒸煮前，请先按下消毒键给水箱和搅拌杯消毒。建议进行5分钟的消毒。点击LED面板上的加时键或减时键 (+/-) 以设定消毒的时间。

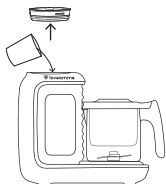

- 8) 将粥/米饭/意面烹饪杯加进搅拌杯里，并按照逆时针方向将搅拌杯平盖旋紧。


- 9) 搅拌杯平盖上的“▶”应对准手柄上的“◀”以确保平盖锁到位。

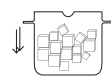




03 LoveCook Pro功能使用及操作

10) 将搅拌杯放在搅拌杯座上并按照逆时针方向将搅拌杯旋到位。搅拌杯上的“↓”应对准杯座上的“Close”标志的中心位置以确保其锁到位。

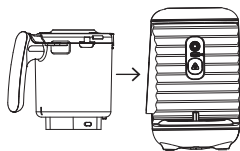

11) 先按下开/关键，再点击蒸煮键以启动蒸煮模式。点击LED面板上的加时键或减时键 (+/-) 以设定蒸煮食物的时间。食物蒸煮将自动开始。

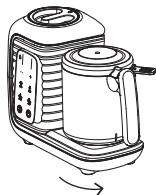

ⓘ 注意:

- 1) 在任何功能进行的过程中按下开/关键可终止此功能的运作。
- 2) 在使用完辅食机后，将此产品关机并把电源拔出。将水箱里的水倒出，用干布擦干水箱以保持水箱干净和清洁。

3H. 蒸煮与搅拌时间

蒸煮时间

蒸煮时间都是以200克的食材进行估计。切勿在每轮蒸煮超过200克的食材。在喂食您的宝宝之前，请确保食物的温度适合并已完成煮熟。

蔬菜

马铃薯	15分钟
萝卜	15分钟
西兰花	15分钟
西葫芦	15分钟
菜花	15分钟
南瓜	15分钟

水果

苹果	10分钟
梨	10分钟
桔子	10分钟
桃子	10分钟
李子	10分钟

肉类

鱼	15分钟
鸡	25分钟
小牛肉/牛肉	25分钟

烹饪肉类时，请每10分钟暂停一次，彻底搅拌均匀，以确保烹饪均匀。

搅拌时间

搅拌的时间会影响食物的质感。切勿在使用搅拌功能时，在搅拌杯内加入超过“MAX”标志的食材。您可参考以下搅拌时间来为您的宝宝准备不同阶段的辅食。

4个多月

适合准备初期给宝宝尝试的辅食。搅拌约2分钟来准备质感顺滑的辅食。

6个多月

适合准备不同口味及质感的辅食。搅拌约15秒。

10个多月

适合给有一定咀嚼能力的宝宝准备有点硬度的辅食。搅拌约4至10秒。

搅拌杯内聚集的食物汁含有美味、丰富的营养。食物汁可搅拌入初期辅食来增加辅食的顺滑质感。您也可倒出食物汁以制作较有质感的辅食。

概述的混合时间是估计的。



04 清洁和保养

储存

- 1) 存放此产品前，请先倒空水箱。
- 2) 存放此产品前，请先确保所有部件已清洁且晾干。
- 3) 存放此产品时，请将搅拌刀片放入搅拌杯中以防止损坏。

清洁

- 1) 将辅食机关机并切断电源。
- 2) 取下搅拌杯的杯盖。
- 3) 当要从搅拌杯中取出刀片时，请一手握住搅拌刀架，然后另一手顺时针旋转刀架旋螺（如图A）。
- 4) 将搅拌器螺丝上小心取下硅胶环。
- 5) 使用此产品后，请立即冲洗刀片及硅胶防水圈。
- 6) 使用此产品后，请立即利用温水和中性洗涤剂清洗辅食机的其他部件。
- 7) 在必要情况下，您可以使用干布擦拭辅食机器的主机。
- 8) 检查水箱中是否有食物进入。若有食物在水箱中，请立即对水箱进行清洁。
- 9) 在没有使用水箱时，请保持水箱的干燥状态，以防止细菌生长。
- 10) 要重新组装单元，进行步骤2-4以相反的顺序。改装时请确保硅胶环槽口与搅拌器螺杆槽口对齐。硅胶环应该朝下。

*包装盒里包含1个硅胶环作为更换部件

全自动清洗搅拌杯功能

- 1) 从搅拌杯座上取下搅拌杯，旋开搅拌杯杯盖并加入温水和中性洗涤剂至“MAX CLEANING”的位置。
- 2) 旋紧搅拌杯平盖/高盖，把搅拌机放回搅拌杯座上并旋锁到位。

05 水箱清洁与除垢


您应每周都对本产品的水箱进行一次除垢。在产品中使用纯净水或过滤水，可减少水垢的聚集。如果您生活在硬水区，因此类水中所含的矿物质会导致水箱易聚集水垢，所以必需经常进行除垢。请与您的供水商查询关于您的水质。

- 1) 您可使用除垢粉或自制除垢液。
 - a) 本产品附送了一包除垢粉。在水箱内加入最大容量的水后，倒入除垢粉并搅拌均匀，并盖紧水箱盖。
 - b) 将一小袋柠檬酸（约10g）加入约200ml的纯净水后，一起倒入水箱中，并盖紧水箱盖。
 - c) 将150ml水与50ml白醋的溶液（浓度为8%的醋酸）搅拌均匀后，倒入水箱进行除垢，并盖紧水箱盖。

- 3) 点击自动搅拌/清洁功能键以启动自动清洗功能。
- 4) 一轮自动清洗完成后，辅食机会连续发出五声“滴”的提示音。请倒出洗涤水并重复清洗2至3轮。

! 注意:

- 1) 每次使用本产品后，请立即清洗。
- 2) 切勿将本产品的机身、电源线或插头浸入水中。
- 3) 切勿在本产品中使用任何漂白性或化学性消融液/药片。
- 4) 切勿使用钢丝绒、强效清洁剂或腐蚀性液体（例如汽油、丙酮或酒精）来清洗本产品。
- 5) 此产品的刀刃非常锋利。当您处理刀片时，请非常小心以避免割伤。
- 6) 您可在用水冲洗刀片后，将其放入洗碗机中继续清洗。除了辅食机主机外的其它所有部件均可放入洗碗机内进行清洗。

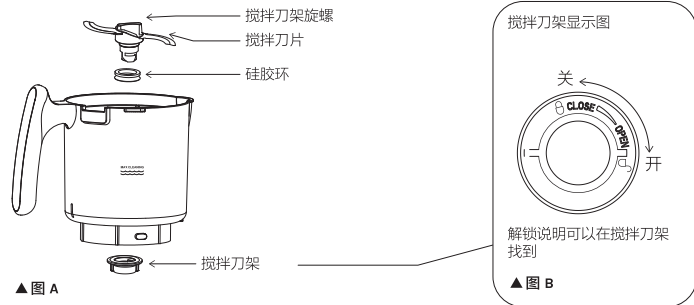

▲图 A

▲图 B

- 2) 按照逆时针的方向将平盖旋到位。然后再把搅拌杯旋到位。点击蒸煮功能键后，点击LED面板上的加时键或减时键(+/-)到5分钟，除垢功能将自动开启。
- 3) 蒸煮5分钟之后，请关机，并断开电源。
- 4) 将使用过的除垢水或醋酸水溶液从水箱中倒出。
- 5) 请用清水将水箱和搅拌杯彻底冲洗干净。
- 6) 再次使用本产品前，请在水箱中加入100-200ml的水。在空搅拌杯里对本产品进行一轮10分钟的蒸煮功能以便祛除任何残留的气味。
- 7) 在没有使用水箱时，请保持水箱的干燥状态，以防止细菌生长。



06 故障分析与诊断

本章归纳了使用此产品时可能遇到的问题。如果您无法根据下面的信息解决问题，请与当地的指定批发商联系。

问题	分析原因	解决方式
产品不能运作	检查电源插头是否正确连接、电源开关是否打开。	将插头连接至电源并开启电源。请确保使用220V的标准电压。
产品没有蒸汽	检查水箱是否有水。检查搅拌杯平盖/高盖是否正确旋转到位、搅拌杯放入杯座的位置是否正确。	请先将水加入水箱内，等待1-2分钟再启动蒸煮功能。搅拌杯盖上的“▶”应对准手柄上的“◀”；搅拌杯放入杯座时，搅拌杯上的“↓”应对准杯座上的“Close”标志的中心位置。
搅拌刀不转动	检查搅拌杯平盖/高盖是否正确旋转到位、搅拌杯放入杯座的位置是否正确。	搅拌杯盖上的“▶”应该对准手柄上的“◀”；搅拌杯放入杯座时，搅拌杯上的“↓”对准杯座上的“Close”标志的中心位置。
蒸煮功能失效	温控器保护中。	每轮蒸煮食物后，需等待2-3分钟后方可再次进行下一轮蒸煮。或者，在水箱内加水，等待1-2分钟后再次运作蒸煮功能。
搅拌功能失效	<ol style="list-style-type: none"> 1) 搅拌杯平盖/高盖没有正确旋转到位。 2) 搅拌杯放入杯座的位置不正确。 3) 需搅拌的食材太多或过硬。 	<ol style="list-style-type: none"> 1) 将杯盖旋到位置 - 搅拌杯盖上的“▶”应该对准手柄上的“◀”。 2) 将搅拌杯旋到位置 - 搅拌杯放入杯座时，搅拌杯上的“↓”对准杯座上的“Close”标志的中心位置。 3) 搅拌食物最大容量不超过300ml。
搅拌机正常， 搅拌食物的电力较弱	<ol style="list-style-type: none"> 1) 电源电压偏低。 2) 食物太硬或太稠。 3) 搅拌杯内放入过多食材。 	<ol style="list-style-type: none"> 1) 确认是否使用正确电压。 2) 搅拌食材前，请先蒸煮食材或者在食材内加水以将其软化。 3) 搅拌食物最大容量不超过300ml。
蒸汽力度过小， 食物不易完全蒸熟	<ol style="list-style-type: none"> 1) 蒸汽出口堵塞。 2) 食物体积过大。 	<ol style="list-style-type: none"> 1) 清理蒸汽出口。 2) 将食物切成不超过1.5cm的方块，或延长蒸煮的时间。
蒸食物时， 有水从水箱出口口喷出	水箱内的水位过高。	水箱内所加的水不可超过MAX标示的位置。



07 安全功能

- 1) 这个产品有固定安全锁特点。如果搅拌机杯或单/双甲板盖没有正确固定在适当的位置，该装置将无法正常工作。
- 2) 这个产品有过度加热的保护特点。如果蒸制过程之间的时间隔太短；如果调合时间过长；或正在处理的食物太多，则可能发生过热。如果过热保护功能在设备使用过程中被激活，水不足警告将亮起。请关闭电源并在继续使用前，让设备冷却几分钟。

08 授权转销商

新加坡:

Kim Hin Innovation Labs Private Ltd.
601 Sims Drive, Pan-I Complex,
Singapore 387382
Tel: (65) 6831 5020
care.il@kimhinintl.com

马来西亚:

Global Retail Network Sdn Bhd (921399-V)
Wisma Pang Cheng Yean,
Lot 5205C, Jalan Perindustrian Balakong Jaya 1/3,
Taman Perindustrian Balakong Jaya,
43300 Seri Kembangan,
Selangor Darul Ehsan, Malaysia
Tel: (03) 8940 6638
contactus@globalretail.com.my

香港:

Trade Solutions Ltd.
Unit D, 13A, Gemstar Tower,
No. 23 Man Lok Street, Hung Hom,
Kowloon, Hong Kong
Tel: (852) 2264 1282

与妈妈们联系

LoveAmme®的核心是由一群互相扶持，互相协助的妈妈们共同建立起的社区。您可以通过 LoveAmmeOfficial@facebook 及 loveamme.official@instagram 加入成为我们社区的一份子、在 www.loveamme.com 摄取更多有关婴儿辅食的相关资料，或发送电邮至 welcome@loveamme.com 与我们联系。

