

OWNER'S MANUAL

ACTIVATION

PULL OUT PLASTIC BLOCK-OFF (IF PRESENT) FROM THE CROWN AND PUSH THE CROWN ALL THE WAY IN TO POSITION 1.

TIME/DATE CALIBRATION

PULL OUT CROWN TO POSITION 3 AND ROTATE TO SET THE TIME.

PUSH/PULL THE CROWN TO POSITION 2 AND ROTATE COUNTER CLOCKWISE TO ADVANCE THE DATE (IF EQUIPPED WITH DATE WINDOW).

PUSH THE CROWN BACK TO POSITION 1 WHEN CALIBRATION IS COMPLETE.

DO NOT ADJUST THE DATE BETWEEN 9 PM AND 1AM TO AVOID POTENTIAL DAMAGE TO THE MOVEMENT.

BATTERY

THE BATTERY HAS A LIFE OF ABOUT 3 YEARS. TO REPLACE BATTERY, THE CASEBACK MUST BE REMOVED. IT IS RECOMMENDED TO REPLACE AND LUBRICATE THE GASKET WITH A SILICONE BASED LUBRICANT IN ORDER TO ENSURE WATER RESISTANCE. PROFESSIONAL SERVICING IS RECOMMENDED.

WATER RESISTANCE

WATER RESISTANCE IS ONLY
GUARANTEED WHEN THE CROWN IS
PUSHED ALL THE WAY IN. IT IS NOT
RECOMMENDED TO OPERATE THE
CROWN WHEN MOISTURE IS PRESENT
ON THE WATCH. IF EXCESSIVE
MOISTURE IS PRESENT INSIDE THE
CASE, SEND THE WATCH IN FOR
SERVICING IMMEDIATELY. SLIGHT
FOGGING MAY CLEAR ITSELF WITHIN A
DAY. IF FOGGING PERSISTS, SEND THE
WATCH IN FOR SERVICING.
INSPECTION AND SERVICING OF
SEALS IS RECOMMENDED WITH
EVERY BATTERY REPLACEMENT FOR
OPTIMAL PERFORMANCE.

CLEANING

PERIODICALLY CLEAN YOUR WATCH FROM OUST, DIRT, PERSPIRATION BY WIPING GENTLY WITH A DAMP SOFT CLOTH. A MILO SOAP IS ALLOWED TO ASSIST WITH CLEANING. AVOID ANY HARSH CLEANERS TO PREVENT DAMAGE TO THE WATCH.

OPERATING ENVIRONMENT

IF EXPOSED TO SALT WATER, RINSE OFF THE WATCH WITH FRESH, CLEAN WATER AND WIPE DRY WITH A SOFT CLOTH TO PREVENT CORROSION.

DO NOT EXPOSE WATCH TO TEMPERATURES LOWER THAN -10°C OR HIGHER THAN 60°C. DO NOT EXPOSE WATCH TO STRONG MAGNETIC FIELDS, PHYSICAL SHOCKS, STATIC ELECTRICITY, OR HARSH CHEMICALS (SOLVENTS, CLEANERS).

WARRANTY

A 1 YEAR LIMITED WARRANTY APPLIES UPON RECEIPT OF YOUR WATCH. VISIT OUR WEBSITE RALLYNETICS.COM FOR MORE INFORMATION AND CONDITIONS.

