

HANG SMARTTM TV

PARTS INCLUDED

Wall Mount and TV Hooks



 
2 3/4" W. X 2 3/4" H.
WALL MOUNT | X2



1 3/8" W. X 2 1/2" H.
TV MOUNT | X2

Screws & Fasteners

Choose the screw that fits your TV



#12-1 3/4"
SCREWS | X4



3/8" x 1 3/4"
ANCHORS | X4



X2



3 MM-65 MM
NAILS | X8



M8-45 | X2



M8-35 | X2



M8-20 | X2



M8-12 | X2



M4/M5 10MM
SPACERS | X4



M6-35 | X2



M6-20 | X2



M6-12 | X2



M4/M5 5MM
SPACERS | X8



M5-30 | X2



 
M5-20 | X2



M5-12 | X2

These screws are universal. Use only the ones that match your TV

Measuring & Level



Ruler X1



Level X1

Attach level to ruler with sticky on back

Only Tools Required



Hammer



Phillips screwdriver


How-To Videos



How-To Videos


3 EASY STEPS

STEP 1

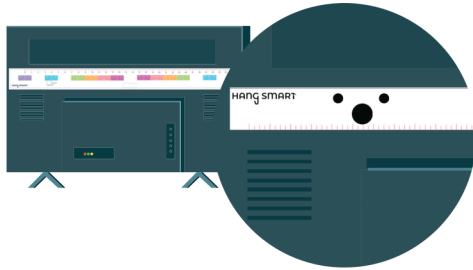

Apply your ruler (included) to the back of your TV. Find the screw holes for your TV, and match the colors per your tv holes. ****Note, the ruler has pre-set holes for you to match the back of your TV holes to.**


STEP 2

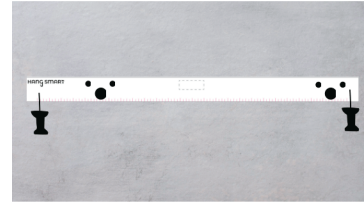


Make sure your level bubble is in between the lines.

Apply the ruler (with leveler) to your wall (desired height) and place your marks within the same holes of your TV (from step 1). Then, match your HangSmart wall mount with your wall marks and use the hammer & nails (for drywall) or Phillips screwdriver & screws (for cement walls) to insert your nails or screws into the designated holes.

STEP 3

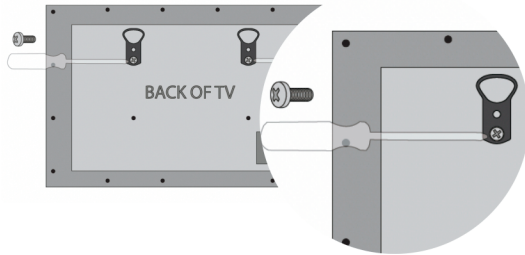

Screw your TV hooks (included) into the desired screw holes on the back of your TV. Find the screws that fit your tv.

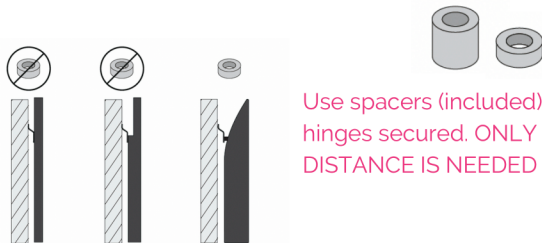

Use spacers (included) to keep the hinges secured. **ONLY USE IF DISTANCE IS NEEDED**


DRYWALL OR WOOD



CEMENT



HANG YOUR TV!

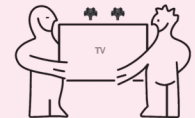

Product Safety Warning



CAUTION: This HangSmart™ TV Mount is intended for use only with LED displays weighing up to 150lbs. Use with products heavier than 150lbs may result in collapse of the mount and it's accessories causing possible injury.



WARNING: Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return to your dealer; contact customer service. Never use damaged parts!



WARNING:

Choking Hazard- Small parts not for children under 5 years or any individual who have a tendency to place inedible objects in their mouths.