

Wall Mount and TV Hooks

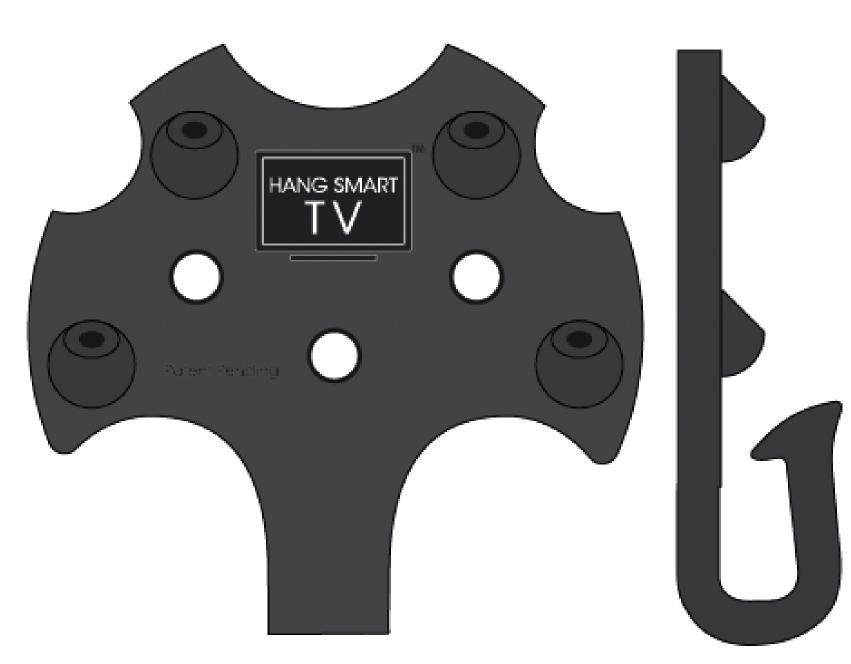

2 3/4″ W. X 2 3/4″ H. WALL MOUNT X2

 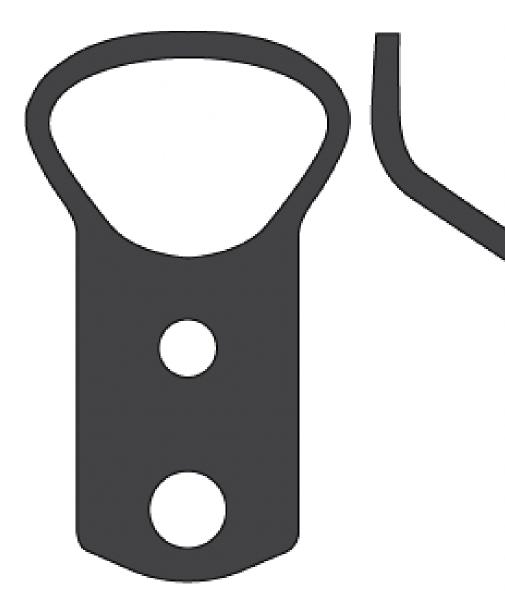


1 3/8"W. X 2 1/2"H. TV MOUNT X2


How-To Videos:





HANG SMART PARTS NCLUDED




#12 -1 3/4 " SCREWS X4

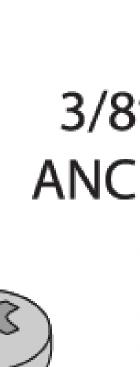


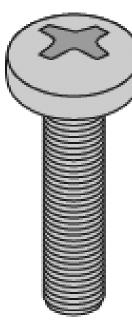

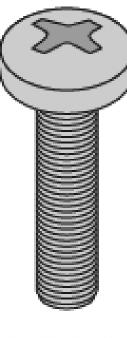

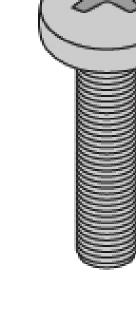


M8-35 | x2

 






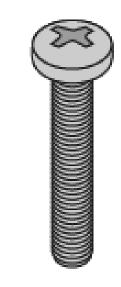

M4/M5 5MM SPACERS x4


M5-30 x2




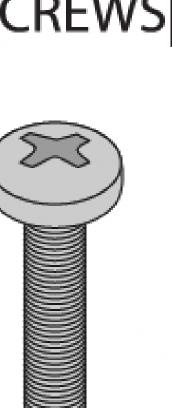



M8-45 x2

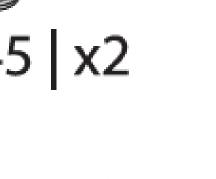


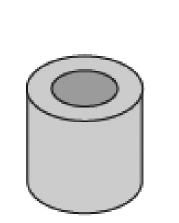


Screws & Fasteners



3/8″ x 1 3/4" ANCHORS | x4

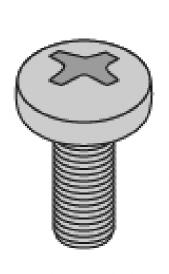

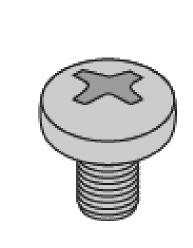


3 MM-65 MM

NAILS X8


M8-20 x2




M6-12 x2

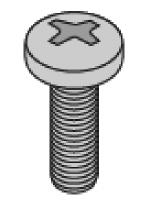


M6-20 x2

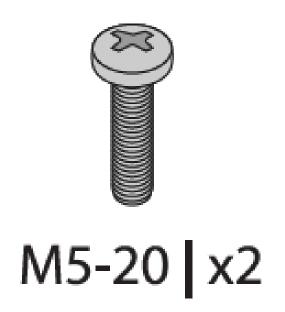




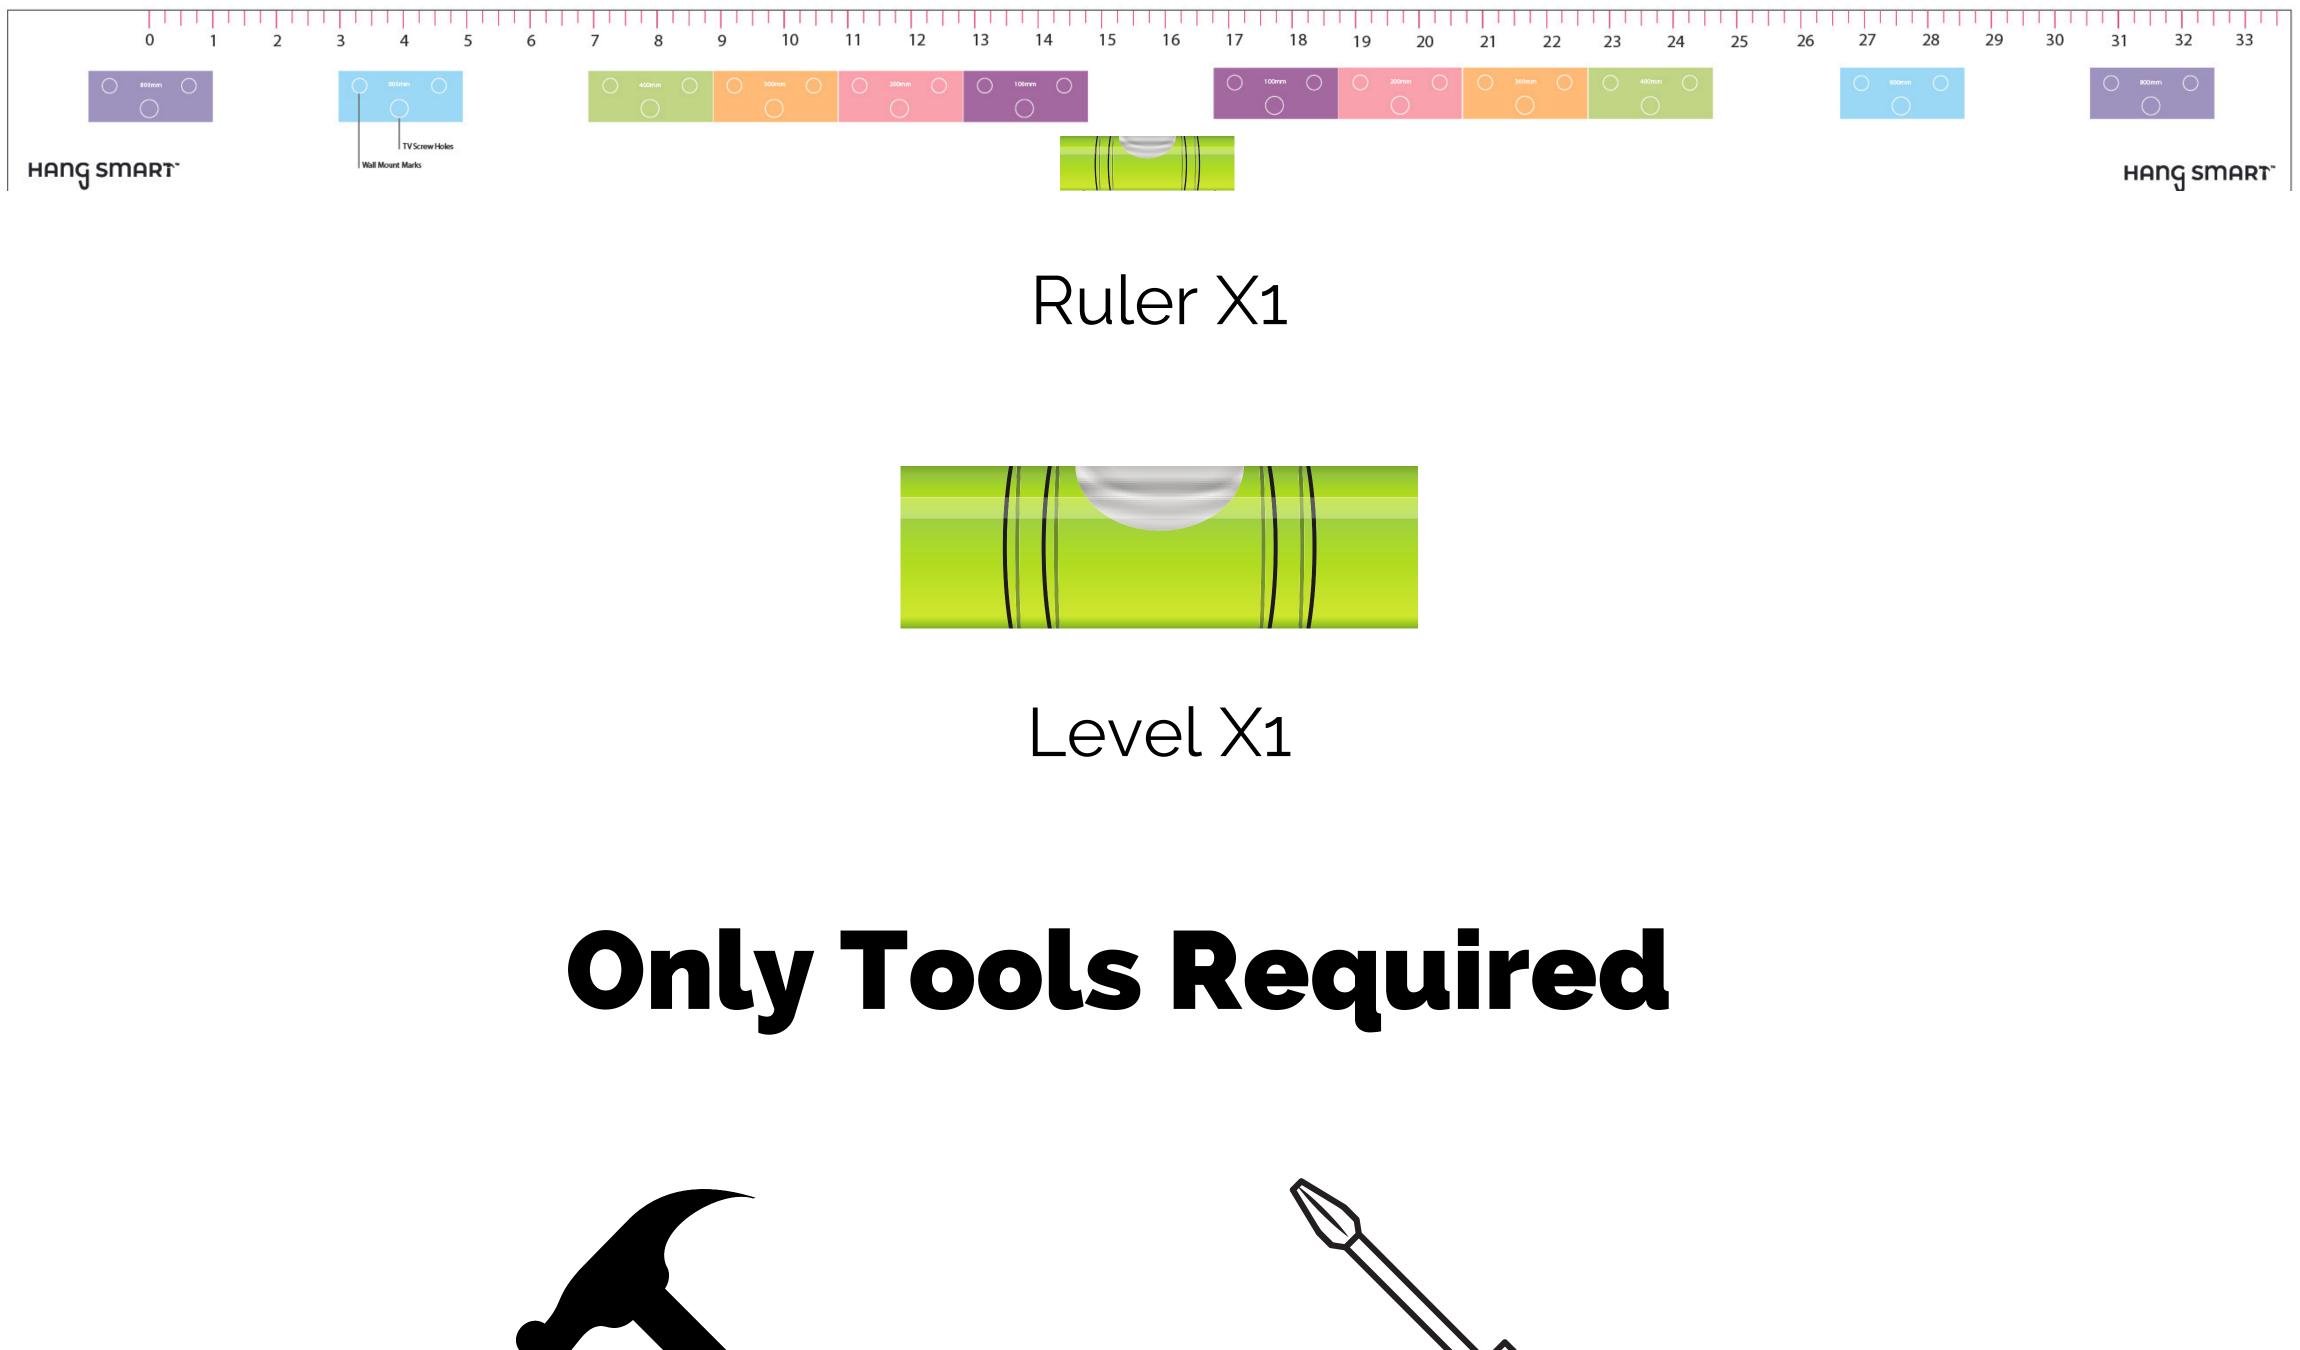

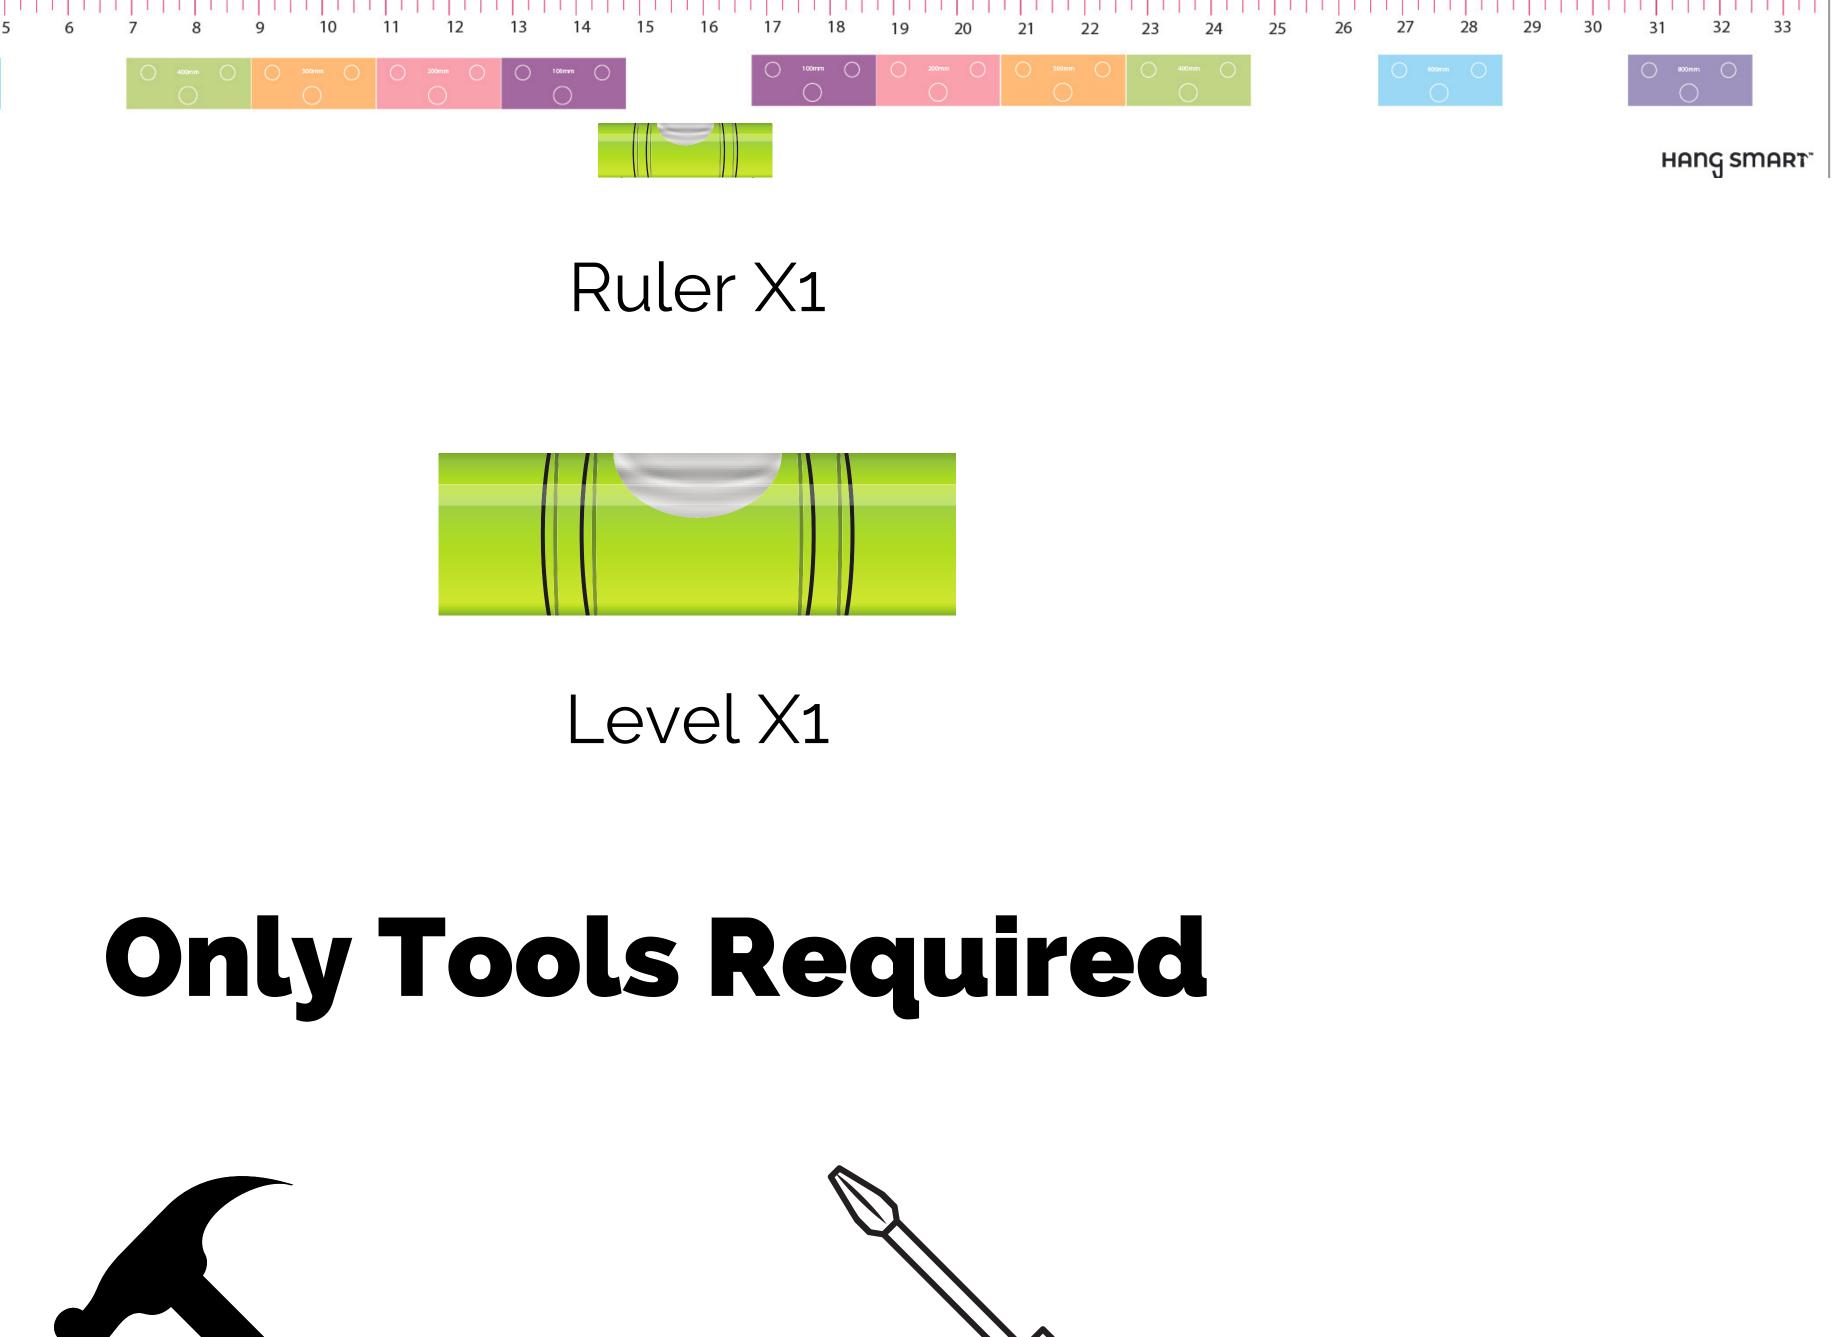




Measuring & Level

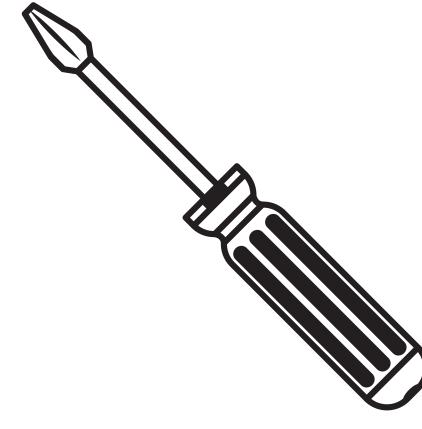



Hammer

Phillips screwdriver

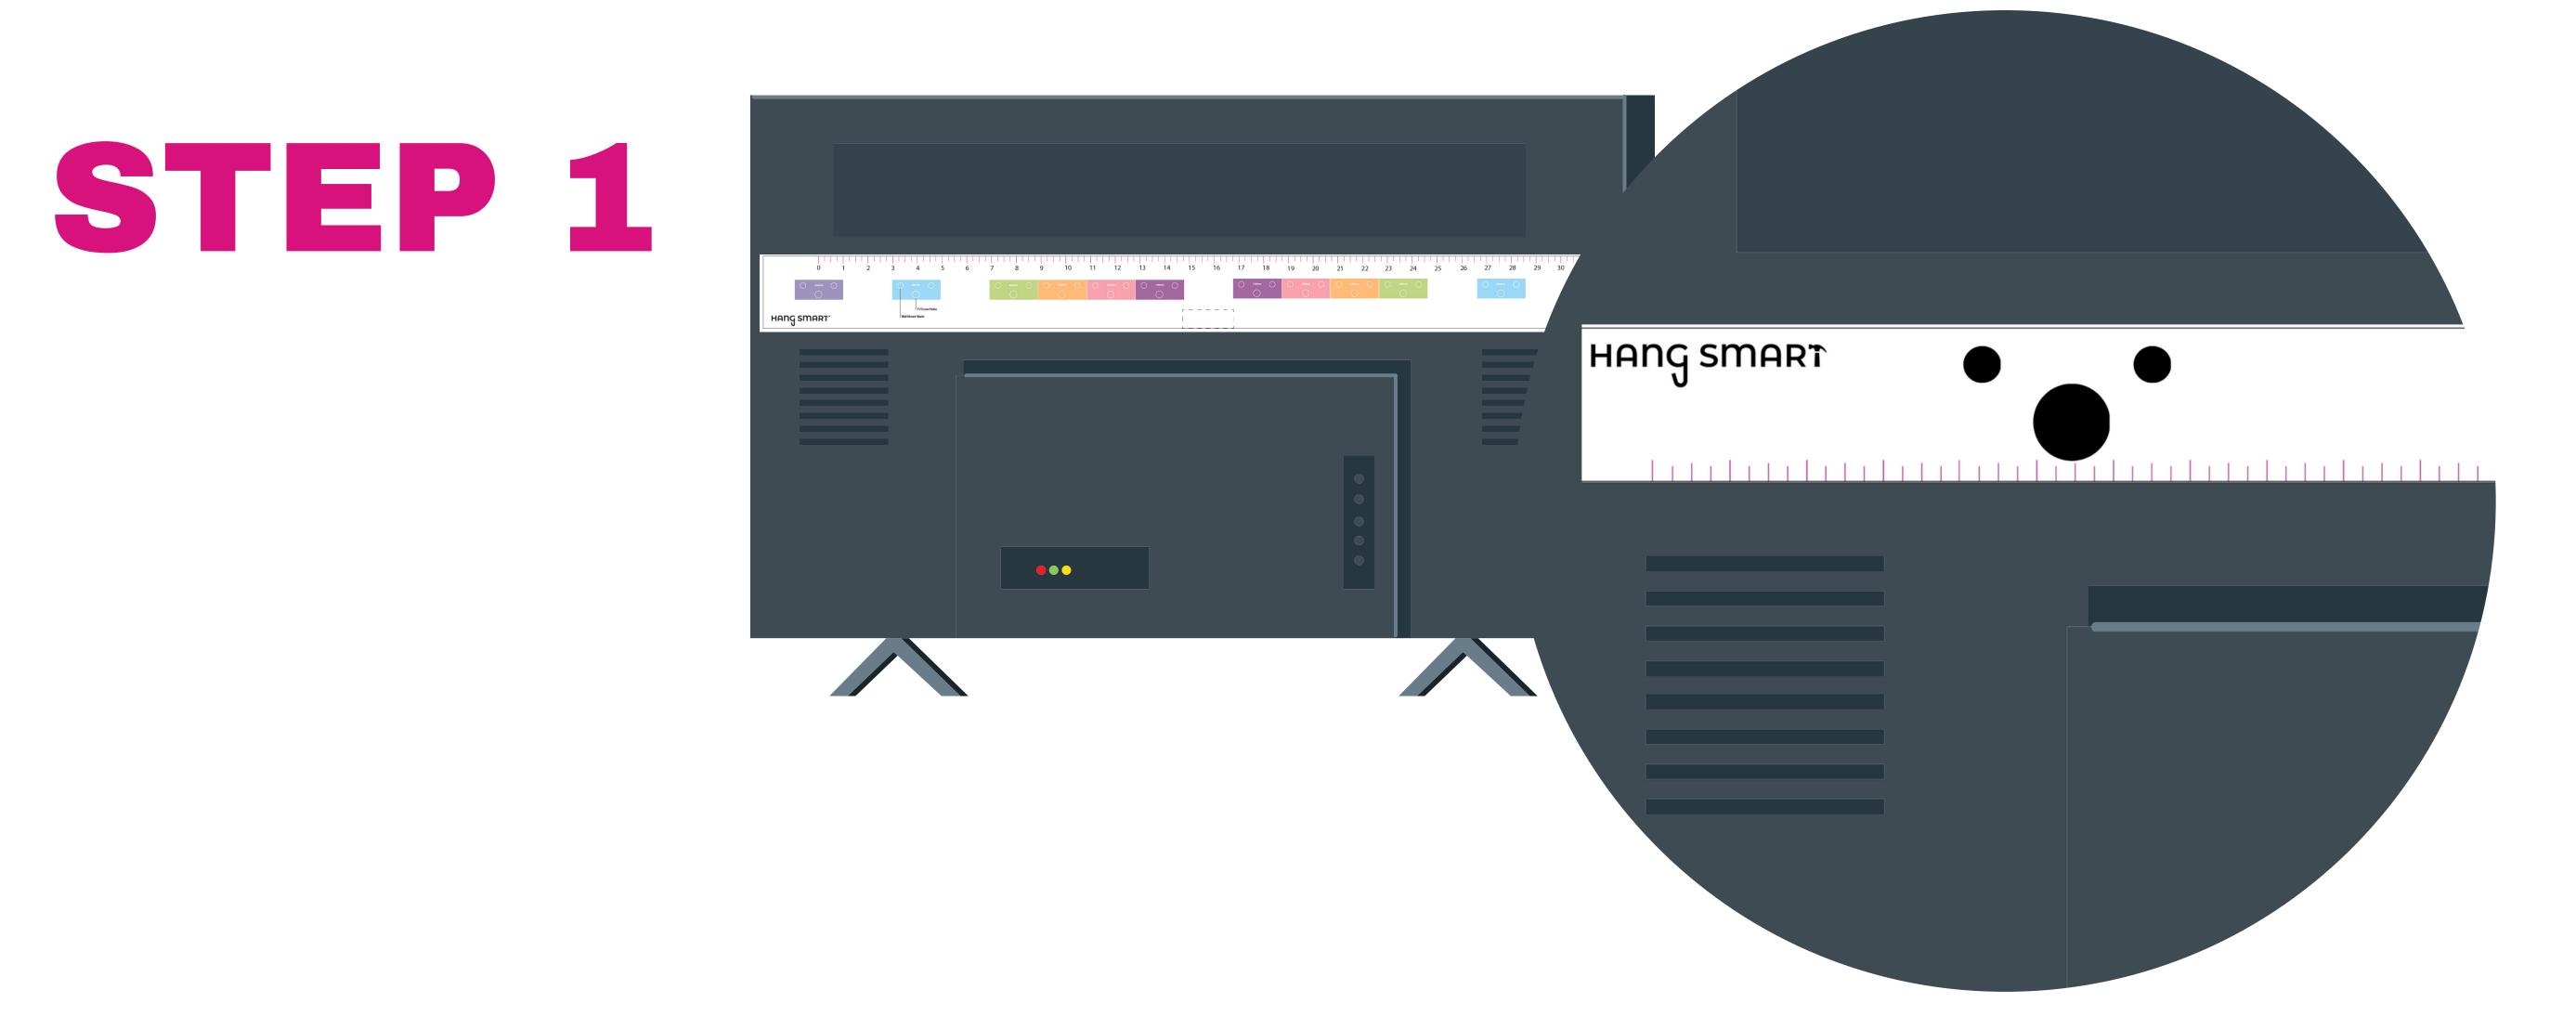


Apply your ruler (included) to the back of your TV. Find the screw holes for your TV, and match the colors per your tv holes. **Note, the ruler has pre-set holes for you to match the back of your TV holes to..

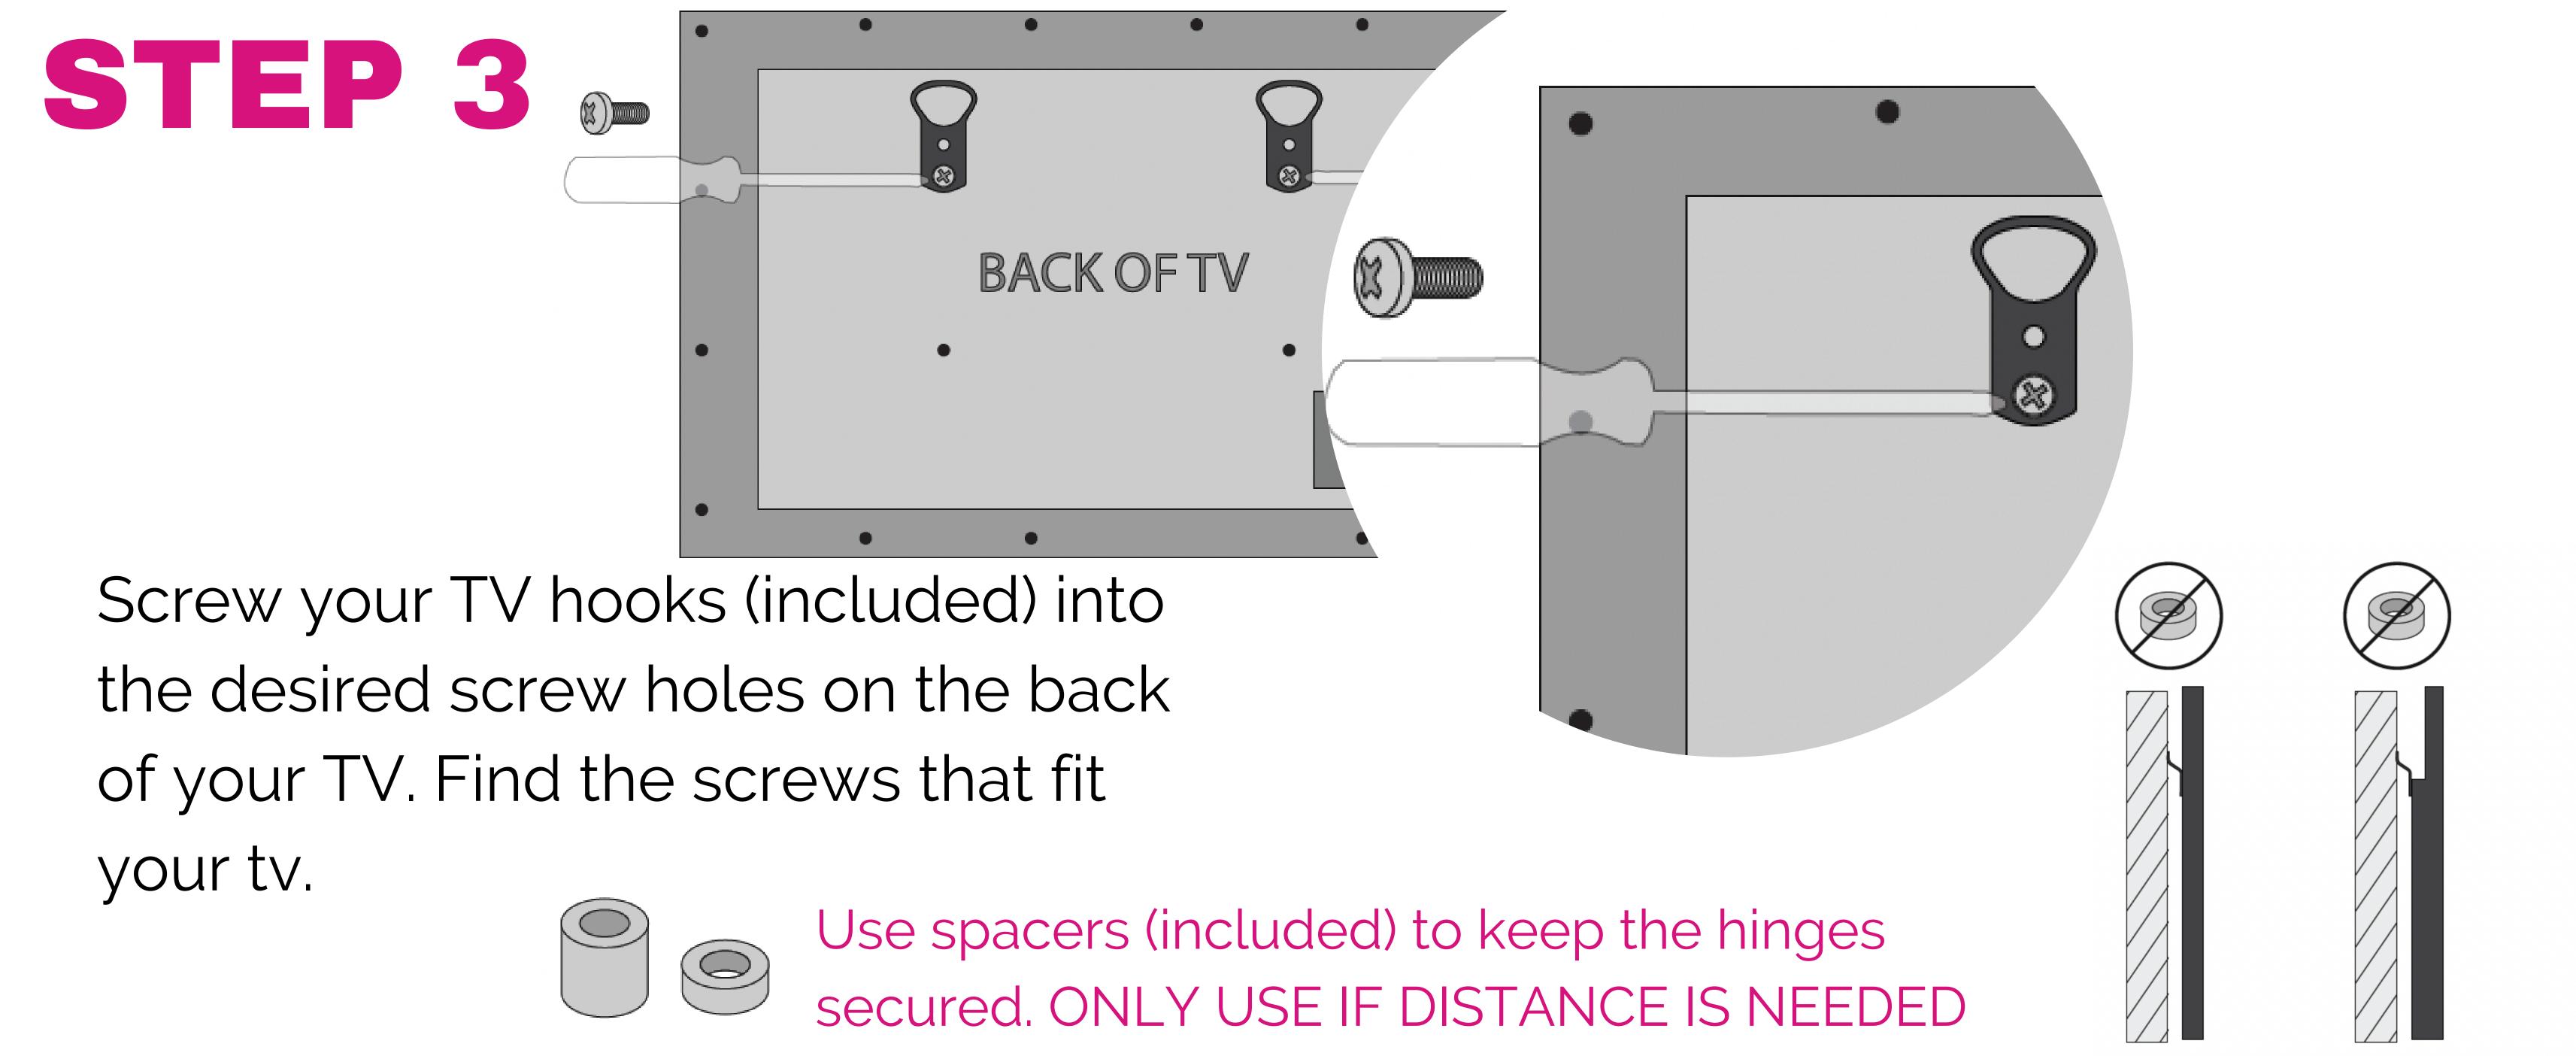

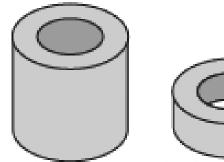






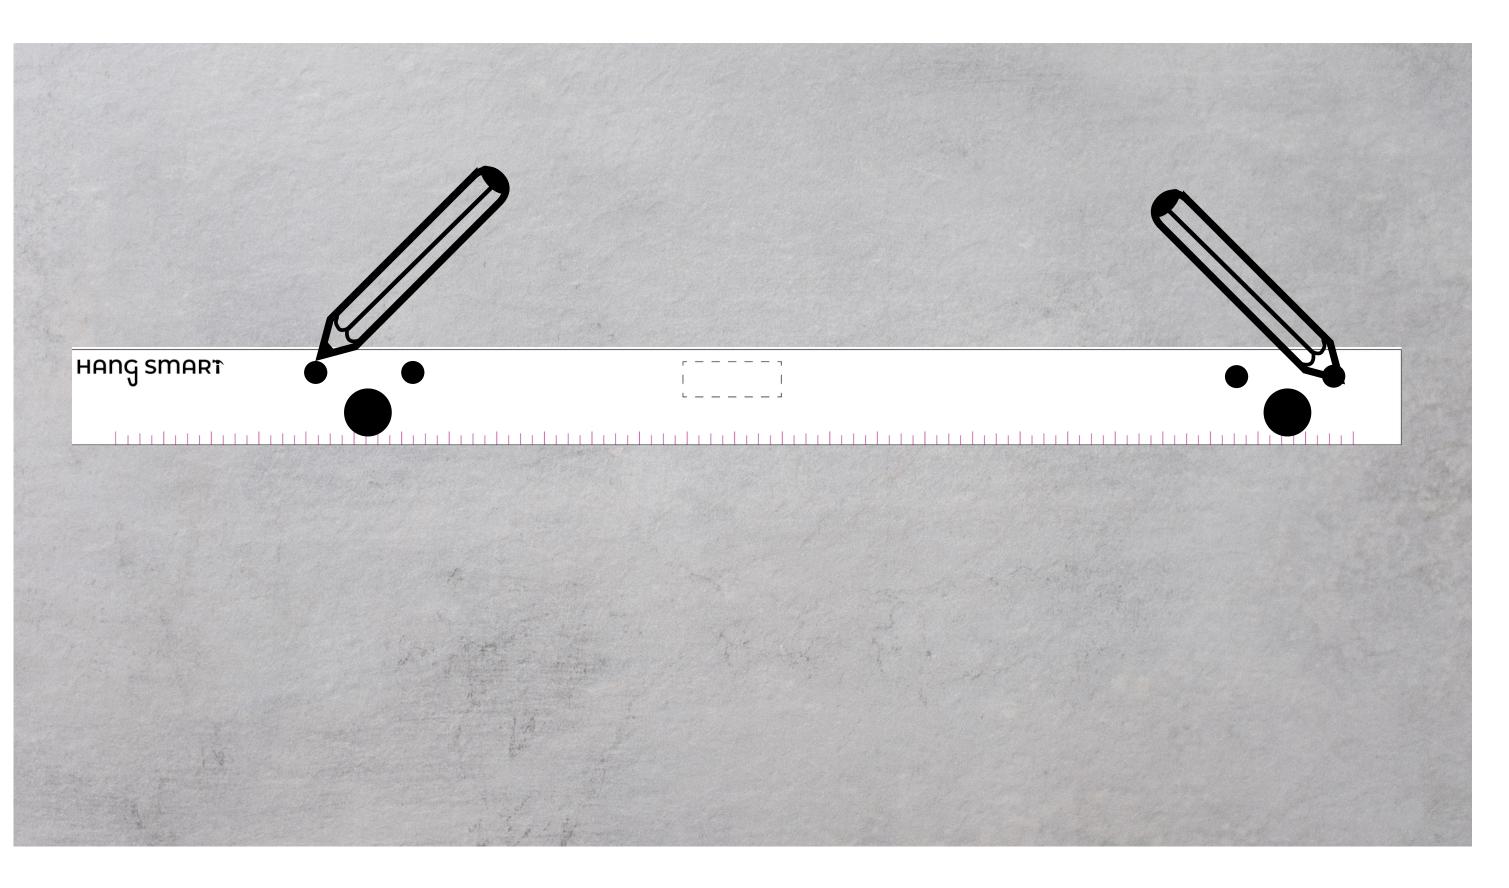


Apply the ruler (with leveler) to your wall (desired height) and place your marks within the same holes of your TV (from step 1). Then, match your HangSmart wall mount with your wall marks and use the hammer & nails (for drywall) or Phillips screwdriver & screws (for cement walls) to insert your nails or screws into the designated holes.


DRYWALL OR WOOD

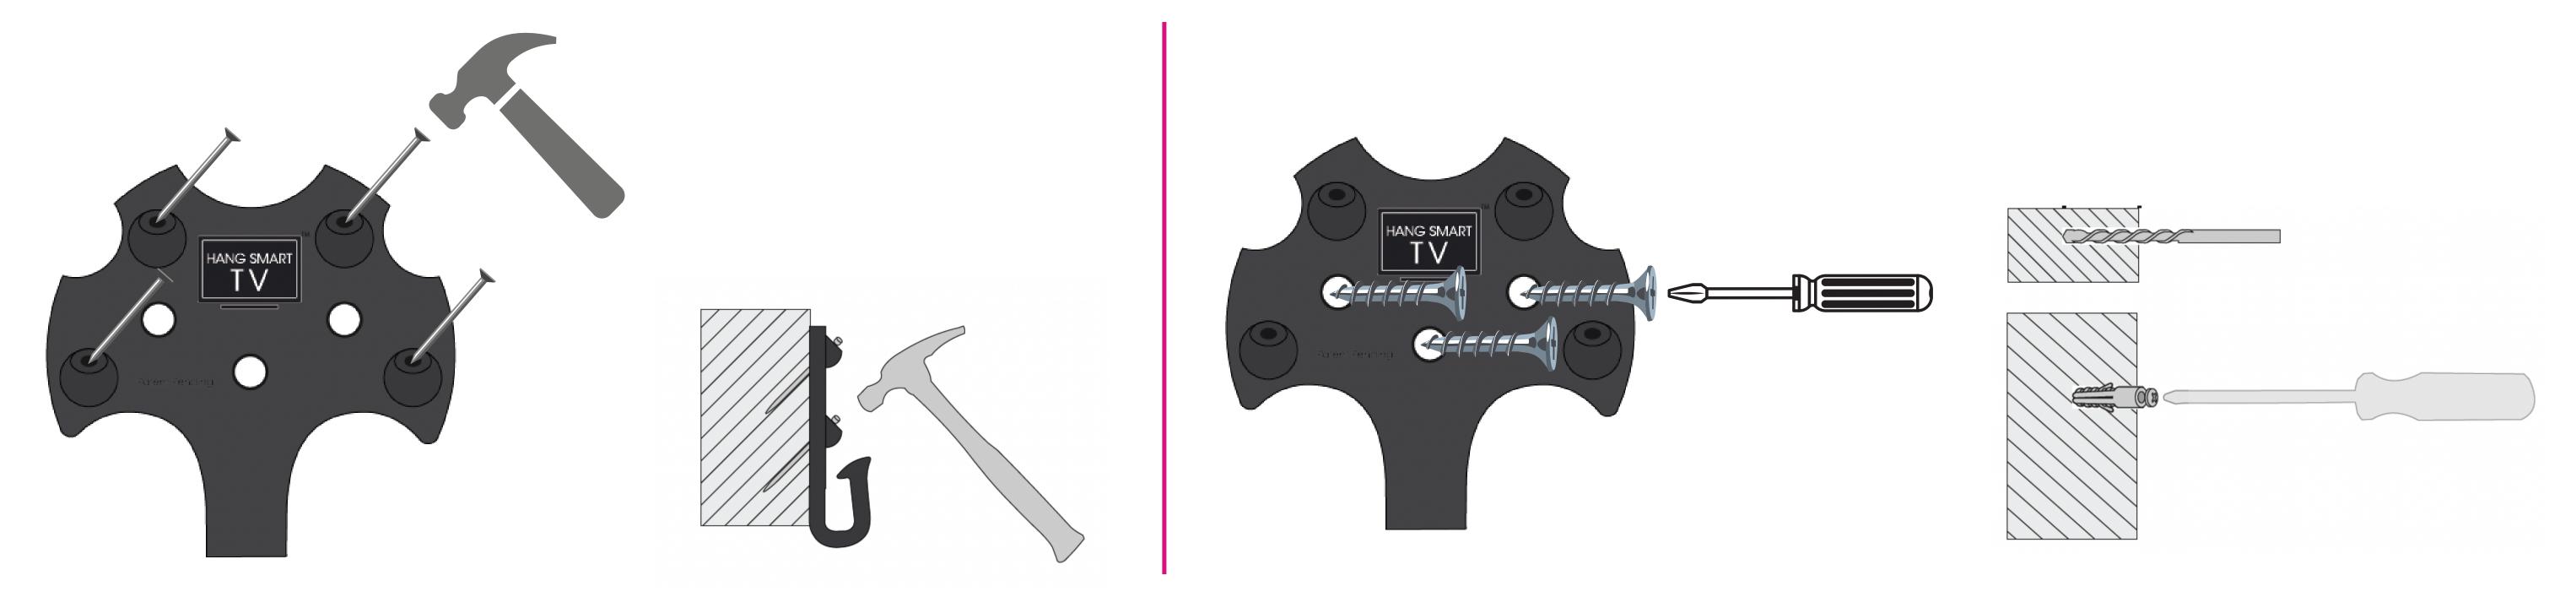




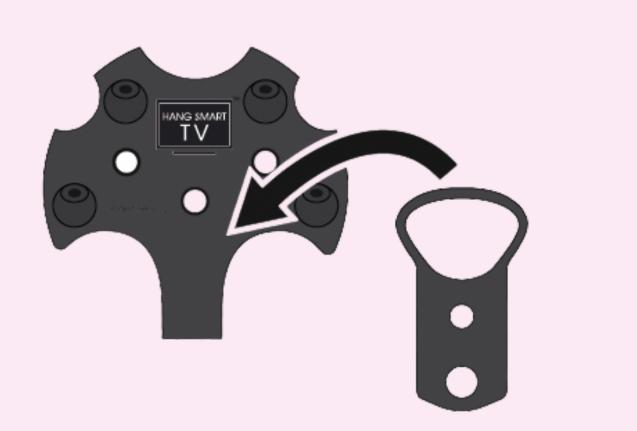



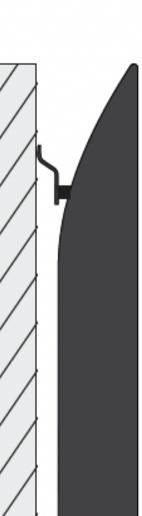

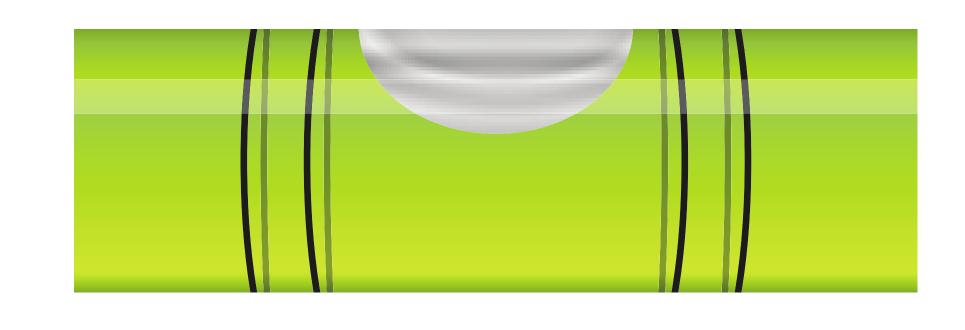

Make sure your level bubble is in between the lines.

CEMENT

