
RIGEL II MODE GROUP PROGRAMMING

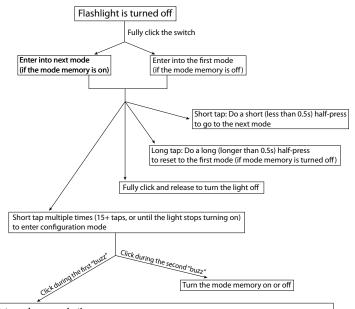

Enter into mode group selection:

In this mode, it slowly blinks out numbers sequentially from 1 to 12 and then repeats. To select a mode, click the button on the corresponding number of blinks. *Example*: To select group 5 (low-med-high), let it blink five times, then click the button. DO NOT leave the light in config mode for long periods of time as it may wear out the driver's memory faster.

Selectable Mode Groups: (output is approximate)

- 1. 0.1%, 1%, 10%, 35%, 100%, strobe, biking, battery-check
- 2. 0.1%, 1%, 10%, 35%, 100%
- 3. 100%, 35%, 10%, 1%, 0.1%
- 4. 1%, 20%, 100%, strobe, biking, battery-check, SOS
- 5. 1%, 20%, 100%
- 6, 100%, 20%, 1%
- 7. 0.1%, 1%, 10%, 50%, strobe, biking, battery-checking, SOS
- 8. 0.1%, 1%, 10%, 50%
- 9. 50%, 10%, 1%, 0.1%
- 10. 1%, 10%, 35%, 100%
- 11. 100%, 20%, strobe
- 12. 100% only