




Quick Start Guide

快速入門指南

DEEBOT X8 PRO OMNI

Product Introduction

產品介紹

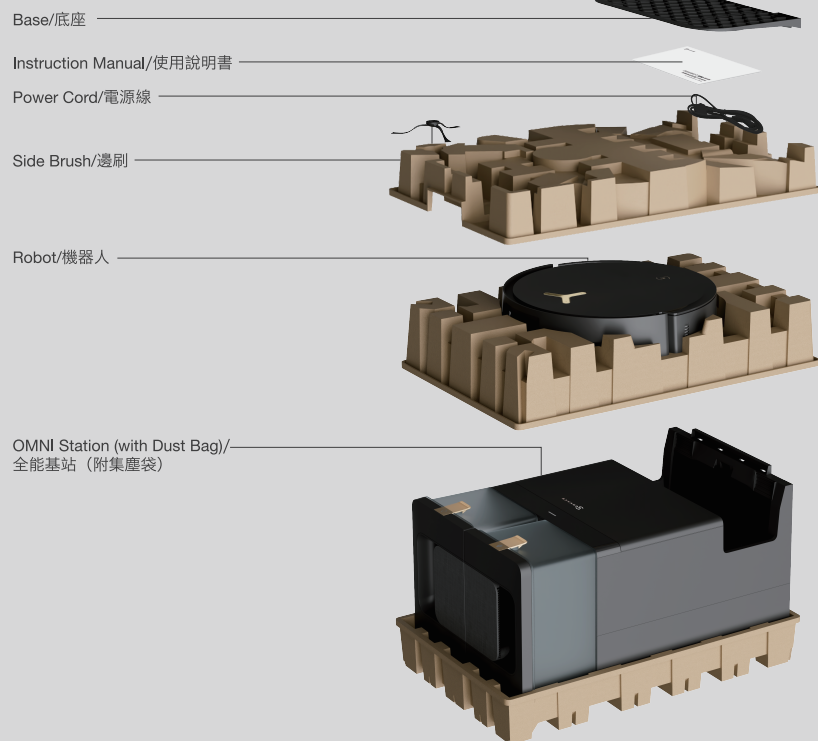

Tip: We recommend keeping the packaging after receiving your product to avoid any issues with after-sales service due to missing packaging during transportation.
提示：我們建議您在收到產品後保留包裝，以避免因運送過程中包裝遺失而導致售後服務發生任何問題。實際外觀以實際產品為準。

IMPORTANT SAFETY INSTRUCTIONS


重要安全說明

- Be careful of hot water burns. Do not touch the water outlet of the OMNI Station when the robot is working;
- If there are hard objects or small particle toys on the floor, avoid using the robot to clean to prevent damage;
- If there is ponding or sticky objects on the floor, avoid using the robot to clean to prevent liquid immersion;
- Do not use any liquid to rinse the robot and OMNI Station;
- For the first use, it is recommended to map your home first and repeat vacuuming for 2-3 times before mopping for better cleaning performance.
- Please replace the dust bag regularly;
- Please clean the mop washing tray regularly;
- Please clean the driving wheels regularly;
- Use only ECOVACS cleaning solution.
- 小心熱水燙傷。機器人在工作時請勿觸碰全能基站的出水口；
- 如果地板上有硬物或小顆粒玩具，請避免使用機器人清潔以免造成損壞；
- 如果地板上有積水或濕黏物體，請避免使用機器人清潔以防止液體滲入；
- 請勿使用任何液體沖洗機器人和全能基站；
- 首次使用時，建議先繪製好家中地圖，重複吸塵 2-3 次後再拖地，以獲得更好的清潔效果。
- 請定期更換集塵袋；
- 請定期清潔拖布清洗盤；
- 請定期清潔驅動輪；
- 請僅使用 ECOVACS 清潔液。

Learn more at www.ecovacs.com
請造訪 www.ecovacs.com 以瞭解更多資訊

Thanks for using ECOVACS voice assistant OK, YIKO.
You can say "OK, YIKO" to wake up the robot and enjoy an easier clean method.
After it is fully charged, you can enjoy quick mapping by saying "OK, YIKO, Start mapping my home".
感謝您使用 ECOVACS 語音助手 OK, YIKO。
您可以說「OK, YIKO」來喚醒機器人並享有更簡單的清潔方法。
充電電量後，只需要說「OK, YIKO」開始測繪我家的地圖」就可以進行快速測繪。


Note: For more voice features, refer to the ECOVACS HOME App.
附註：如需更多語音功能，請參閱 ECOVACS HOME 應用程式。

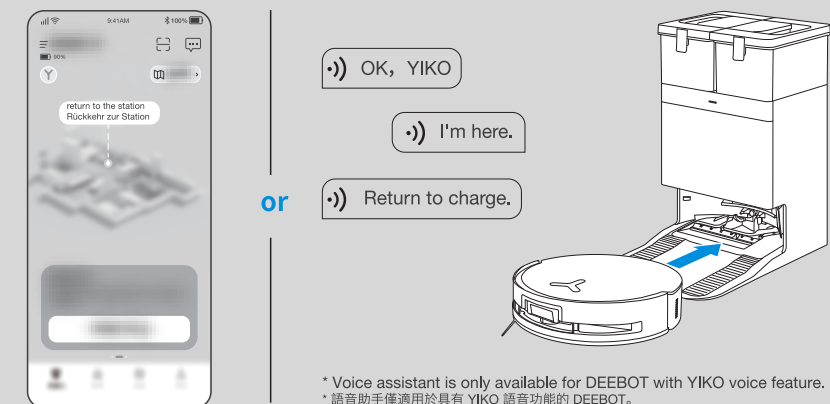

PRODUCT USE/產品使用


Station Setup/基站設定

1

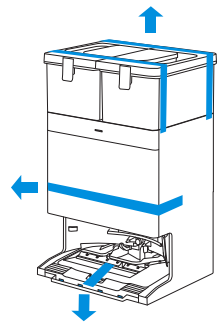


Please remove all protective materials from the OMNI station.
請先除去全能基站上的所有防護材料。

2

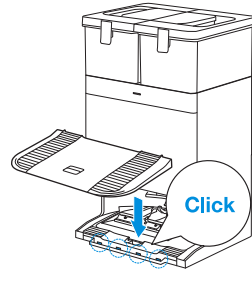


For the Base, a "click" sound indicates its proper installation with four slots well fitted.
底座安裝妥當時，會發出「咔噠」聲，表示四個卡槽皆已正確安裝。

3

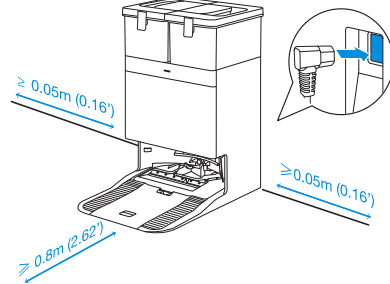


Place the station against a wall on and power it on.
將基站靠在反射表面的牆壁上並開啟電源。
Note: Place the station at a place with a strong Wi-Fi signal.
Recommended placement: ≥0.8m directly in front and ≥0.05m on both sides.
附註：將基站放置在Wi-Fi 訊號較強的地方。建議放置位置：正前方 ≥0.8 公尺和兩側 ≥0.05 公尺的範圍內。

4

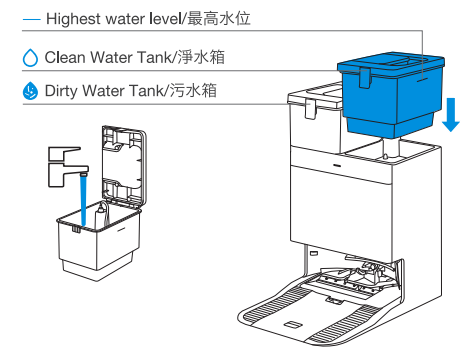


Fill the clean water tank with water to the maximum water level. Close the tank cover tightly and put the clean water tank back to the station.
對淨水箱注入淨水至最高水位。關緊水箱蓋，將淨水箱放回基站。
Note: The water stains in the water tank are left over from the function test. Please feel assured to use.
附註：水箱內的水漬是功能測試後所遺留的，請放心使用。
Do not fill the water tank with hot water as it may cause deformation.
Please wipe off the remained water stains on the outside of the station with dry cloth.
請勿將熱水注入水箱，否則可能會導致變形。請用乾布擦拭基站外部殘留的水漬。

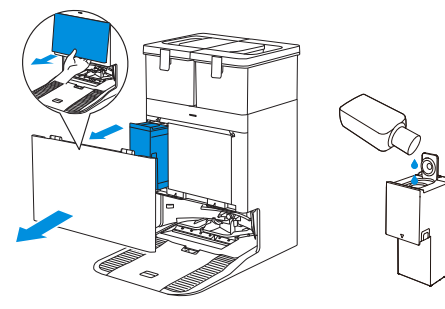

Open the cover of the station. Take out the cleaning solution box, fill it with purchased cleaning solution. Then put it back into the station and install the cover.
打開基站的蓋子。取出清潔液盒，注入購買的清潔液。然後將其放回基站並將蓋子裝上。
(Please visit www.ecovacs.com to purchase cleaning solution./ 請造訪 www.ecovacs.com 購買清潔液。)
Note: Do not use any other non-ECOVACS Cleaning Solution in case of potential damage to the product; do not fill the robot with too much Cleaning Solution to avoid overflow; skip this step when the Cleaning Solution is not necessary for daily use.
附註：請勿使用任何其他非 ECOVACS 的清潔液，否則可能會對產品造成損壞；請勿在機器人中注入過多的清潔液以免溢出；如果日常不需要使用清潔液，請跳過此步驟。


Robot Setup/機器人設定

1

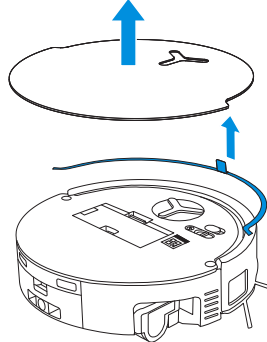


Please remove all protective materials from the robot.
請先除去機器人上的所有防護材料。

2

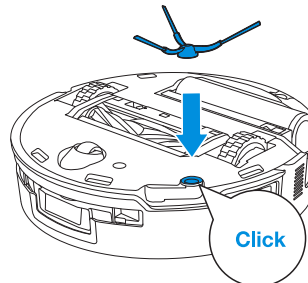


For side brush, a "click" sound indicates its proper installation.
邊刷安裝妥當時，會發出「咔噠」聲。


3

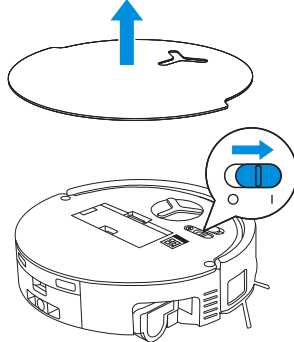

Remove the cover and power on the robot.
Boot is completed upon hearing a startup sound.
取下蓋子並開啟機器人電源。
聽到啟動音表示完成開機。

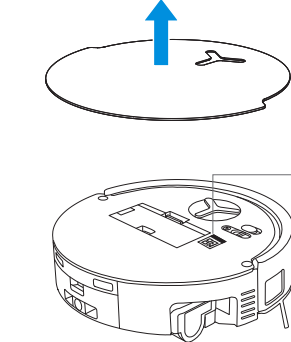

Scan the QR code under the top cover of the robot to get the full version of the user manual.
掃描機器人頂蓋下方的 QR 圖碼即可取得完整版使用手冊。

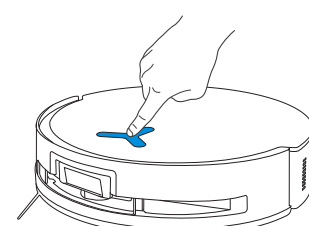

Buttons/按鈕
Short Press: Start/Pause
短按：開始/暫停
Double click: Roller mop release/retract (Robot not in the station)
按兩下：滾筒拖布釋放/收回（機器人不在基站內）
Press for 3s: Dock the station.
按住 3 秒：對接基站。

Connect the robot to APP/將機器人與應用程式連線


1



Search for ECOVACS HOME in the app store or scan the QR code above to install the ECOVACS HOME App.
在應用程式商店搜尋 ECOVACS HOME 或掃描上方 QR 圖碼以安裝 ECOVACS HOME 應用程式。


Note: Wi-Fi only supports the 2.4GHz band and currently does not support the 5GHz band.
附註：Wi-Fi 僅支援 2.4GHz 頻段，目前不支援 5GHz 頻段。

2

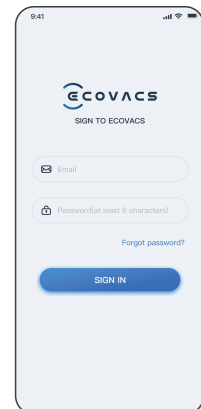

Open the ECOVACS HOME App and sign up with your email address.
開啟 ECOVACS HOME 應用程式並使用您的電子郵件地址註冊。


3

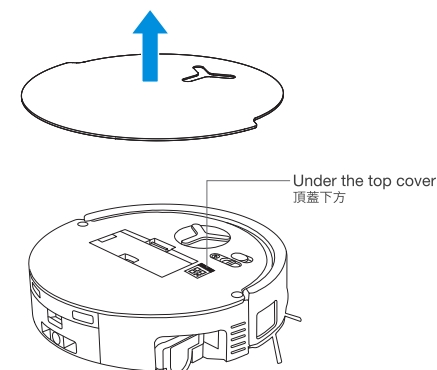

Open the top cover and use the ECOVACS HOME App to scan the QR code on the robot and then follow the instructions to complete the network connection.
打開頂蓋，使用 ECOVACS HOME 應用程式掃描機器人上的 QR 圖碼，然後依照指示完成網路連線。

Note: Please enable your bluetooth first as DEEBOT defaults to network connection via bluetooth.
附註：由於 DEEBOT 已預設透過藍牙進行網路連線，因此請先啟用您的藍牙。

4

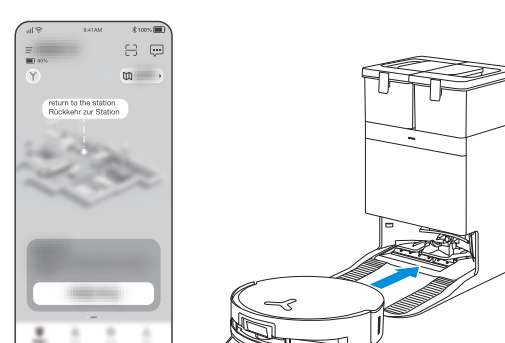

Place the robot near the station and tap "Dock" in the ECOVACS HOME App for auto-docking.
將機器人放置在基站附近，輕按 ECOVACS HOME 應用程式中的「對接」即可自動對接。

Note: Flashing button on the robot indicates charging is in progress; it is recommended to start cleaning after fully charged for the first use.
附註：機器人的按鈕閃爍表示正在充電；首次使用時，建議您先充電電量後再開始清潔。