


EN

USER MANUAL

TABLE TOP COOKER & BUILT-IN COOKER

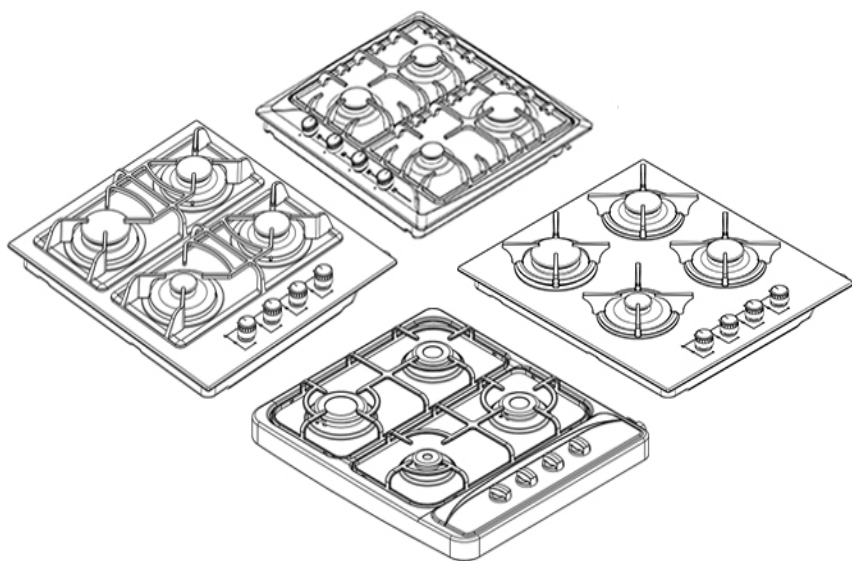

Please first read this manual!

Dear Customer,

We desire you get the most out of this product which is produced in the modern facilities on basis of high-quality. For this reason, please read this manual carefully and thoroughly prior to using the product and keep it for future reference. If you assign the product to anybody else, please give it together with the user’s manual. When using the product, taken into consideration all information and cautions specified in the manual and comply with the instructions.

Symbols used in the user’s manual and their corresponding meanings:



Important information and useful hints of operation



Caution against risk of property and life



Caution against electric shock



Caution against fire risk



Caution against hot surfaces

The user’s manual helps you use the product quickly and safely.

- Please read the user’s manual prior to installation and operation of it.
- Always comply with the safety-related instructions.
- Keep the user’s manual at an easily accessible place as you may need it for reference in future.
- Please read the other documents provided with the product as well. Please remember that this user’s manual may also be applicable for other versions. Differences between the versions are clearly indicated in the manual.

Contents


1) <u>Your product</u>	3
✓ General View	3-5
✓ Technical Specifications	6
2) <u>Important Safety Instructions</u>	7
✓ General safety	7-8
✓ Safety for Children	8
✓ Safety for electric operations	9
✓ Intended Use	10
3) <u>Installation</u>	8
✓ Prior to Installation	10-11
✓ Installation and connections	11-13
✓ Electric – Gas connection	13-15
✓ Sealing control	15
✓ LPG-NG conversion	15
✓ Disposal of product – Destruction of package	16
✓ Future transportation operations	16
✓ Disposal of old product	16
4) <u>Use of range</u>	17
✓ First use – First cleaning	17
✓ Description of using gas range	17-18
5) <u>Use of electric section of the range</u>	18-19
6) <u>Maintenance and cleaning</u>	19-20
7) <u>Suggested solution for problems</u>	21

1) Your product


GENERAL VIEW

Technical specifications of cooktop


4-burner LPG or NG (natural gas) Countertop range	
1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Upper tray of cooktop
8.	Lower tray of cooktop
9.	Burner cover

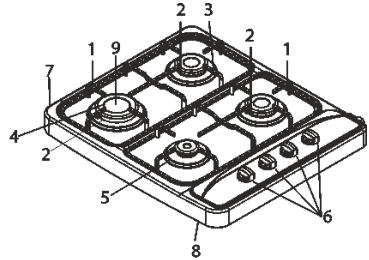

3+1 LPG or NG (natural gas) Cooktop	
1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Electric cooktop control knobs
8.	Electric cooktop
9.	Upper tray of cooktop
10.	Lower tray of cooktop
11.	Burner cover

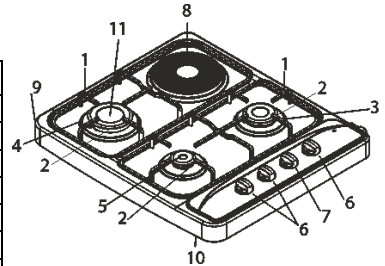


4-burner LPG or NG (natural gas) Cooktop	
1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Upper tray of cooktop
8.	Lower tray of cooktop
9.	Burner cover

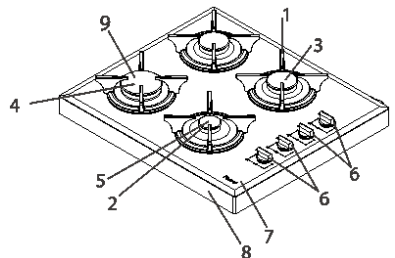


4-burner LPG or NG (natural gas) Built-in cooktop

1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Upper tray of cooktop
8.	Lower tray of cooktop
9.	Burner cover

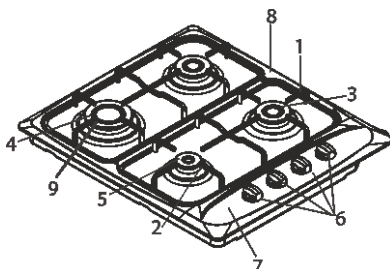


3+1 LPG or NG (natural gas) Built-in cooktop

1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Electric cooktop control knobs
8.	Electric cooktop
9.	Upper tray of cooktop
10.	Lower tray of cooktop
11.	Burner cover

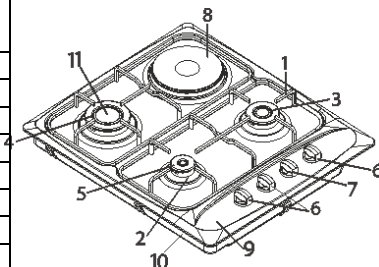


4-burner LPG or NG (natural gas) Built-in cooktop

1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Upper tray of cooktop
8.	Lower tray of cooktop
9.	Burner cover

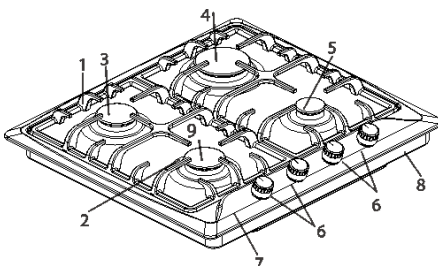


3+1 LPG or NG (natural gas) Built-in cooktop

1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Electric cooktop control knobs
8.	Electric cooktop
9.	Upper tray of cooktop
10.	Lower tray of cooktop
11.	Burner cover

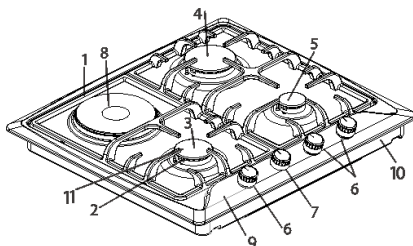

4-burner LPG or NG (natural gas) Built-in cooktop

1.	Cooktop rack
2.	Ignition plug
3.	Regular burner
4.	Strong burner
5.	Auxiliary burner
6.	Gas-burning control knobs
7.	Upper tray of cooktop
8.	Lower tray of cooktop
9.	Burner cover

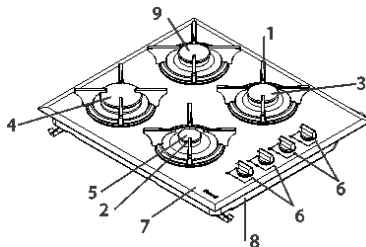

Technical specifications of electric cooktop

Supply	220-240 V 50-60 Hz
Electric heater	1000 W 230 V
Ignition	1 W automatic



The firm may make change in the technical specifications to improve quality of the product without prior notice.



The figures given in the manual are schematic and may not be exactly same with your product.



The values given on the markings on the product or in the other printed documents provided with the product are values obtained under the laboratory conditions as per the applicable standards. These values may vary depending on the use and ambient conditions of the product.

2) Important safety instructions

This section contains safety instructions to help prevention of physical injury or material damage. Failure to comply with these instructions makes any warranty invalid.

General Safety

- This product is not designed for use by persons (including children) who are lack of knowledge or experience and have deficient physical, sensual or cognitive skills unless they are attended by a person to take care of their safety or give necessary instructions for use of the product. The children should be supervised and never be allowed playing with the product.
- Plug the product to an outlet/mains protected by a fuse of such value as given in the table “Technical specifications”. In case of use with or without transformer, remember to get the earthing installation done by a qualified electrician. If the product is used without proper earthing as per the applicable local regulations, our firm shall not be responsible for any resulting loss.

- If the power cable/plug is damaged, do not operate the product. Contact with the Authorized Service Center.
- If the product is damaged and has a noticeable damage, do not operate the product.
- Do not perform any repair or modification on the product. However, you may remedy some troubles; see suggested solutions for the problems, page **19**.
- Never wash the product by spraying or pouring water on it! There is risk of electric shock!
- Do not use the product under the conditions when your judgement is affected due to effect of medical drug and/or alcohol.
- Disconnect the product with the mains during the installation, maintenance, cleaning and repair operations.
- Always get the installation and repair operations done by an authorized service center. The manufacturing firm may not be held responsible for any loss that may arise due to operations performed by any unauthorized persons and consequently the product warranty becomes invalid.
- Be careful when using alcohol in the food. The alcohol evaporates at high temperature and when it contacts with hot surfaces, it may inflame and cause fire.
- Do not heat the sealed cans and glass jars. The resulting pressure may cause burst of the jar.
- As the edges of the product will be hot when working, do not put any flammable substances near it.
- Keep open all around the ventilation channels.
- The product may be hot during use. Do not touch the hot parts and heating elements, etc.
- Make sure the product is switched off after each use.
- Product and accessible parts of the product are hot during use of it.
- Do not touch the product in use.
- Do not use sharp and piercing tools when cleaning the glass; such materials may give harm to your product.

- As superheated oil may cause fire, always keep watch when the product is in use.
- In case of possible fire, do not attempt to extinguish the fire with water; disconnect the power connection of the product immediately and cover the fire by help of a wet blanket.
- Do not use steam cleaner.
- If the glass of the product is broken: switch off all burners and any electric heater element immediately and disconnect power supply of the equipment; do not touch the surface of the equipment and do not use the equipment.
- To clean the glass of the range, never you abrasive agents or sharp metal scrapers that may destroy the surface and cause the glass to be broken.
- Do not use the product on the nylon, flammable and heat-sensitive materials.
- Pots placed on the heaters of the range should be in proper sizes.
- Do not scrub the buttons and inox surfaces of the range by means of scrapping objects; do not use Scotch-Brite.
- If the flame of burner is accidentally off, the burner is switch off in controlled manner and it is not fired for minimum 1 minute.

Safety for children

The exposed parts of the product will get heated during use and after use until it cools down; keep children away.

- **CAUTION:** During use of the grill, the accessible parts may be hot. You should keep the children away from the product.
- The children under 8 eight years old should not touch the product when they are unattended by a adult.
- This equipment may be used by children above 8 years old and/or persons who are handicapped physically, sensually or cognitively if they are duly informed about risks and safe use of the product.

- The children should not play with the product. Cleaning and maintenance of the equipment may not be performed by the children unattended.
- Packaging materials may be dangerous for the children. Keep the packaging materials at a place not accessible by the children or thrown in the garbage by sorting out according to the instructions on waste.

Safety of the electric-related works

- All Works on the electric equipment and systems should be performed by an authorized and qualified person.
- This product is not suitable for you with a remote system.
- In case of any damage, switch off the product or disconnect the power supply. To this end, switch of the fuse of the house.
- Make sure the fuse rated value is same with the current of the product.

Intended use

This product is designed for domestic use. It is not allowed for industrial use.

“CAUTION: this product should be used for cooking only. It should not be used for different purposes such as heating a room, etc.”

The producer may not be held responsible for any loss that may occur due to improper use or during transportation. The service life of the product you purchase is 10 years. This is the time during which the producer should make available spare parts necessary for operation of the product in the specified way.

3)Installation

Prior to use of the product



Make sure the power and/or gas installation is suitable. If not, make the necessary arrangements by means of qualified technical and installer.



The customer shall be responsible for preparation of the place where the product shall be placed as well as the power and/or gas installation.



For installation of the product, you should comply with the rules specified in the local standards concerning power and/or gas



Control the product prior to installation to find out whether there is any damage or not. If the product is damaged, do not make the installation. The damaged products may cause risk for your safety.



Any works on the gas equipment and system should be performed by authorized and qualified persons.



The products have no system for discharge of gas that may occur as a result of burning. The product should be installed and connected as per the applicable regulations concerning installation. You should observe the requirements regarding ventilation.



Air necessary for burning is taken from the room air and the emitted gases are directly given to the room.



A good ventilation is required in the room for safe operation of your product. If there is no window or door to be used for ventilation of the room, an additional ventilation system should be installed.






The floor area of the kitchen should be bigger than 8m².
Kitchen volume should be bigger than 20m³.



The chimney outlet should be at height of 1.80m from the floor and in diameter of 150mm directly opening to the atmosphere.



Air vent should be near the kitchen floor and minimum 75cm², opening to the outer atmosphere

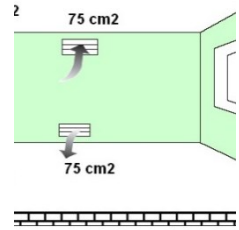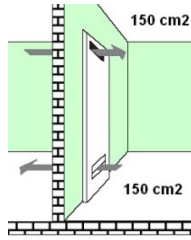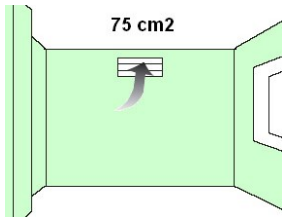

Installation and connections

Preparation of the built-in range prior to installation

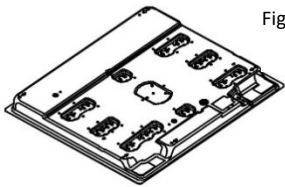


Figure 1

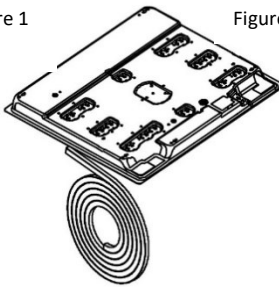


Figure 2

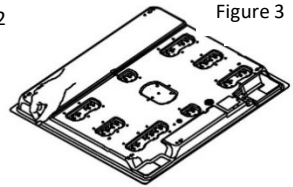


Figure 3

Turn upside down range in the Styrofoam in the package and apply the silicon.

In case of inox products, apply the silicon on inox surface, and in case of glass range products apply

Apply the silicon supplied in the package around the range as shown in the figure.


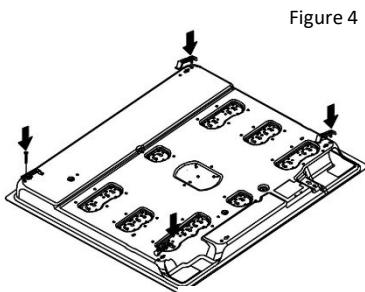



Figure 4

Figure 5

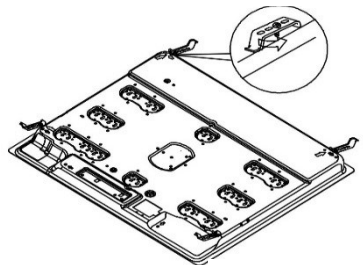


Mounting legs connection holes.

Place the mounting legs as shown in the figure.

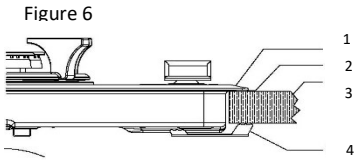

- 1. Glass
- 2. Silicon Seal
- 3. Tray
- 4. Connection Element

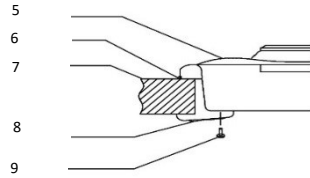

- 5. Upper Tray
- 6. Silicon Seal
- 7. Counter Surface
- 8. Connection Clips
- 9. Screw

Installation of the range

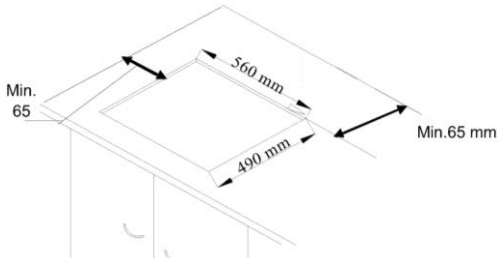


Figure 7

The range is equipped with a seal to prevent the liquids through the cavities into the cabinet. In order to place this seal, adhere the seal as shown in the figures above. Turn the range upside down and remove the protective tape of the rubber seal and adhere it to the range; both ends of the seal should meet each other. Install the mounting sheets as shown in figure 5 by help of screw. And place the range in the opening on the counter.

Figure 7 shows the size to which the counter will be cut for installation of the range. Place the prepared range into the counter cut to these sizes. If you will use the range on the built-in oven, observe the figures 8 and 9 for proper air circulation between the oven and range.


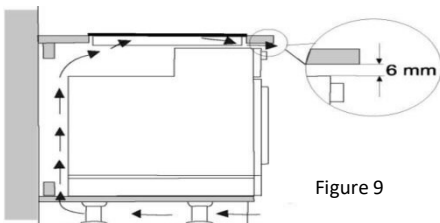


Figure 9



Figure 8

Placement of the cooker

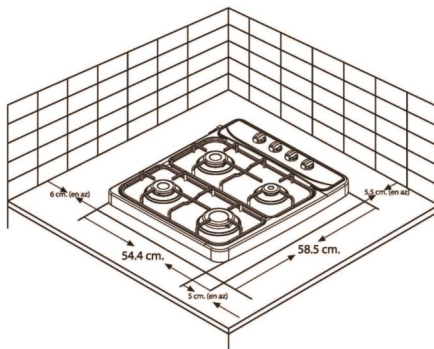

Start to use after you remove the protective film on Inox surface.



Wiring

You should definitely use an earthed line for the product!

The manufacturing firm shall not be responsible for any damages that may occur if the product is used without the earth.



Electric shock, short-circuit or fire risk arising from the installation performed by any unprofessional persons! The product should be connected to the mains only by an authorized and qualified person and the warranty of the product starts only after correct installation.





Power shock, short-circuit or fire risk arising from damaged power cable! The power cable should be crushed, crinkled or pinched or should not contact with the hot parts of the product. If the power cable gets damaged, it should be replaced by a qualified electrician.

- The mains supply data should be same on the data indicated on the nameplate of the unit. You may find the nameplate at the back of or under the product.
- The connection cable of the product should comply with the technical specifications and power consumption.



Risk of electric shock! Before performing any work on the electric installation, please disconnect the power supply of the product.

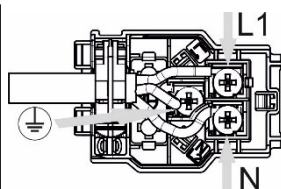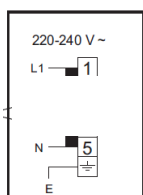

Gas connection



Any work on the gas equipment and systems should be performed by the qualified and authorized persons.

Prior to installation, make sure the conditions of local distribution (gas type and gas pressure) comply with the settings of the product.

LPG connection

 
Make sure the gas hose and gas pressure-reducing valve you use on the range are safe. Connect the gas delivery hose with the hose behind the range and tighten it by using a clamp and screwdriver (figure 10). Make sure it is firmly tightened.

Gas delivery hose of the equipment should not be longer than 1500mm. The pressure of the pressure-reducing valve to be used for LPG should be 300mmSS and certificated.



Gas delivery hose should not pass through the hot part behind the equipment. Temperature of the gas hose should not exceed 90°C (degree).


Prior to use, make sure the system does not leak any gas.



- 1- G1/2 Nipple)
- 2- Silicon seal
- 3- G1/2 Hose inlet (gas inlet)
- 4- Metal clamp
- 5- Gas hose (inner diameter 8mm)

Figure 10

 NG (natural gas) connection



- 1- G1/2 Nipple)
- 2- Silicon seal
- 3- G1/2 NG hose (EN 14800 compliant natural gas hose)

Figure 11

If your equipment is set for natural gas, get the equipment connected by the installation firm of the concerned natural gas distribution company. Natural gas connection of your equipment is 1/2". If you desire to convert your equipment from LPG to natural gas or from natural gas to LPG, contact with the nearest service centre and make them do the required gas conversion settings.

Sealing inspection

Open the pressure-reducing valve or natural gas valve and control by application of much foamy water on the connection to find out any gas leakage.

Never control by flame.

Final inspection

1. Plug the power cable into the socket and activate the fuse of the equipment.
2. Control the functions.

LPG-NG / NG-LPG conversion

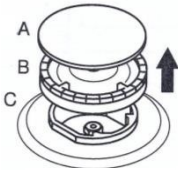


Figure 12

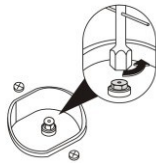


Figure 12.1



Figure 12.2

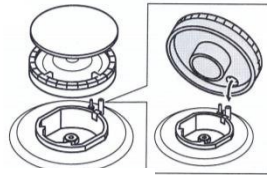


Figure 12.3



Figure 12.4

Remove the burner cover and burner as shown in in the Figure 12.

Remove the injector by help of 7's socket screwdriver as shown in the Figure 12.1

Fix the injector (D) to be converted as shown in the Figure 12.2.

(see table 1).

Replace the burner as shown in the Figure 12.3.

Turn on the burners respectively after conversion and remove the button on the control panel and set the flame length by tightening or loosening the screw on the gas valve (12.4 cock) or in the valve shaft.

Disposal of the product

Destruction of the package

Packaging materials are dangerous for the children. Keep the packaging materials at a place not accessible by the children.

The packaging of the product is made of the recycled materials. And throw them in the garbage by shorting out as per the instructions on waste. Do not dispose them together with the normal domestic waste.

Future transportation operations

- Keep the product in its original box and carry the product in this box. Comply with the instructions given on the box. If the original carton is not available, wrap the product with the blister packaging material or a thick paperboard and tape it firmly.
- Fix the heads and pot supports firmly with a tape.
- Do not put any object on the product. The product should be carried upright.
- Control the general appearance of the product for any damage that might have occurred during transportation.

Disposal of the old product

Dispose the old product in such a way that it will not give damage to the environment.

A mark (WEEE) is present on this product, indicating that the electric and electronic equipment waste should be collected separately. This means that the equipment should be dealt with as per EU Directive 2002/96/EC to recycle or disintegrated into parts for minimising its effect on the environment. For further information, please contact with the local and regional authorities.

The electronic products which are not kept subject to the controlled waste gathering process constitute potential risk for both environment and human health due to the harmful substances they contain.

You may contact with your authorized dealer or the municipal waste collection centre to get information about how you may dispose of the product.

Before you throw the product into the garbage, cut the electrical plug and break the cover lock, if any, in order that the children are not exposed to any risk.

4) Preliminary Preparation

First use

Start to use the equipment after removal of the protective film on Inox surface.


First cleaning



Some detergents or cleaning agents may give harm to the surface.


1. Remove all packaging materials.
2. Wipe the product surface with a damp cloth or sponge and wipe dry with a dry cloth.

Description of use of the gas range:

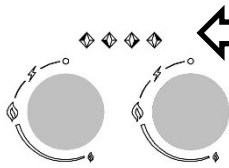


Screenprints on the control panel show position of the respective button.

- 1: Push and turn anticlockwise the gas range button for setting high flame.
- 2: Turn on the lighter depending on the characteristics of your range.
- 3: Set to the desired flame position.
- 4: When the desired cooking operation is over, bring the range button to the top point by turning it clockwise to turn off the burner.

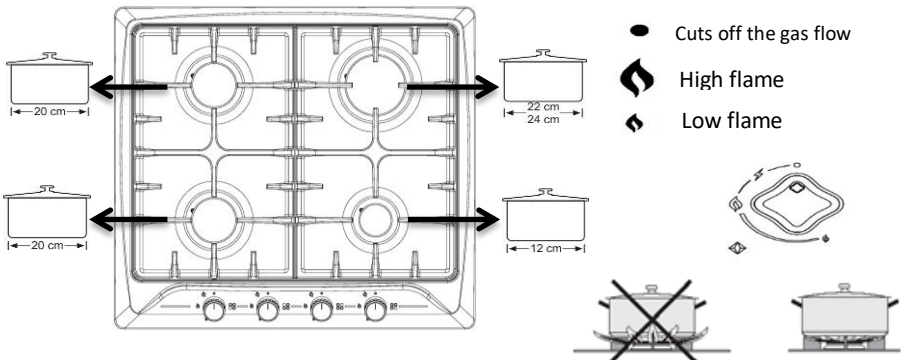

**Container size and gas flame should match with each other.
Gas flame should be set in such a way that it should not spread out from the container base.
Put the container as centered on the pot bearer.**

Gas cut-off safety apparatus

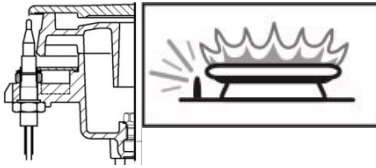


Thermal element activates the safety mechanism activates and cuts off the gas immediately against extinguishment of the top burners due to liquid overflow.



- 1: Push and turn anticlockwise the gas range button for setting high flame.
- 2: Turn on the lighter depending on the characteristics of your range.
- 3: After it turns on, hold pressed the button for 3-5 seconds and ensure the safety mechanism to activate.
- 4: If it does not turn on after you push and release the button, repeat the same action by holding the button pressed for 15 seconds.
- 5: Set to the desired flame position.
- 6: When the desired cooking is completed, bring the range button to the top point by turning it clockwise to turn off the burner.

5) Using electric section of the cooktop


If your product has an electric cooktop, the switch system to be used is as shown below:

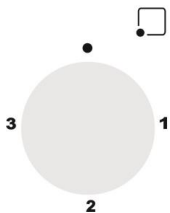


Switch Position	Ø145 1000W	Ø145 RAPID 1500W	Ø180 1500W	Ø180 RAPID 2000W
1	250 W	400 W	400 W	750 W
2	750 W	1100 W	1100 W	1250 W
3	1000 W	1500 W	1500 W	2000 W

 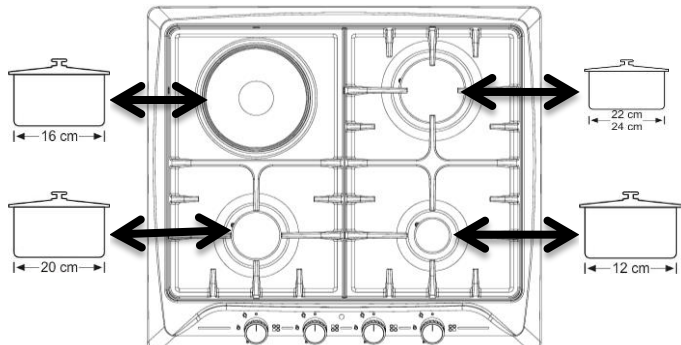



In order to get the most of the electric stove; it is recommended to use pan in diameter of 16-20cm.

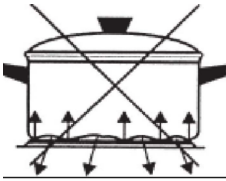

If the pan base does not touch the heater surface completely, it causes high energy consumption and the heat does not distribute equally.

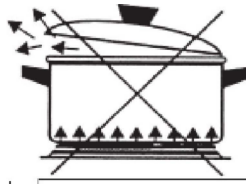

Pan or container is very large or very small. If the flame exceeds the heat-resistant glass edges, it may be broken. Pans with small pan diameter are not cost-effective, as they consume much energy.

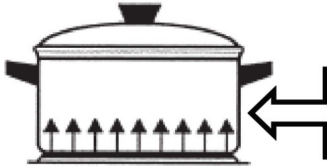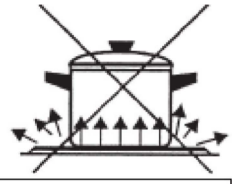

Proper manner of use.



After the cooktop is used, wait it to cool down and wipe with a damp cloth. If it is excessively dirty, clean it with water thoroughly.



After cleaning the cooktop, heat it for several minutes to ensure it to dry. If you will not use it for an extended time, lubricate the upper part with machine oil to form a thin film of oil.



Use dry-soled pots on the cooktop. Do not put the pot lid, especially wet lids, on the cooktop.

Stainless sheet around the electric cooktop may change due to heat. It has no adverse effect for use.

6) Maintenance and cleaning

General information

If the product is cleaned regularly, its service life extends and the frequently encountered problems reduce.



Risk of electric shock!

Prior to cleaning, switch off the power of the product to avoid risk of electric shock.



Hot surfaces may cause burns!

Wait for the product to cool down prior to cleaning the product.

- You should clean the product thoroughly after you use it each time. Thus the food remnants are easily cleaned and you prevent these remnants from being burnt when the product is used later on.
- No special cleaning agent is required for cleaning the product. Clean the product by use of dishwashing liquid, lukewarm water and a soft cloth or sponge and wipe clean with a dry cloth.
- Make sure you completely wipe off any liquid left after the cleaning and clean immediately any food around splashed during the cooking.
- Do not use any cleaning agent containing acid or chlorine for cleaning the stainless steel or inox surfaces and handle. Clean by wiping in single direction by help of a soft cloth with soap and liquid (non-scratching) detergent.



Some detergents or cleaning agents may give harm to the surface. Do not use abrasive detergents, cleaning powders/creams or sharp objects.



Do not use steam cleaning agents for cleaning.

Cleaning the control panel

Clean the control panel and control button with a damp cloth and wipe dry with a dry cloth.



The control panel may get damaged! Do not remove the control button to clean the control panel.

Cleaning the range

There is no need for any range cleaner or other special cleaning agent to clean the range. It is recommended to wipe the range with a damp cloth when it is still lukewarm.



7) Suggested solutions for problems

Product does not operate.

- ✓ The product is not plugged (earthed) to the socket. Make sure the equipment is plugged.
- ✓ The fuse is burn or broken. Check the fuse in the fuse box. If the fuse is burnt, activate it again.

The product ignites, but does not burn.

- ✓ Gas is over.
- ✓ Cylinder valve or natural gas valve is closed.
- ✓ In case of houses with natural gas supply, if there is gas leakage detector, the leak may be detected and gas cut off.
- ✓ Injector is clogged.

Flame burns low.

- ✓ Cylinder is over.
- ✓ Injector is clogged.

When the product heats and cools down, metallic sounds are heard.

- ✓ Metal parts expand when heated and cause sound. This is not a cause of failure.

If the problem persists although you have observed the instructions given in this section, then contact your dealer or authorized service center. Never attempt to repair the product yourself.

GAS TYPE & PRESSURE

		Rm Burner Group								
		G20 13 mbar	G20 20 mbar	G20 25 mbar	G25 25mbar	G25,3 25mbar	G30 30mbar	G30 37mbar	G30 50mbar	G31 37mbar
Small Burner	1,15kW	0,90 kW	0,95 kW	0,90 kW	0,90 kW	0,90 kW	0,90 kW	1,10 kW	0,90 kW	0,90 kW
	Ø 0,92	Ø 0,70	Ø 0,70	Ø 0,75	Ø 0,75	Ø 0,50	Ø 0,50	Ø 0,45	Ø 0,50	
	0,109 m³/h	0,086 m³/h	0,090 m³/h	0,100 m³/h	0,097 m³/h	65 g/h	80 g/h	65 g/h	64 g/h	
Middle Burner	1,75 kW	1,55 kW	1,65 kW	1,65 kW	1,65 kW	1,65 kW	1,70 kW	1,65 kW	1,65 kW	1,65 kW
	Ø 1,10	Ø 0,92	Ø 0,92	Ø 1,00	Ø 1,00	Ø 0,65	Ø 0,65	Ø 0,60	Ø 0,65	
	0,167 m³/h	0,148 m³/h	0,157 m³/h	0,183 m³/h	0,179 m³/h	120 g/h	124 g/h	120 g/h	118 g/h	
Big Burner	2,80 kW	2,50 kW	2,80 kW	2,40 kW	2,40 kW	2,50 kW	2,60 kW	2,50 kW	2,50 kW	2,50 kW
	Ø 1,40	Ø 1,20	Ø 1,20	Ø 1,20	Ø 1,20	Ø 0,80	Ø 0,80	Ø 0,70	Ø 0,80	
	0,267 m³/h	0,238 m³/h	0,267 m³/h	0,266 m³/h	0,260 m³/h	182 g/h	189 g/h	182 g/h	179 g/h	
Wok Burner	2,30 kW	2,30 kW	2,50 kW	2,20 kW	2,30 kW	2,50 kW	2,60 kW	2,50 kW	2,50 kW	2,50 kW
	Ø 1,30	Ø 1,15	Ø 1,10	Ø 1,15	Ø 1,15	Ø 0,80	Ø 0,80	Ø 0,70	Ø 0,80	
	0,219 m³/h	0,219 m³/h	0,238 m³/h	0,244 m³/h	0,249 m³/h	182 g/h	189 g/h	182 g/h	179 g/h	

		G20 13 mbar	G20 20 mbar	G20 25 mbar	G25 25mbar	G25,3 25mbar	G30 30mbar	G30 37mbar	G30 50mbar	G31 37mbar
Small Burner	1,15kW	0,90 kW	0,95 kW	0,95 kW	0,95 kW	0,95 kW	0,90 kW	1,10 kW	0,90 kW	0,90 kW
	Ø 0,92	Ø 0,72(X)	Ø 0,70	Ø 0,75	Ø 0,75	Ø 0,50	Ø 0,50	Ø 0,43 (H2)	Ø 0,50	
	0,109 m³/h	0,086 m³/h	0,090 m³/h	0,105 m³/h	0,103 m³/h	65 g/h	80 g/h	65 g/h	64 g/h	
Middle Burner	1,75 kW	1,70 kW	1,70 kW	1,70 kW	1,70 kW	1,70 kW	1,65 kW	1,70 kW	1,65 kW	1,65 kW
	Ø 1,10	Ø 0,97(Z)	Ø 0,92	Ø 1,00	Ø 1,00	Ø 0,65	Ø 0,65	Ø 0,58 (M)	Ø 0,65	
	0,167 m³/h	0,162 m³/h	0,162 m³/h	0,188 m³/h	0,184 m³/h	120 g/h	124 g/h	120 g/h	118 g/h	
Big Burner	2,80 kW	2,90 kW	2,90 kW	2,50 kW	2,50 kW	2,50 kW	2,80 kW	2,60 kW	2,80 kW	2,80 kW
	Ø 1,40	Ø 1,15(Y)	Ø 1,10	Ø 1,20	Ø 1,20	Ø 0,85	Ø 0,80	Ø 0,75 (S)	Ø 0,85	
	0,267 m³/h	0,276 m³/h	0,276 m³/h	0,277 m³/h	0,271 m³/h	204 g/h	189 g/h	204 g/h	200 g/h	
Wok Burner Sabaf	2,30 kW	2,30 kW	2,50 kW	2,20 kW	2,30 kW	2,30 kW	2,50 kW	2,60 kW	2,50 kW	2,50 kW
	Ø 1,30	Ø 1,15	Ø 1,10	Ø 1,15	Ø 1,15	Ø 0,80	Ø 0,80	Ø 0,73 (S)	Ø 0,80	
	0,219 m³/h	0,219 m³/h	0,238 m³/h	0,244 m³/h	0,249 m³/h	182 g/h	189 g/h	182 g/h	179 g/h	

