


Ultimaker 2, 2+ & 2 Extended+ Ultitop - manual

All figures show the Ultitop attachment without HEPA filter! But the structure is the same.

Please read these instructions before installing your new Ultitop!

- 1) Place all five parts on a work surface with the insides upwards (see picture). The holes for the M3 nuts and screws will be facing upwards. The part with the HEPA filter and the fan is the back of the cover.
- 2) To control that you have all the parts in the right position, check that the holes line up next to each other.
- 3) Now insert each of the supplied M3 nuts. These will fit tightly into the holes in the panels as shown in the picture.
- 4) In the next step, take the back panel and slide it into the tabs from the top panel. Fasten the panels with the supplied M3x16 screws. Repeat this step with the front panel, and then the two side panels.
- 5) If you are using a Ultimaker 2+ or 2 Extended+ your might have to cut of 2-3 cm of the bowden tube, to make sure that it can move smoothly inside the Ultitop.
- 6) The last step is to connect the fan to the provided power supply:
First remove approximately one cm of the insulation from the tip of the wires connected to the power supply. To connect the fan to the power supply, put the tip of the wire with a white line in the same quick connector as the red wire, and the black wire from the power supply in the same quick connector as the black wire from the fan, as shown in the picture below.

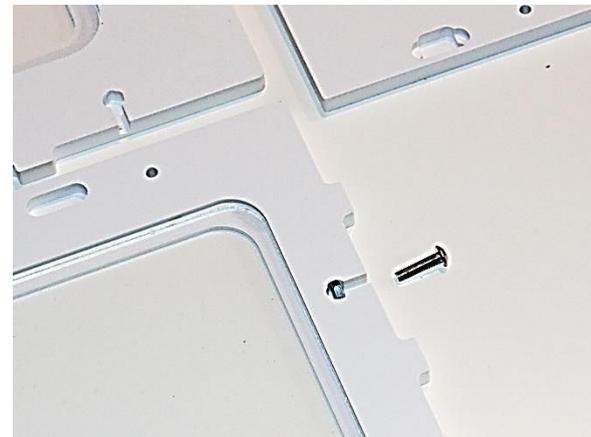

Ultimaker 2, 2+ & 2 Extended+ Ultitop - manual

All figures show the Ultitop attachment without HEPA filter! But the structure is the same.

If you have any problems during assembly, contact your local Ultitop reseller.