



SUV Air Mattress

110M90

Set Up
Video:



<https://rightlinegear.com/support-faqs/product-videos/>

NOTE: IT IS RECOMMENDED TO KEEP THE MATTRESS INFLATED FOR SEVERAL HOURS BEFORE INITIAL USE. THE MATTRESS'S MATERIAL WILL STRETCH DURING THIS TIME AND ADDITIONAL AIR WILL BE REQUIRED TO RETURN THE MATTRESS TO ITS DESIRED FIRMNESS. THE LOSS OF AIR BEFORE INITIAL USE IS NORMAL AND DOES NOT MEAN THE MATTRESS IS LEAKING.

Inflate The Air Mattress

1-Open the vehicle's rear hatch door and lay down its rear seats.

2-Lay the air mattress flat with its flocked side facing up (Fig 1) and its wider T section towards the front of the vehicle (Fig 2).



WARNING: THE AIR PUMP'S POWER SUPPLY MUST BE A VEHICLE'S 12 VOLT DC OUTLET.

3-Attach the large adaptor to the inflation port on the side of the air pump (Fig 3).

4-Insert the air pump's charge plug into the vehicle's 12 volt DC outlet (Fig 4).



WARNING: DO NOT LEAVE THE PUMP UNATTENDED WHILE OPERATING. DO NOT ALLOW THE PUMP TO GET WET OR KEEP IT RUNNING FOR OVER 15 MINUTES. DO NOT OBSTRUCT THE INFLATION AND DEFLATION PORTS. DO NOT ALLOW SMALL DEBRIS TO BE SUCKED INTO THE INFLATION OR DEFLATION PORTS.

5-Place the adaptor into the mattress's easy inflate valve's opening (Fig 5). The adaptor will push the valve open. Power the air pump on (Fig 6).



6-Inflate the mattress to the desired firmness, turn the air pump off, and remove the adaptor from the opening. The air pressure inside the mattress will push the valve closed. Screw the cap over the easy inflate valve's opening (Fig 7).

7-Use the mouth valve to inflate the mattress if the air pump is unavailable (Fig 8).



8-Adjust the air mattress forward or backwards as needed. Adjusting the front seats may allow the air mattress to be pushed further forward in the vehicle (Fig 9).



NOTE: THE AIR MATTRESS MAY PREVENT THE REAR HATCH DOOR FROM CLOSING WHEN FULLY INFLATED. MAKE SURE THE MATTRESS IS CLEAR OF THE REAR HATCH DOOR BEFORE CLOSING IT (FIG 10).



Deflate The Air Mattress

1-Attach the large adaptor to the deflation port on the top of the air pump (Fig 11).

2-Insert the air pump's charge plug into the vehicle's 12 volt DC outlet (Fig 12).



3-Place the adaptor into the mattress's easy inflate valve's opening (Fig 13) and power the air pump on (Fig 14).



4-Deflate the mattress until no air remains inside.

Fold The Air Mattress

1-Fold the sides of the mattress into the middle (Fig 15, Fig 16).

2-Fold side A over side B (Fig 17).



3-Roll the mattress toward the valve end to push out any remaining air. Make sure to depress the easy inflate valve to let the air escape (Fig 18). Screw the cap over the easy inflate valve's opening to prevent air from re-entering.

4-Place the mattress and the air pump into the stuff sack (Fig 19).



WARNING: INFANTS AND YOUNG CHILDREN CAN SUFFOCATE ON INFLATABLE MATTRESSES; NEVER PLACE THEM TO SLEEP ON THIS AIR MATTRESS. KEEP FLOCKED SIDE FACING UP. KEEP SHARP OBJECTS AWAY FROM MATTRESS. KEEP MATTRESS AWAY FROM FIRE. MATTRESS NOT FOR USE IN WATER. MATTRESS NOT FOR USE WHEN VEHICLE IS MOVING.

1 Year Manufacturer's Limited Warranty
www.rightlinegear.com/product-warranty.html