

4.6.2 Deleting a fault code without WTT

Switching on the heater (via control element).



There is a fault and it is detected by the control unit as a relevant malfunction.



Heater shuts down due to the fault, i.e. fault switch-off followed by fault lock-out. The fault code is shown on the control element.



Determine the cause of the fault
(e.g. with or without fault code output,
visual inspection of fuses and connectors, ...)



Switch off heater.



Rectify the fault.



Switch on the heater.



Fault lock-out unlocked.

4.7 Reset heater lock-out

4.7.1 Heater unlocking without WTT

- ▶ Remove the fuse for at least 10 seconds within 10 seconds (20a fuse) after switching on.
- ▶ Switching on the heater (via control element).



NOTE

When on-board power supply is applied, never disconnect the connector from the heater.

- ▶ Reinsert the fuse.
- ▶ Switching off the heater (via control element).

4.7.2 Heater unlocking with WTT

See chapter 4.6.1, "Deleting a fault code with WTT" on page 8.