

## ProLightz WRX-STI DRL Harness

### Preparing your DRL Signal Input Extension.

\* Installation by a professional is recommended \*


- 1) Start by locating and removing the DRL resistor located under the passenger side headlight.



DRL resistor



**2) Remove the brown retaining clip.**

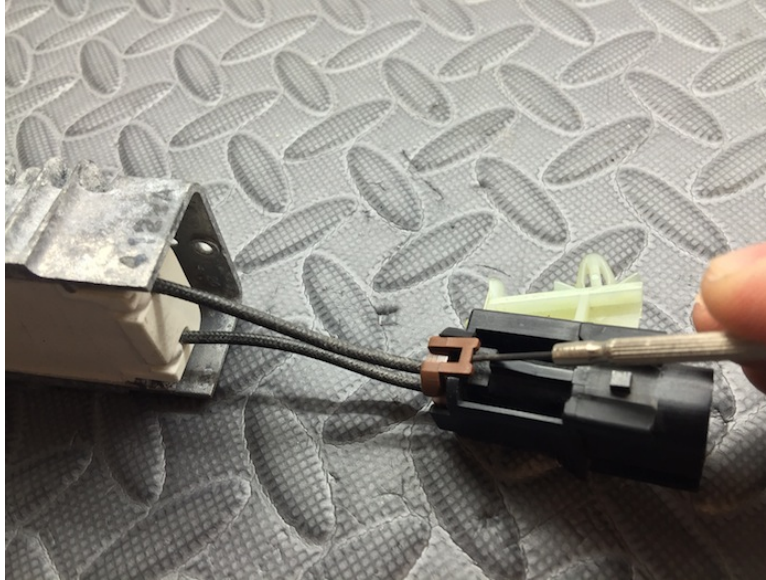


**3) Using a small flat head screwdriver , release the metal pins from the connector.  
The tabs holding them in need to be moved towards the centre.  
Then simply pull back on the wires , the pins will come out from the back of the connector**




3) Next , you will transfer the silicone seals from the DRL connector to the new DRL harness ( orange seals shown below ).


Then insert the metal pins from the ProLightz DRL harness into the DRL connector.  
Using pliers pull on the metal pins to make sure they are fully inserted and locked in the connector.

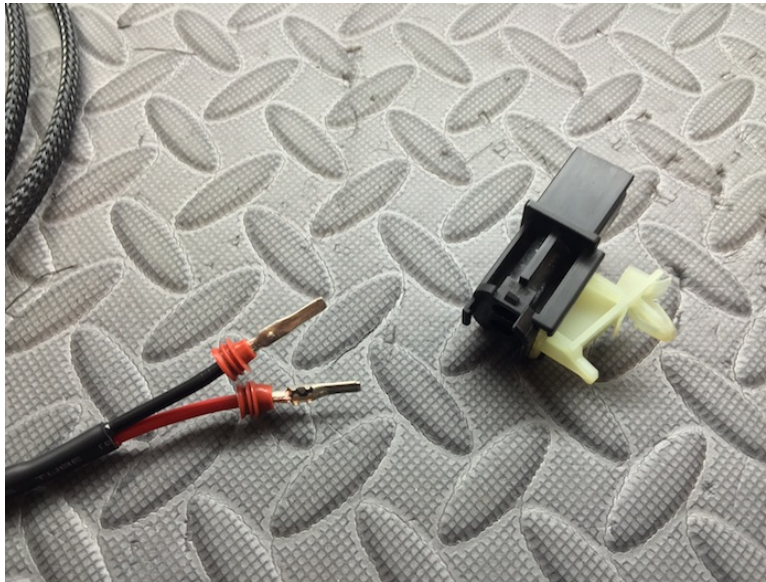

Like this:

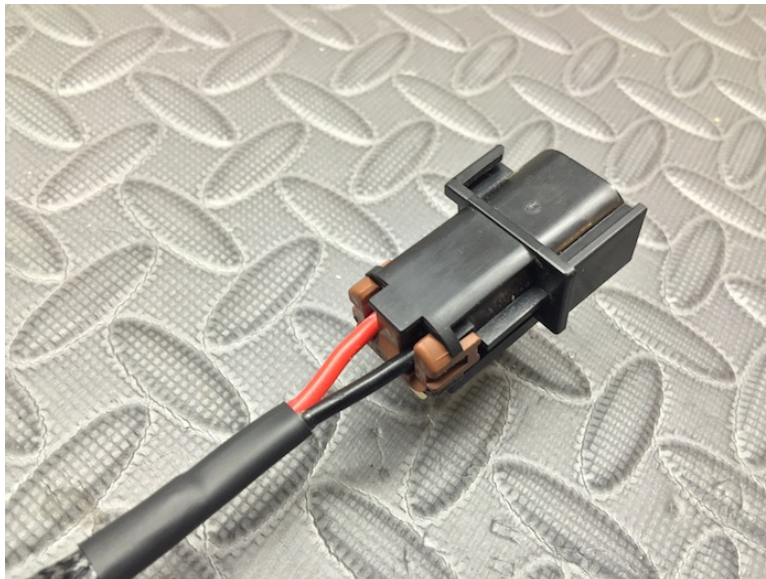

**4) Plug back into DRL connector ( vehicle side )**

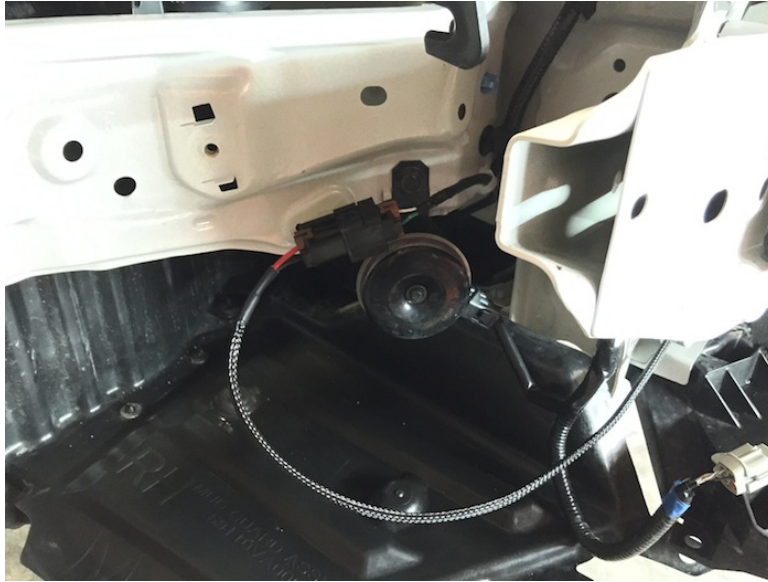

**5) Refer to our harness diagram for DRL harness installation.**

**Make sure you match black wires with back wires at each connector for proper polarity.**

