



# Green Electrical Supply

maximize your green<sup>®</sup>

[www.GreenElectricalSupply.com](http://www.GreenElectricalSupply.com)

# aledra SureFit® DBA+ Tube – Ballast List

Item	Manufacturer	Model	Type	Compatible
1	Philips-Advance	ICN-IP32-N	Instant Start Ballast	
2	Philips-Advance	ICN-2P32-N	Instant Start Ballast	
3	Philips-Advance	ICN-3P32-N	Instant Start Ballast	✓
4	Philips-Advance	ICN-4P32-N	Instant Start Ballast	✓
5	Philips-Advance	IOPA-IP32-N	Instant Start Ballast	✓
6	Philips-Advance	IOPA-2P32-N	Instant Start Ballast	✓
7	Philips-Advance	IOPA-3P32-N	Instant Start Ballast	✓
8	Philips-Advance	IOPA-4P32-N	Instant Start Ballast	✓
9	Philips-Advance	IOPA-IP32-HL-SC	Instant Start Ballast	✓
10	Philips-Advance	IOPA-2P32-HL-SC	Instant Start Ballast	✓
11	Philips-Advance	IOPA-3P32-HL-SC	Instant Start Ballast	✓
12	Philips-Advance	IOPA-4P32-HL-SC	Instant Start Ballast	✓
13	Philips-Advance	ICN-IP32-SC	Instant Start Ballast	✓
14	Philips-Advance	ICN-2P32-SC	Instant Start Ballast	✓
15	Philips-Advance	ICN-3P32-SC	Instant Start Ballast	✓
16	Philips-Advance	ICN-4P32-SC	Instant Start Ballast	✓
17	Philips-Advance	REB-1P32-SC	Instant Start Ballast	✓
18	Philips-Advance	REB-2P32-SC	Instant Start Ballast	✓
19	Philips-Advance	REB-3P32-SC	Instant Start Ballast	✓
20	Philips-Advance	REB-4P32-SC	Instant Start Ballast	✓
21	Philips-Advance	IOP-1P32-LW-SC	Instant Start Ballast	✓
22	Philips-Advance	IOP-2P32-LW-SC	Instant Start Ballast	✓
23	Philips-Advance	IOP-3P32-LW-SC	Instant Start Ballast	✓
24	Philips-Advance	IOP-4P32-LW-SC	Instant Start Ballast	✓
25	Philips-Advance	IOPA-1P32-LW-N	Instant Start Ballast	✓
26	Philips-Advance	IOPA-2P32-LW-N	Instant Start Ballast	✓
27	Philips-Advance	IOPA-3P32-LW-N	Instant Start Ballast	✓
28	Philips-Advance	IOPA-4P32-LW-N	Instant Start Ballast	✓
29	Philips-Advance	IOPA-1P32-N	Instant Start Ballast	✓
30	Philips-Advance	IOPA-2P32-N	Instant Start Ballast	✓
31	Philips-Advance	IOPA-3P32-N	Instant Start Ballast	✓
32	Philips-Advance	IOPA-4P32-N	Instant Start Ballast	✓
33	Philips-Advance	IOP-1P32-SC	Instant Start Ballast	✓
34	Philips-Advance	IOP-2P32-SC	Instant Start Ballast	✓
35	Philips-Advance	IOP-3P32-SC	Instant Start Ballast	✓
36	Philips-Advance	IOP-4P32-SC	Instant Start Ballast	✓
37	Philips-Advance	IOPA-1P32-HL-SC	Instant Start Ballast	✓
38	Philips-Advance	IOPA-2P32-HL-SC	Instant Start Ballast	✓
39	Philips-Advance	IOPA-3P32-HL-SC	Instant Start Ballast	✓
40	Philips-Advance	IOPA-4P32-HL-SC	Instant Start Ballast	✓
41	Philips-Advance	GOPA-1P32-SC	Instant Start Ballast	✓
42	Philips-Advance	GOPA-2P32-SC	Instant Start Ballast	✓
43	Philips-Advance	GOPA-3P32-SC	Instant Start Ballast	✓
44	Philips-Advance	GOPA-4P32-SC	Instant Start Ballast	✓
45	Philips-Advance	GOP-IPSP32-SC	Instant Start Ballast	✓
46	Philips-Advance	GOP-2PSP32-SC	Instant Start Ballast	✓
47	Philips-Advance	GOP-3PSP32-SC	Instant Start Ballast	✓
48	Philips-Advance	GOP-4PSP32-SC	Instant Start Ballast	✓
				✓
				✓

Item	Manufacturer	Model	Type	Compatible
49	Philips-Advance	GOPA-1P32-LW-SC	Instant Start Ballast	✓
50	Philips-Advance	GOPA-2P32-LW-SC	Instant Start Ballast	✓
51	Philips-Advance	GOPA-3P32-LW-SC	Instant Start Ballast	✓
52	Philips-Advance	GOPA-4P32-LW-SC	Instant Start Ballast	✓
53	GE	GE-132-MAX-N/Ultra	Instant Start Ballast	✓
54	GE	GE-232-MAX-N/Ultra	Instant Start Ballast	✓
55	GE	GE-332-MAX-N/Ultra	Instant Start Ballast	✓
56	GE	GE-432-MAX-N/Ultra	Instant Start Ballast	✓
57	GE	GE-132-MAX-L/Ultra	Instant Start Ballast	✓
58	GE	GE-232-MAX-L/Ultra	Instant Start Ballast	✓
59	GE	GE-332-MAX-L/Ultra	Instant Start Ballast	✓
60	GE	GE-432-MAX-L/Ultra	Instant Start Ballast	✓
61	GE	GE-132-MAX-H/Ultra	Instant Start Ballast	✓
62	GE	GE-232-MAX-H/Ultra	Instant Start Ballast	✓
63	GE	GE-332-MAX-H/Ultra	Instant Start Ballast	✓
64	GE	GE-432-MAX-H/Ultra	Instant Start Ballast	✓
65	SYLVANIA	QHE 1X32T8/UNV ISL-SC	Instant Start Ballast	✓
66	SYLVANIA	QHE 2X32T8/UNV ISL-SC	Instant Start Ballast	✓
67	SYLVANIA	QHE 3X32T8/UNV ISL-SC	Instant Start Ballast	✓
68	SYLVANIA	QHE 4X32T8/UNV ISL-SC	Instant Start Ballast	✓
69	SYLVANIA	QHE 1X32T8/UNV ISN-SC	Instant Start Ballast	✓
70	SYLVANIA	QHE 2X32T8/UNV ISN-SC	Instant Start Ballast	✓
71	SYLVANIA	QHE 3X32T8/UNV ISN-SC	Instant Start Ballast	✓
72	SYLVANIA	QHE 4X32T8/UNV ISN-SC	Instant Start Ballast	✓
73	SYLVANIA	QHE 1X32T8/UNV ISH-SC	Instant Start Ballast	✓
74	SYLVANIA	QHE 2X32T8/UNV ISH-SC	Instant Start Ballast	✓
75	SYLVANIA	QHE 3X32T8/UNV ISH-SC	Instant Start Ballast	✓
76	SYLVANIA	QHE 4X32T8/UNV ISH-SC	Instant Start Ballast	✓
77	SYLVANIA	QTP 1X32T8/UNV ISL-SC	Instant Start Ballast	✓
78	SYLVANIA	QTP 2X32T8/UNV ISL-SC	Instant Start Ballast	✓
79	SYLVANIA	QTP 3X32T8/UNV ISL-SC	Instant Start Ballast	✓
80	SYLVANIA	QTP 4X32T8/UNV ISL-SC	Instant Start Ballast	✓
81	SYLVANIA	QTP 1X32T8/UNV ISN-SC	Instant Start Ballast	✓
82	SYLVANIA	QTP 2X32T8/UNV ISN-SC	Instant Start Ballast	✓
83	SYLVANIA	QTP 3X32T8/UNV ISN-SC	Instant Start Ballast	✓
84	SYLVANIA	QTP 4X32T8/UNV ISN-SC	Instant Start Ballast	✓
85	SYLVANIA	QTP 1X32T8/UNV ISH-SC	Instant Start Ballast	✓
86	SYLVANIA	QTP 2X32T8/UNV ISH-SC	Instant Start Ballast	✓
87	SYLVANIA	QTP 3X32T8/UNV ISH-SC	Instant Start Ballast	✓
88	SYLVANIA	QTP 4X32T8/UNV ISH-SC	Instant Start Ballast	✓
89	SYLVANIA	QHE 1X32T8/347 ISL-SC	Instant Start Ballast	✓
90	SYLVANIA	QHE 2X32T8/347 ISL-SC	Instant Start Ballast	✓
91	SYLVANIA	QHE 3X32T8/347 ISL-SC	Instant Start Ballast	✓
92	SYLVANIA	QHE 4X32T8/347 ISL-SC	Instant Start Ballast	✓
93	SYLVANIA	QHE 1X32T8/347 ISN-SC	Instant Start Ballast	✓
94	SYLVANIA	QHE 2X32T8/347 ISN-SC	Instant Start Ballast	✓
95	SYLVANIA	QHE 3X32T8/347 ISN-SC	Instant Start Ballast	✓
96	SYLVANIA	QHE 4X32T8/347 ISN-SC	Instant Start Ballast	✓
97	SYLVANIA	QT2X32T8/347 ISL-SC	Instant Start Ballast	✓
98	SYLVANIA	QT4X32T8/347 ISL-SC	Instant Start Ballast	✓
99	SYLVANIA	QTP1X32T8/347 ISN-SC	Instant Start Ballast	✓
100	SYLVANIA	QTP2X32T8/347 ISN-SC	Instant Start Ballast	✓
101	SYLVANIA	QT3X32T8/347 ISN-SC	Instant Start Ballast	✓
102	SYLVANIA	QT4X32T8/347 ISN-SC	Instant Start Ballast	✓
103	SYLVANIA	QT2X32T8/347 ISH-SC	Instant Start Ballast	✓

Item	Manufacturer	Model	Type	Compatible
104	GE	GE-132-MV-N	Instant Start Ballast	✓
105	GE	GE-232-MV-N	Instant Start Ballast	✓
106	GE	GE-332-MV-N	Instant Start Ballast	✓
107	GE	GE-432-MV-N	Instant Start Ballast	✓
108	GE	GE-132-MV-N-DIY	Instant Start Ballast	✓
109	GE	GE-232-MV-N-DIY	Instant Start Ballast	✓
110	GE	GE-332-MV-N-DIY	Instant Start Ballast	✓
111	GE	GE-432-MV-N-DIY	Instant Start Ballast	✓
112	GE	GE232MAX347-N	Instant Start Ballast	✓
113	GE	GE432MAX347-N	Instant Start Ballast	✓
114	SUNPARK	U-1/32ISE-HBF	Instant Start Ballast	✓
115	SUNPARK	U-2/32ISE-HBF	Instant Start Ballast	✓
116	SUNPARK	U-3/32ISE-HBF	Instant Start Ballast	✓
117	SUNPARK	U-4/32ISE-HBF	Instant Start Ballast	✓
118	SUNPARK	U-1/32ISE-LBF	Instant Start Ballast	✓
119	SUNPARK	U-2/32ISE-LBF	Instant Start Ballast	✓
120	SUNPARK	U-3/32ISE-LBF	Instant Start Ballast	✓
121	SUNPARK	U-4/32ISE-LBF	Instant Start Ballast	✓
122	HOWARD	EP3/32IS/MV/MC/HE	Instant Start Ballast	✓
123	KEYSTONE	KTEB-432-UV-IS-N-P	Instant Start Ballast	✓
124	KEYSTONE	KTEB-432-UV-IS-N-P	Instant Start Ballast	✓
125	PROLUME	EP232IS/L/MV/SL	Instant Start Ballast	✓
126	PROLUME	EP232IS/L/MV/HE	Instant Start Ballast	✓
127	RADIONIC	E232H12	Instant Start Ballast	✓