

TimeCess Beauty  
Bioprogramming

# REPRONIZER

## 3D Plus

Safety Guide and Operating Manual

REP3D-G-US



Thank you for purchasing the REPRONIZER 3D PLUS. Please make sure to read this manual in its entirety to ensure proper use. Save this manual for future reference.

## CONTENTS

---

<u>IMPORTANT SAFETY INSTRUCTIONS</u>	<u>1</u>
<u>RATINGS &amp; SPECIFICATIONS</u>	<u>5</u>
<u>OPERATING INSTRUCTIONS</u>	<u>6</u>
Major Parts	
General Operation	
Styling Your Hair	
Bioprogramming-Specific Use	
Maintenance	
Device Inspection	
<u>TROUBLESHOOTING</u>	<u>15</u>
<u>CUSTOMER SUPPORT &amp; LIMITED WARRANTY</u>	<u>17</u>

FOR USE IN USA ONLY.

This product is designed for domestic use only;  
do not use overseas.

IMPORTANT SAFETY  
INSTRUCTIONS

RATINGS &  
SPECIFICATIONS

OPERATING  
INSTRUCTIONS

TROUBLESHOOTING

RATINGS &  
SPECIFICATIONS

CUSTOMER SUPPORT  
& LIMITED WARRANTY

## IMPORTANT SAFETY INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical devices, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USE KEEP AWAY FROM WATER

**DANGER - As with most electrical devices, electrical parts are electrically live even when the switch is off.**

#### To reduce the risk of death by electric shock:

1. After use, always turn off the device and unplug immediately.
2. Do not place or store the device where it can fall or be pulled into a tub or sink.
3. Do not use while bathing.
4. Do not place in or drop into water or any other liquid.
5. Do not store in a place with high humidity such as a bathroom, or a place where it may come into contact with water such as near a sink.
6. If the device falls into water, unplug it immediately. Do not reach into the water to retrieve the device.
7. Do not insert or remove the power plug with wet hands.
8. Do not immerse the device in water when cleaning.

### WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

1. The device should never be left unattended when plugged in.
2. Close supervision is necessary when the device is used by, on, or near children or people with certain disabilities. Do not use on infants or pets.
3. Use this device only for its intended use as described in this manual. Only use attachments/accessories specified by the manufacturer.
4. Never operate this device if it has an excessively hot or damaged cord or plug, if the plug is not able to be firmly inserted into the electrical outlet, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Do not attempt to disassemble, repair, or modify the device. Contact the Bioprogramming Information Center immediately for further instructions/support.
5. Keep the cord away from heated surfaces. Do not damage, forcibly bend, pull, tie up in a bundle, place heavy objects on, pinch, or modify the power cord. During storage, do not wrap the power cord around the body of the device. If it becomes twisted during use, straighten it out prior to storage.
6. Do not touch the nozzle during use as it may be extremely hot. During operation, do not block the nozzle with your hair or a brush for an extended period of time.
7. Do not store the device with small objects such as bobby pins or clips as they may get trapped inside the device.
8. Do not use outdoors or operate near aerosol (spray) products or other flammable materials such as alcohol, gasoline, paint thinner, petroleum-based solvents, or nail polish remover.
9. Do not use an extension cord with this device.

- 
- When pulling out the power cord, always grip the plug itself. Never pull it out by the cord.
  - Do not use this device for any purpose other than the styling of hair. Do not use it to dry any objects.
  - After use, do not leave the device with the power on.
  - To prevent fire, discoloration and/or warping of surrounding objects, always make sure that the device has completely cooled down before placing it next to or inside objects made of plastic that may melt due to excess heat.
  - Do not press the buttons with excessive force, or repeatedly when not necessary.
  - During use, make sure hair is not sucked into the air intake.
  - Attachments may be hot during use. Let them cool completely before handling.
  - Do not place the device on any surface during use.
  - During use, keep hair away from the air intake.
  - Never use while sleeping.
  - Do not operate with a voltage converter.
  - Never block the air openings of the device or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
  - Never drop or insert an object into any opening.
  - Do not direct hot air toward eyes or other heat-sensitive areas

**WARNING - Do not use this device near bathtubs, showers, sinks, or other vessels containing water.**

---

## SAVE THESE INSTRUCTIONS

This device is for use on a circuit having a nominal rating of 100-240V and is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the device is connected to an outlet having the same configuration as the plug. Do not modify the plug provided; if it does not fit the outlet, have the proper outlet installed by a qualified electrician. If the device must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

### HOW TO USE THE ALCI

An ALCI (Appliance Leakage Circuit Interrupter) is built into the plug of the device. This will make the device inoperable under some abnormal conditions, such as accidental immersion in water. If the device is immersed in water, do not attempt to reset the ALCI safety plug. The ALCI safety plug is equipped with a reset and test button to check the operation of the device.

TO USE:

- Press the reset button on the ALCI safety plug.
- Plug the ALCI into an AC outlet then press the test button.
- The reset button will pop out. This verifies the safety plug is operating properly. If the reset button does not pop out, do not use the device. Contact the Bioprogramming Information Center immediately for further instructions/support.
- Press the reset button to reactivate the ALCI safety device. Your device is ready for use.

Repeat this procedure every time you use the device to confirm that the safety device is ready and operational.

To reduce the risk of electric shock, this device has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to alter or change the safety feature in any way.

## RATINGS & SPECIFICATIONS

Product Name	REPRONIZER 3D Plus
Model Name	REP3D-G-US
Weight	Approx. 1.65 lb. / 26.35 oz.
Size	9.0 (H) X 9.2 (W) X 4.1 (D) in.
Power Supply	AC 125V, 60Hz
Power Consumption	1,200W ± 10%
Temperature	Approx. 230°F (Hot Air)
Safety Mechanism	Overheat prevention device (Thermostat/ thermal fuse)
Power Cord Length	9 ft.
Accessories	Nozzle x1, Foam Filter x2

## OPERATING INSTRUCTIONS

### Major Parts

#### Front View



## OPERATING INSTRUCTIONS

### General Operation

# 1

## Insert the power plug into an electrical outlet.

### Check switch position

Make sure that the main switch is in the "OFF" position prior to plugging in the cord.

### Insert securely

Be sure to securely plug in the power cord so that it is not loose.



# 2

## Select the air setting.

### Check switch position

Move the main switch to the position corresponding to the air setting you wish to use.

### Using the "Quick Cool" Button

Even while using hot air, you can easily switch to using cool air by pressing the "Quick Cool" Button. Cool air will blow out as long as the button is being held down.

**COOL** "Quick Cool" Button \*Hold down to use

### Main Switch

- HIGH High Hot Air
- LOW Low Hot Air
- COOL Cool Air
- OFF Off



# 3

## After use, be sure to place the main switch in the "OFF" position and remove the plug from the outlet.

### Check switch position

Make sure that the main switch is in the "OFF" position prior to removing the plug.

### Hold the plug

Hold the plug when pulling out the power cord.

### Caution

- Excessive exposure of hot air on your hair may lead to burnt or discolored hair. Use with caution.
- Refrain from using the device with wet hands. Doing so may result in electric shock.
- Refrain from wrapping the power cord around the device during storage.  
\*Doing so may damage the power cord and result in fire or electric shock.
- Do not leave the power cord twisted during storage. If the power cord becomes twisted during use, straighten it out prior to storage.  
\*Leaving the power cord twisted may damage it and result in fire or electric shock.
- This device has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not securely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to counteract this safety feature.

## OPERATING INSTRUCTIONS

### Styling Your Hair

#### 1 Use a towel to remove excess water after washing your hair.

- Do this until water stops dripping.
- Rather than rubbing your hair, it is better to wrap it in the towel and squeeze.



#### 2 Blow dry your hair.

The device has three air settings

- **HIGH** HIGH Hot Air
- **LOW** LOW Hot Air
- **COOL** Cool Air

**"Quick Cool" Button**  
**Main Switch**



- The three air settings can be used in combination for a variety of hair styles.
- The nozzle may be extremely hot during or after use. Be careful not to touch the nozzle.



#### **"Quick Cool" Button** **COOL**

\*Hold down to use

Press this button to quickly switch to cool air, even when hot air is blowing out.

Press and hold this button for cool air. Release it and it will switch back to the original hot air setting.

#### 3 Run your fingers through your hair while drying to ensure that hot air reaches the roots.

- \* Take care to ensure that your hair is not sucked into the air intake.
- \* When using this device on hair that has been colored, some individuals may experience fading or discoloration.



## OPERATING INSTRUCTIONS

### Bioprogramming-Specific Use

step

1

#### First, use it to dry your hair

While drying your hair, use your fingers to comb through each strand allowing air to blow from root to tip.

step

2

#### Next, use it as a beauty device

- Blow cool air onto your scalp. Use your fingers to lift hair from the scalp to ensure an even and thorough treatment. Continue to blow cool air onto any areas where you would like to increase volume.
- Alternate between hot and cool air at a ratio of 1:1 while angling the REPRONIZER to blow with the flow of your hair to create a beautiful, silky finish.

step

3

#### Focus on areas you wish to improve

For a greater Bioprogramming effect, continue to blow hot and cool air at a ratio of 1:1 onto the ends of the hair that tend to frizz or split.

- \* Use the device when you have extra time at night or prior to styling your hair in the morning. Hair becomes moisturized and glossy, just as if you used a treatment.
- \* The effects detailed herein will vary by person.

### Maintenance

#### Cleaning the body

While the device is turned off and unplugged, wipe the exterior with a damp cloth that has been soaked in a neutral detergent diluted with water and well wrung out.

#### Removing the filter cover

Rotate the cap clockwise to release the filter cover from the device body.


- \* Please be careful to not injure your nails or fingers.



#### Cleaning the foam filter


Remove the foam filter from the body, wash in water and remove dust by gently tapping. When the filter is very dirty, please exchange for a new filter.

- \* Please wait until the filter has completely dried before reinstalling into the device.

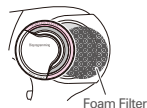

#### Cleaning the mesh filter


If dust or debris have collected on the mesh filter, gently tap the filter with a soft brush to remove the dirt.

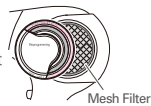

#### Attaching the filter cover

Rotate the cap counterclockwise to reattach the cover.

- \* Please note, when attached correctly you will hear a clicking sound and the "Bioprogramming" logo will appear horizontal.
- \* Note that the front and back filter covers are shaped differently.

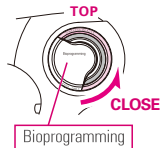



## OPERATING INSTRUCTIONS

### Warning

**Always turn the device off and unplug it before attempting any maintenance.**

Failure to unplug it from the electrical outlet may result in fire.

**Do not use alcohol, paint thinner, petroleum-based solvents, or nail polish remover on the device.**

This may result in damage, cracking, or discoloration.

**Do not immerse the device in water when cleaning.**

Doing so may result in a short circuit or electric shock.

## Device Inspection

**Regular inspection is recommended for safe use.**

**\* Deterioration may happen over time due to heat, etc.**

- Dust has accumulated in the air intake.  
→ Please carry out maintenance ( page 12 )

**In case of the following, immediately stop use and contact the Bioprogramming Information Center.**

- Power cord abnormalities such as twisting, swelling, or denting.
- Part of the body or handle is misshapen.
- Part of the power cord or plug is abnormally hot, even though outlet connection is not loose.
- Body or handle is abnormally hot.
- Air blows inconsistently.
- Air stops blowing and the inside becomes bright red.
- Unusual sound or vibration during use.
- Burning smell.



## TROUBLESHOOTING

Problem	Possible Cause	Treatment
Power plug is abnormally hot.	Outlet connection may be loose.	Use an outlet that is not loose.
Part of the power cord is abnormally hot.	Power cord may have started to burn out.	Immediately stop use and contact the Bioprogramming Information Center.
Power cord abnormalities such as twisting, swelling, or denting.	Weight and/or object is being applied to part of the cord.	
Sparks from the power plug.	Sometimes sparks emit when the power plug is inserted into the outlet while the main switch is on. This is not an abnormality, but a phenomenon that occurs when electrical appliances are connected to a current-carrying outlet.	Insert the power plug into the outlet after turning off the main switch.
The body or handle is abnormally hot.	_____	Immediately stop use and contact the Bioprogramming Information Center.
Part of the body or handle is misshapen.		
There is a burning smell.		
Unusual sound or vibration during use.		
Air frequently cools despite using hot air setting.	Dust and/or debris may be stuck in the air intake or air outtake.	Turn the main switch off and pull out the power plug before conducting maintenance.
Hot air is hotter than usual.	Your hand, hair, etc. may be blocking the air intake or air outtake. Dust and/or debris may be stuck in the air intake.	Make sure nothing blocks the air intake or air outtake during use.

Problem	Possible Cause	Treatment
Air blows inconsistently.	Power cord may have started to burn out.	Immediately stop use and contact the Bioprogramming Information Center.
Air stops blowing.		
Air stops blowing and the inside becomes bright red.	_____	
Cool air does not come out despite pushing COOL (QUICK COOL button.)	The QUICK COOL button is not being held down.	Hold down the QUICK COOL button.
Cool air does not come out despite holding down COOL (QUICK COOL button).	_____	Immediately stop use and contact the Bioprogramming Information Center.
Device has been dropped.		
Device seems to be less effective than before.	Dust and/or debris may be stuck in the air intake or air outtake.	Turn the main switch off and pull out the power plug before conducting maintenance.
	Presence of internal moisture.	Set to HIGH or LOW in a moisture-free area and let it run for a few minutes. Please be present while carrying this out.

If the above troubleshooting measures do not resolve the current issue, do not attempt to repair the device by yourself. Please contact the Bioprogramming Information Center. For details, please refer to page 17.

## CUSTOMER SUPPORT & LIMITED WARRANTY

### CUSTOMER SUPPORT

#### THANK YOU FOR PURCHASING A LUMIELINA BIOPROGRAMMING DEVICE.

If you have a question about your device or your device requires service, please call the Bioprogramming Information Center with your serial number and details of when and where you purchased the device.

If your device is under Limited Warranty and it is a covered repair, it will be repaired at no cost.

If your Limited Warranty period has ended, please contact the Bioprogramming Information Center with questions regarding repair.

#### Product, Order, and Repair Inquiries

#### Bioprogramming Information Center

1-888-585-LUMI (5864)

10:00 AM to 6:00 PM ET (Except for weekends and holidays)

customersupport@lumielina.com

\* Changes may occur to the above contact information and hours of operation.

### BIOPROGRAMMING REGISTRATION REQUIREMENTS

The Limited Warranty period is six (6) months from date of purchase unless extended by registering your device.

To ensure you receive prompt and efficient service, please register online as a Bioprogramming device owner by visiting [bioprogramming.com/register](http://bioprogramming.com/register)

Following the successful registration of a Bioprogramming device, your official Extended Warranty Registration Certificate will be sent via email. Please print and save this Extended Warranty Registration Certificate for your records.

\* Please note, if the submitted product registration form is incomplete, the Extended Warranty Registration Certificate may not be generated and the extension to the initial Limited Warranty period may not be approved.

\* Personal information submitted by customers may be used while processing any repair requests submitted during the Limited Warranty period, for device inspections, or for marketing and communication purposes.

### BIOPROGRAMMING LIMITED WARRANTY TERMS & CONDITIONS

This Limited Warranty is only valid in the U.S. and Canada.

This Limited Warranty covers the device against defects in material or workmanship for six (6) months from the date of purchase. This Limited Warranty may be extended for up to eighteen (18) months if the product is registered in accordance with the Bioprogramming Registration Requirements.

**PLEASE NOTE:** This Limited Warranty is only valid with a copy of the original proof of purchase or Extended Warranty Registration Certificate. If there is no proof of purchase or Extended Warranty Registration Certificate, the device will not be covered.

The device must be purchased from an authorized Bioprogramming retailer or distributor. Proof of purchase from any unauthorized sellers or unauthorized online merchants is not accepted.

The Terms and Conditions of this Limited Warranty are subject to change without notice. Please visit the Bioprogramming website for further details regarding the Limited Warranty. To apply for the Limited Warranty extension, please register your device at:

[bioprogramming.com/register](http://bioprogramming.com/register)





LUMIELINA

LUMIELINA USA, INC.

505 Fifth Avenue, 28th Floor, New York, New York 10017-4917  
bioprogramming.com

Design and Technology by Lumielina in Japan / Assembled in Korea

\*Bioprogramming, Honshitsubi (本質美), TimeCess Beauty, Future Beautism, Time-Transcending Beauty (時を超える美), REPRONIZER, HAIRBEAURON, CUREINA, HairTimecess, SkinTimecess, and ColorTimecess are all trademarks or registered trademarks of LUMIELINA INTERNATIONAL INC. and its related entities.

Performance-based improvements in the use or design of the product may occur without advance notice.

REP3D-G-US 220112