





ASSEMBLY INSTRUCTIONS CB1500SOW

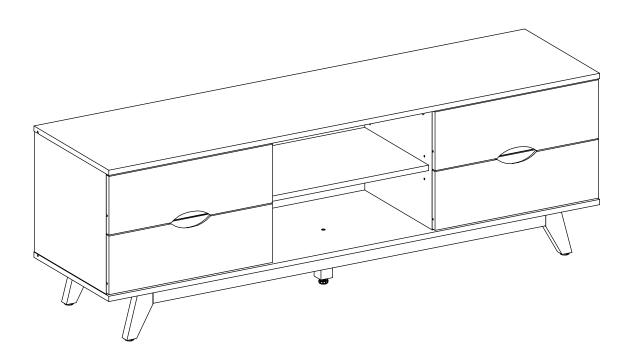



Thank you for choosing AVS CB1500SOW AV Furniture. Before beginning assembly, please check all parts are included and undamaged. For any assembly or parts enquiries, please contact Arisit Pty Ltd on 1300 762 219 or email to arisit@arisit.com

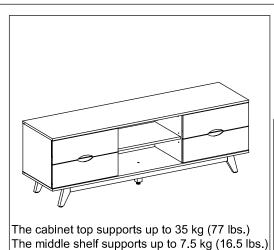


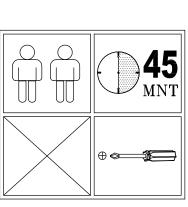

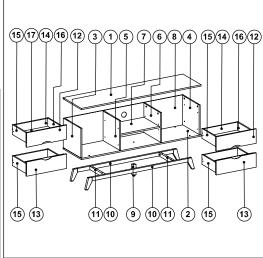


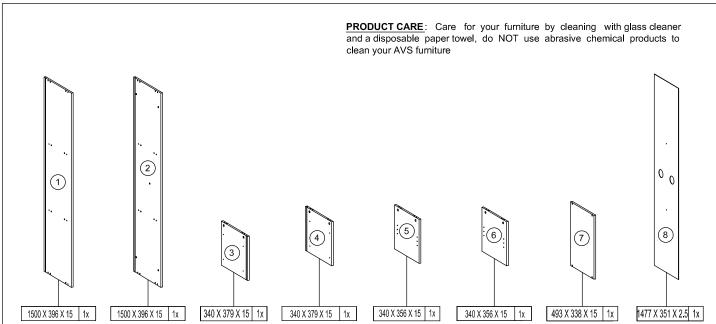


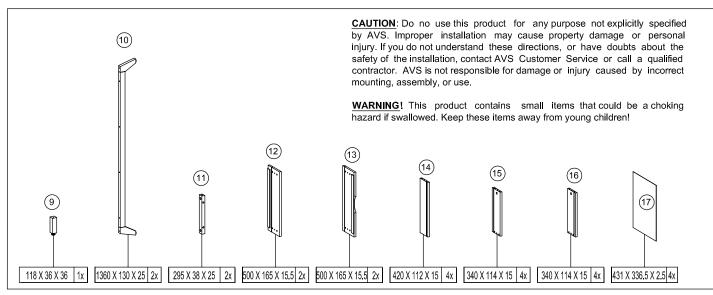


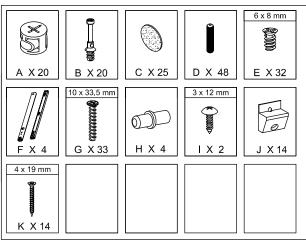



Arisit intends to make this manual accurate and complete. However, Arisit makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Arisit makes no representation of warranty, expressed or implied, regarding the information contained herein. Arisit assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

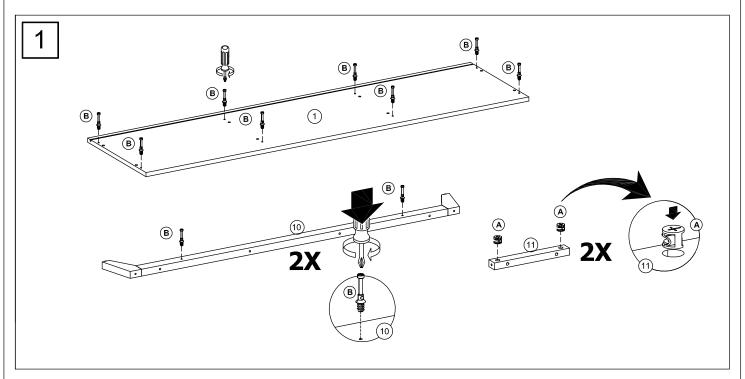


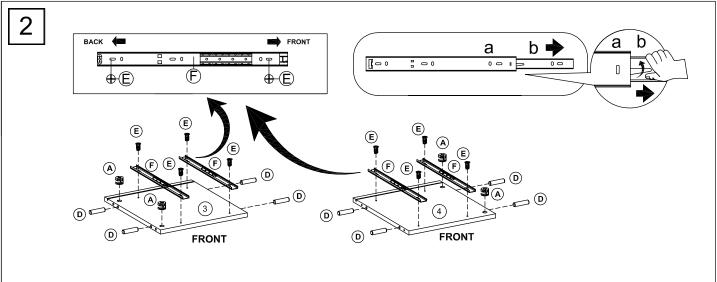


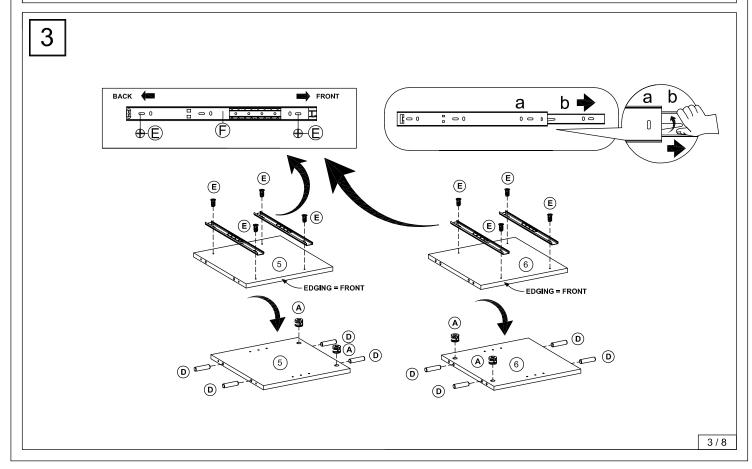


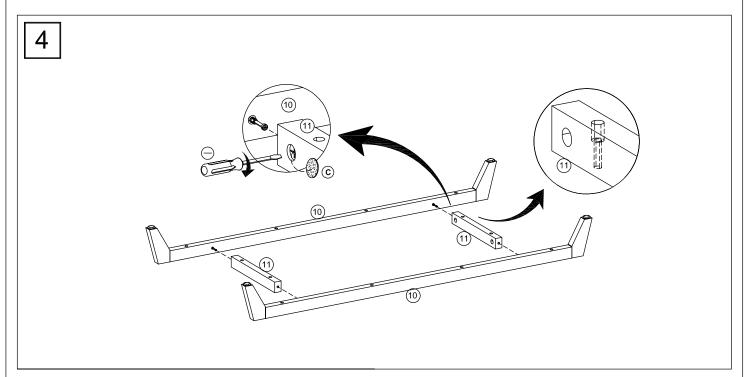


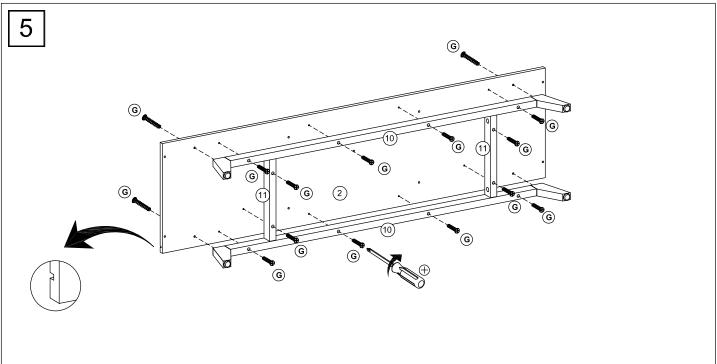


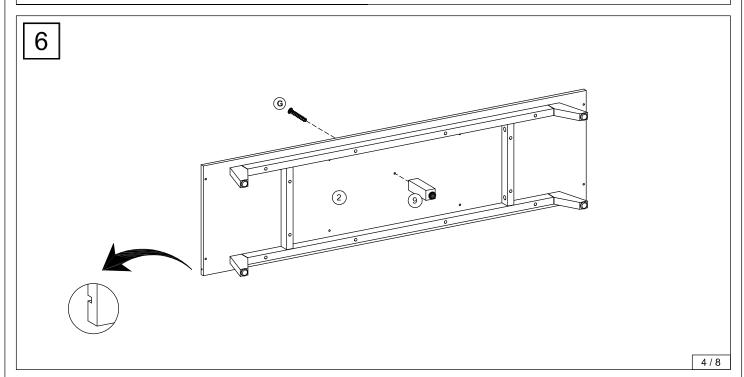


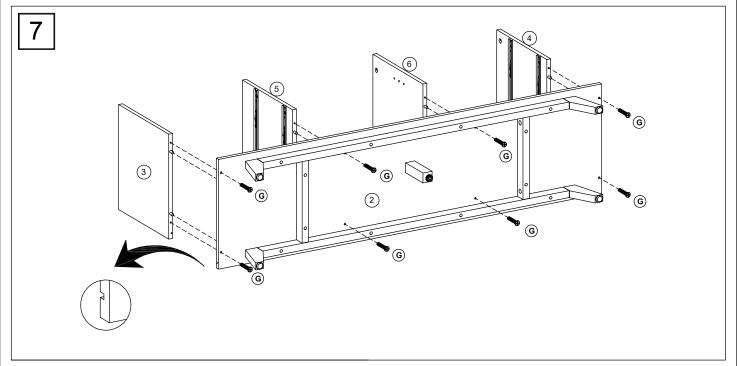


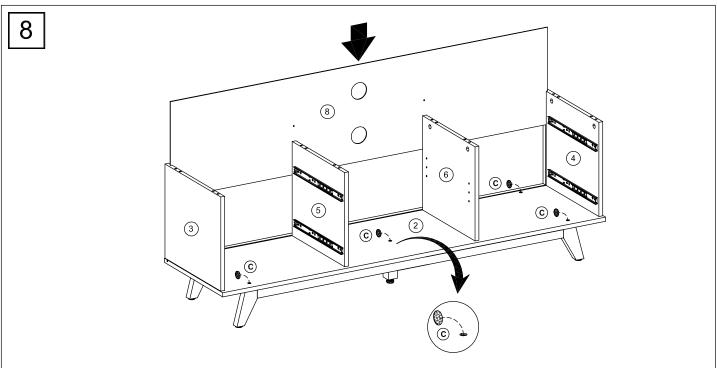

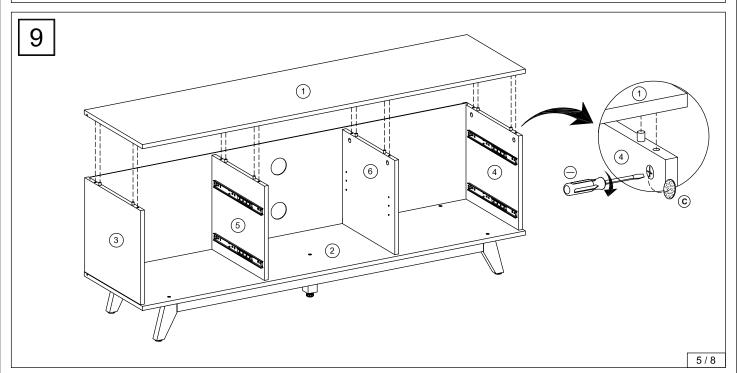


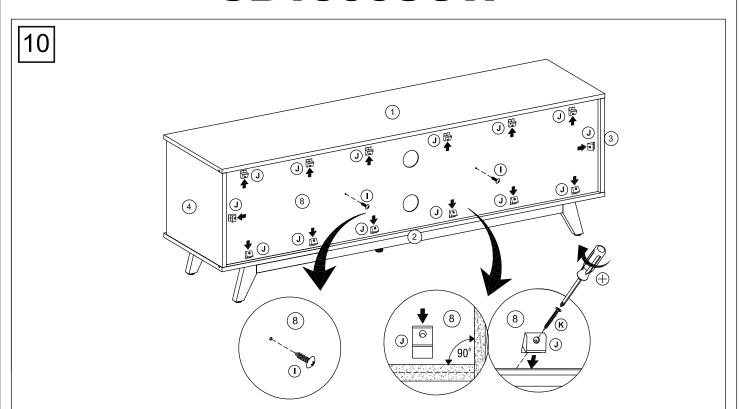


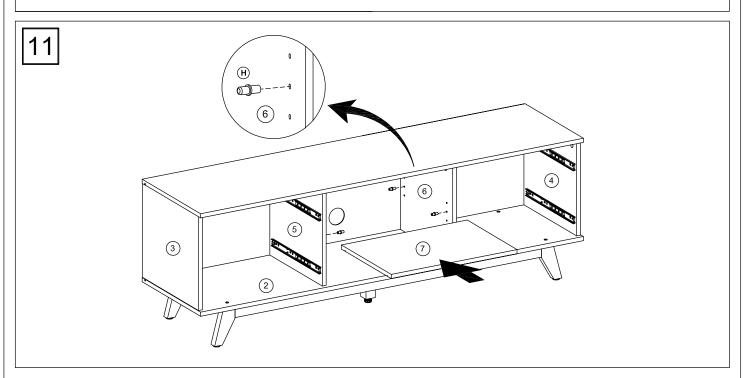


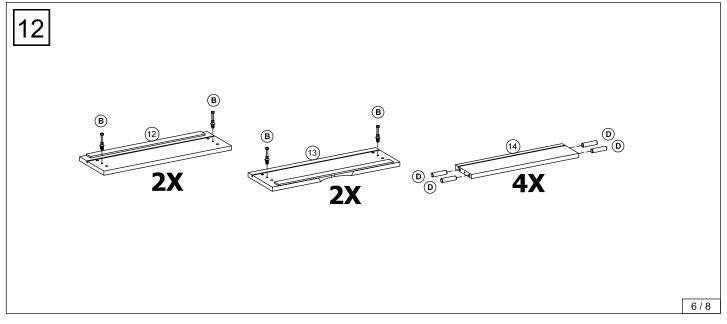


13

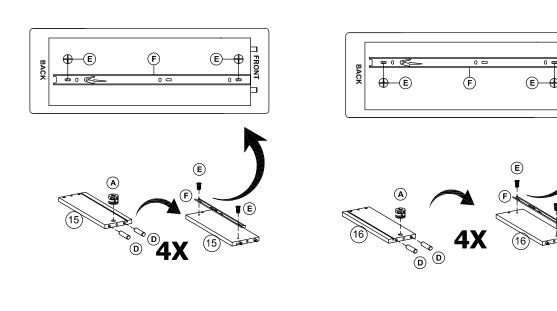

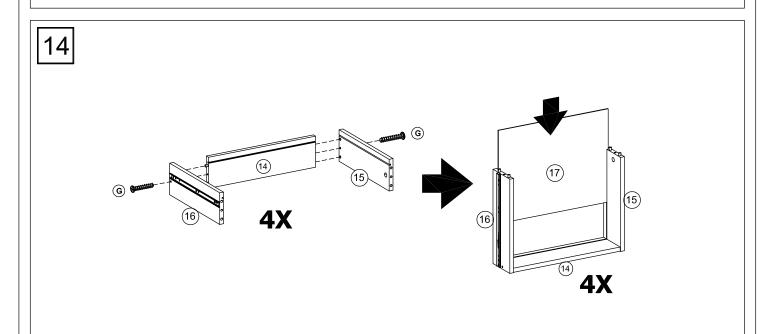

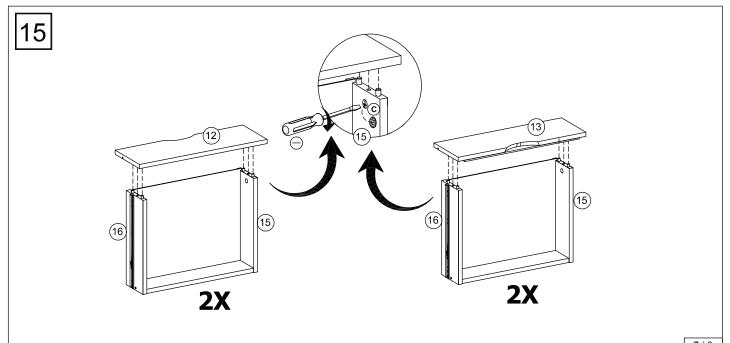

16

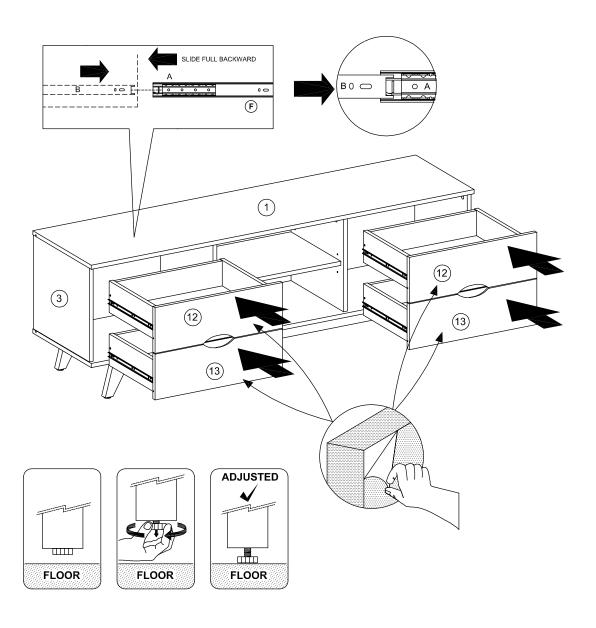

PART NUMBER REFERENCE

NO	ID PART	DRAWING PART	DESRIPTION	UNIQUE CODE OF HARDWARE
1	А		CAMLOCK (15 X 12 MM)	CB1500SOW A
2	В	0	CAMBOLT (7,5 X 32 MM)	CB1500SOW B
3	С		CAM STICKER (20 MM)	CB1500SOW C
4	D		WOOD DOWEL (8 X 32 MM)	CB1500SOW D
5	E		FLAT HEAD SCREW (6 X 8 MM)	CB1500SOWE
6	F		SINGLE EXTENTION RAIL (350 MM)	CB1500SOW F
7	G		FLAT HEAD SCREW (10 X 33,5 MM)	CB1500SOW G
8	Н		PEN RACK	CB1500SOW H
9	1	()	PAN HEAD SCREW (3 X 12 MM)	CB1500SOWI
10	J		BACKPLY STOPPER	CB1500SOWJ
11	К	€ ::::::::::::::::::::::::::::::::::::	FLAT HEAD SCREW (4 X 19 MM)	CB1500SOW K

NO	ID PART	DESRIPTION	UNIQUE CODE OF HARDWARE
1	1	TOP PANEL	CB1500SOW 1
2	2	BOTTOM PANEL	CB1500SOW 2
3	3	LEFT SIDE PANEL	CB1500SOW 3
4	4	RIGHT SIDE PANEL	CB1500SOW 4
5	5	LEFT DIVIDER	CB1500SOW 5
6	6	RIGHT DIVIDER	CB1500SOW 6
7	7	ADJUSTABLE SHELF	CB1500SOW 7
8	8	BACK PANEL	CB1500SOW 8
9	9	CENTER LEG	CB1500SOW 9
10	10	WOOD LEG	CB1500SOW 10
11	11	BOTTOM SUPPORT PANEL (MIDDLE)	CB1500SOW 11
12	12	FRONT DRAWER PANEL (TOP)	CB1500SOW 12
13	13	FRONT DRAWER PANEL (BOTTOM)	CB1500SOW 13
14	14	REAR DRAWER PANEL	CB1500SOW 14
15	15	LEFT DRAWER PANEL	CB1500SOW 15
16	16	RIGHT DRAWER PANEL	CB1500SOW 16
17	17	BOTTOM DRAWER PANEL	CB1500SOW 17