

trent&steele

# INSTRUCTION MANUAL



**2 SLICE TOASTER**

**MODEL: TS 815**

## DESIGN

1. Toast lever
2. STOP button
3. Key REHEAT
4. Key DEFROST
5. Control
6. Full length crumb tray



## SAFETY INFORMATION

- Please read these Operating instructions through carefully before connecting your device to the mains, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. If you pass the device on to a third party, these Operating instructions must also be handed over.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance may be used only for its intended purpose. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
- Before connecting the appliance to the power source, check that the current and power match those given on the rating plate.
- Do not put the appliance or the plug in water or any other liquid. However should the appliance accidentally fall into water, unplug the appliance immediately and have it checked by a qualified person before using it again. **Non-observance could cause a fatal electric shock!**
- Never attempt to open the housing yourself.
- Do not place any kind of object into the inside of the housing.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- Check the cord and the plug regularly for any possible damage. If the cord or plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Do not use the appliance if it is dropped or otherwise damaged or if the cord or plug are damaged. In the case of damage, take the appliance to an electrical repair shop for examination and repair if necessary.
- Never attempt to repair the appliance yourself. **This could cause an electric shock.**
- Do not allow the cord to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
- For extra protection it is possible to fit the electric household installation with a fault current breaker with a rated breaking current of not more than 30mA. Ask your

electrician for advice.

- Make sure that there is no danger that the cord or extension cord may inadvertently be pulled or cause anyone to trip when in use.
- If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and/or plug may occur.
- This appliance is not suitable for commercial use nor for use in the open air.
- Never leave the appliance unattended while it is in use.
- Children should be supervised to ensure that they do not play with the appliance. Because they cannot recognize the dangers involved in the incorrect use of electrical appliances.
- Always remove the plug from the socket when the appliance is not in use and each time before it is cleaned.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **Danger!** Nominal voltage is still present in the appliance as long as the appliance is connected to the mains socket.
- Switch the appliance off before disconnecting from the mains.
- Never use the cord to carry the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a moment.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

## SPECIAL SAFETY INSTRUCTIONS

- **Caution: Danger of burns!** Bread can burn. Do not, therefore, use the toaster near or below curtains or other combustible materials.
- Do not place in the bread slot (7) any oversized baking utensils and bread wrapped in aluminium foil or plastic foil, because of the risk of burning or electrical shock.
- Bring the toast lever in the up position, before pulling out the plug from the socket.
- **Burning hazard:** Parts of the unit become very hot during operation. Touch only the handles or buttons.
- Let the unit cool down before removing or putting in any parts.
- Do not try to remove the food from the unit while the unit is still in operation.

- Do not use any accessories not supplied with this unit!
- This unit is suitable only for toasting bread. Do not heat up any other food with this unit.
- Do not ever put in bread with cheese or other spreads in the bread slot (7).

## BEFORE FIRST USE

- Remove all packing material.
- Heat the unit four to five times at the highest setting without bread, in order to burn off residues left during manufacturing process. Ensure proper ventilation while doing this (say, by opening the window).

## OPERATION

- Place bread slices in the bread slot (7). Each bread slot (7) is designed for maximum of one bread slice per roasting operation.
- Connect the main plug to a suitable socket.
- You can select the degree of browning by using the controller (4): (1 = light brown, 7 = well done). The stage 3 is recommended for the first use.
- Push down the toast lever (6) fully, till it latches automatically. The check lamp (5) lights up and the roasting process begins.
- The unit will switch off by itself, when the set browning level is reached. The toast lever (6) jumps up. The bread slices are fully toasted.
- **Caution:** The bread slices and parts of the unit are very hot during and immediately after the toasting process.
- You can change the degree of browning even during the toasting process, by using the controller (4).
- **Toasting of deep frozen bread:** Place bread slices in the bread slot (7). Set the controller (4) at the desired degree of browning. Push the toast lever (6) down. Also press the key **DEFROST** (2). The LED next to this key light up during the roasting process. The roasting process starts.
- **Heating up already toasted bread:** Set the controller (4) at the desired degree of browning. Place bread slices in the bread slot (7). Push the toast lever (6) down. The roasting process starts. Also press the key **REHEAT** (1). The LED next to this key lights up during the roasting process. The roasting process starts.
- **Bun attachment (9):** Use the bun attachment (8) for warming up and roasting buns. **Caution!** Never place buns directly on the bread slot.
- Fold up the roll attachment completely prior to use. Place it – as shown in the illustration- onto the toaster, above the toasting slot (7). Place the buns on the bun attachment (8) and press the toast lever (6) downwards till it clicks into place. You can remove the buns from the bun attachment when the toast lever springs up. **Caution!** The bun attachment becomes very hot.

## HOW TO CLEAN THE TOASTER

Your toaster comes with a removable, slide out crumb tray. This is a quick and convenient way to remove crumbs. Always ensure that the toaster is unplugged and has cooled down before removing and emptying the crumb tray. Clean the crumb tray with a damp cloth and always dry the tray properly before replacing it into the toaster.

Use a stiff brush to remove any burnt-on crumbs.  
Wipe the outside of the toaster with a damp cloth.  
Do not use a sharp object or abrasive substance to clean the toaster.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

## **TECHNICAL SPECIFICATIONS**

Operating voltage : 220-240V~50Hz

Power consumption : 780-930W

# trent&steele

## 24 MONTHS WARRANTY CARD

**This product is covered by a 24 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).**

Upon receipt of your claim, Trent & Steele will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested.

Should your product develop any defect within 24 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with the instruction manual), accidental damage, or normal wear and tear.

### Your warranty does not:

- \* cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- \* cover damage caused by:
  - > power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;
  - > servicing or modification of the product other than by Trent & Steele or an authorised Trent & Steele service centre;
  - > use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Trent & Steele specifications; or
  - > exposure of the product to abnormally corrosive conditions.

**THE BENEFITS given to you by our warranty are in addition to other rights and remedies under law in relation to the product.**

**In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.**

**If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.**

### Important:

**You must keep the purchase receipt with this warranty card for the warranty to be valid. This product is covered under warranty for domestic usage only.**

**DO NOT MAIL. Keep this with your original purchase documents.**

## trent&steele WARRANTY CARD

Complete the details below and **keep this** with your original purchase documents for any claim under warranty. If you have any queries or require further information on your product please contact Trent & Steele (☎ 03 93599799).

CUSTOMER NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_  
\_\_\_\_\_

MODEL NO.: \_\_\_\_\_

STORE OF PURCHASE: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_