

trent&steele

INSTRUCTION MANUAL



Kettle
Model TS868SS

IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs are only carried out by an authorised service agent.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not leave the appliance unattended while in use.
- Do not use outdoors.
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Damage caused by noncompliance with these instructions or any other improper use or mishandling will forfeit the appliance's warranty.

Before operating the machine...

- Check that the mains voltage corresponds with the rating of the appliance.
- Do not operate the appliance with a damaged cord or plug or after the appliance has been damaged in any manner.
- Make sure that you position your kettle in an area far from curtains or any combustible material. This is to safeguard against fire.

3

- Unplug from outlet when not in use or before cleaning.
- To disconnect, remove the plug from the outlet. Do not pull plug out by the cord.
- Never operate the appliance empty. In the event of such an occurrence, the thermal cut-off inside the kettle would operate to turn off power automatically. Unplug the appliance and let it completely cool down.
- This appliance is for boiling water only. Don't use it for milk, coffee or tea, etc. When boiling, remember to keep the water level between MIN and MAX.
- The kettle is only to be used with the stand provided.

GETTING TO KNOW YOUR KETTLE



4

USING YOUR KETTLE

- Discard the first batch of boiled water from your kettle to make sure any leftover dust/elements from manufacturing is eliminated.
- Open the lid by pressing the lid release button. Fill the jug with water and close the lid.
- Place the jug on the base and insert the plug in the wall socket. Position the kettle so that the spout is facing away from you.
- Open the kettle, add water to the kettle and cover the kettle. You may opt to add water through the spout.
- Insert the power plug into socket then put the kettle on the base and turn on the switch. Remember not to turn on the kettle switch before placing the kettle on the base.

Note: In order to prevent boiling water from spraying or spilling out, do not overfill jug. Water should be between the MIN and MAX marks.

- The kettle will automatically power off.
- Wait until the water stops boiling before pouring.
- To clean kettle, fill it with water to the maximum and then drain after boiling.

CLEANING AND MAINTENANCE

- Remove the plug from wall outlet and let the appliance completely cool down before cleaning.
- Clean the jug with a damp cloth. Never immerse the appliance in water. Never put the appliance in a dishwasher. Make sure that the electrical connections do not become damp.

5

- If the interior of the jug has become severely discolored, the best way to clean it is with a damp cloth and a little dishwashing soda. After cleaning, rinse the jug very thoroughly.
- Do not immerse power cord, kettle and base in water.
- In order to maintain the polish of the outer surface, do not use abrasive cleaner to wipe the stainless steel housing.

Specifications:

Rated Voltage / Frequency : 220-240V / 50Hz
Rated Power : 1850-2200W
Rated Capacity : 1.8 litres

6