



HS-44 Wastegate



Spring Pressures:

Blue: 5 psi (Installed)


Red: 3 psi

Green: 5.5 psi

Yellow: 5.5 psi

For higher boost pressure, all springs are able to be combined.

Example: Install both the Blue and Red spring for ~8psi. All springs can be ran together.

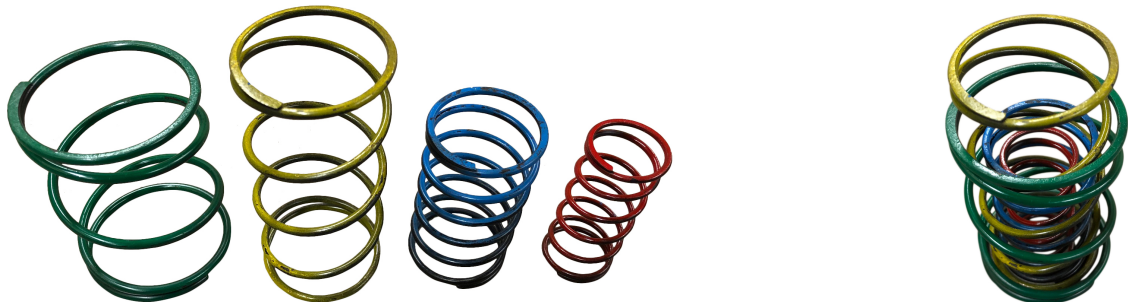


Boost Reference: There are (2) locations of bottom ports on the wastegate located in the Polished section. One of these ports needs to see a Boost reference. We recommend from the intake manifold. The other port you do not use is to get closed via installing our supplied plug with copper washer. You may use either port, there are 2 for you convenience during install. The top port is to be left open to vent unless using a boost controller. If using a boost controller, please refer to the boost controller instructions for proper connection instructions.

Top Port. Leave vented open unless using a boost controller.



Bottom Ports (boost reference). One Plugged and One to receive the boost reference.

Firing Ring: Ensure the Firing Ring (CNC Valve Seal) shown below is installed on the bottom of the wastegate. This ring simply rests on the bottom of the valve and seals in the recess on the Inlet flange.

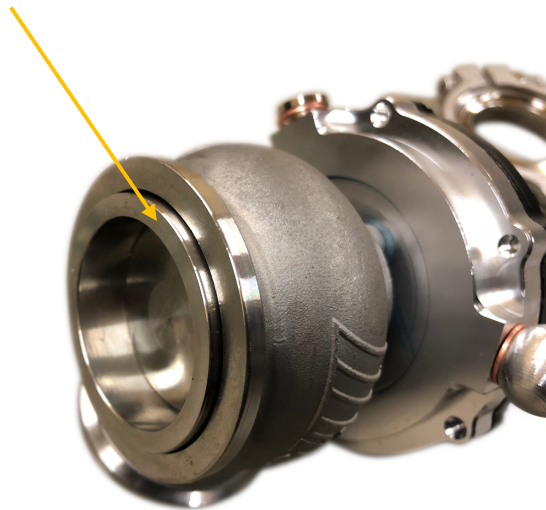

Thank you for choosing Huron Speed. If you have any questions as to this product or installation of it, please contact us immediately at: huronspeedproducts@gmail.com Thank you!