SPERAS	SPERAS T3R is an innovative noiseless "thrower". Despite its compact size it can reach a maximum throw of 1095 meters with its output of 1,600 lumens. This together with a maximum run time of 92 hours makes it an excellent high performance flashlight for hunting, outdoor, search and rescue, etc.	Specifications FL1 STANDARD High Medium Low ECO Strobe SOS *** Output 1600LM 600LM 120LM 20LM 1600LM 120LM © Runtime 2.1H 3.75H 17.5H 92H - -	Operating instructuon 1. Correctly insert the battery. (Please follow Figure 1)
Image: Second	 Features # Beam Distance: 1095m # Brightness:1600lm maximum output. # Modes: 6 (High, Medium, Low, Eco, Strobe, SOS). # Type C charging and functionality to use as a power bank to charge various electronic devices. # Noiseless Switches: Multifunctional tail button & side button to change brightness levels. # Memory mode function: Memory mode can be activated and de-activated. When activated the flashlight will return to last used setting when switched on with the Tail Button. If the memory mode is not activated the flashlight will default to the HIGH mode when switched on with the Tail Button. # Co mode: 20lm ideal for a reading with a maximum runtime of 92h. # Optional remote pressure switch for hunters. # Smart temperature control system. # Over discharge protection that automatically downshifts the brightness when the battery is low in order to prevent the battery from over discharging. # High-strength aerospace aluminum body, produced by CNC precision machining premium type III; Hard anodized anti-abrasive finish for extreme durability 	Beam 00.000cs 109.250cd 19.500cd 4.350cd - - ■ Beam 1095m 66 1m 279m 132m - - ■ Ebeam 1095m 66 1m 279m 132m - - ■ Ebeam 1095m 66 1m 279m 132m - - ■ Ebeam 000cs 66 1m 279m 132m - - ■ Ebeam 005m 66 1m 279m 132m - - ■ Impact 1.5m . <td> In the OFF state, press and hold of the Tail Button for longer than 0.3 seconds, to enter the high mode or memory mode (Note: depending on whether the memory mode is activated or not back or the thigh mode or memory mode is activated or not back on the high mode or memory mode is activated or not back on the high mode or memory mode is activated or not back on the high mode or memory mode (Note: it depends on whether the memory mode is activated or not back on the high mode or memory mode (Note: it depends on whether the memory mode is activated or not back or the high mode or memory mode (Note: it depends on whether the memory mode is activated or not back and the trail Button for longer than 0.3 seconds to enter the high mode. Releasing tail button will be back to previous state in any state, double click the Tail Button to enter the strobe mode. Double click again to change the SOS mode and click again to revert back to previous mode before strobe mode. </td>	 In the OFF state, press and hold of the Tail Button for longer than 0.3 seconds, to enter the high mode or memory mode (Note: depending on whether the memory mode is activated or not back or the thigh mode or memory mode is activated or not back on the high mode or memory mode is activated or not back on the high mode or memory mode is activated or not back on the high mode or memory mode (Note: it depends on whether the memory mode is activated or not back on the high mode or memory mode (Note: it depends on whether the memory mode is activated or not back or the high mode or memory mode (Note: it depends on whether the memory mode is activated or not back and the trail Button for longer than 0.3 seconds to enter the high mode. Releasing tail button will be back to previous state in any state, double click the Tail Button to enter the strobe mode. Double click again to change the SOS mode and click again to revert back to previous mode before strobe mode.
In the OFF state, click the side button to enter the memory mode. Click again to change the mode and high. Long press (o, 2), seconds, to the side button to enter the memory mode. Click the side button to enter the memory mode. Click the side button to enter the memory mode. Click again to change the mode and high. Long press (o, 2), seconds, to the side button to enter the memory mode. Click the side button to enter the memory mode. Click the side button to enter the strobe; double click the side button to enter the strobe; double click the side button to enter the the strobe; double click the side button to enter stok.	 memory function is activated or not). When released it will turn off. If the strobe/SOS mode was activated by the side button of flashlight one click of the S1 button will turn off the flashlight. 2) For S2/S3 button: In the OFF state, press and hold will enter the strobe mode and if release it will switch back to OFF state. In the ON state, one click will change mode and circle from eco, low, medium and high. In the ON state, press and hold for longer than 0.3 seconds it will revert back to the previous mode. If the flashlight is in Strobe mode, which was activated by the side button, press and hold the S2/S3 button for 0.3 seconds, it will stay in strobe mode and revert back to the previous state when released. If the flashlight is in the SOS mode which was activated by the side button, press and hold the S2/S3 button for it will change to strobe mode and it will revert back to previous mode and it will revert back to previous mode and it will revert back to previous state when released. 	 1) Quickly click the side button three times; 2) Quickly click the side button three times; 3) Quickly click the S1 button three times. Any one of the above methods can be used to unlock the flashlight and the main LED will flicker twice to indicate that the flashlight is ready to function. 6. Charge and Discharge by OTG connector The T3R supports 5V/2A charging. Please connect a 5V/2A adapter and insert the type C charging port of the flashlight for charging. When charging the LED indicator will show red and when fully charged the indicator will show green. Please note that when charging the flashlight may only be used in ECO mode. The T3R supports 2A current discharging. Please insert the OTG connect to the type C charge port of the flashlight and connect a USB cable to discharge as a power bank. 7. Memory Mode Function The memory mode function can be activated or de-activated. In any state, the memory mode function is activated or de-activated by pressing the side button for 10 seconds. The green indicator on the side button will flicker 5 times to indicate that the 	 Usage and Maintenance The temperature on the surface of the flashlight may increase during use especially during period continuous high lumen output. The maximum safe operating temperature on the surface is under 55 degrees Celsius. Fully charge battery before initial use. The included battery pack is charged to less than 5 for safe shipping purposes. To maintain the waterproof rating, please lubrit the O-ring with silicone safe lubricant and replabroken O-rings as soon as possible. Do not shine light directly into eyes. For long-term storage please remove the batter and store in a cool and dry location. Warranty. The product is provided with a Limited Lifetime Warranty. The warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance repairs done by anyone other than an authorizzinetial or SPERAS isteelf. # For more information contact the SPERAS tear
Side Button In any statis 2x click STROBE 2x click SOS 1x click Previous mode before STROBE 1x click STROBE Figure 3	1)Lock × Press both buttons (Side Button + Tail Button or Side Button + S1 button) for 2 seconds. The main LED will flicker twice to indicate that the flashlight is locked. In this state the flashlight will not function. × In the locked state the orange LED indicator in the middle of the side button will flicker five times to	 memory mode function is activated. The red indicator on the Side Button will flicker 5 times to indicate that the memory mode function is deactivated. 8. Battery indicator ^x Turn on the flashlight and the LED indicator on the 	Shenzhen Speras Lighting Co., I Add.: 4F, Building G, Gangshen Innova Park, Huaning Road, Dalang Street, Lon District, Shenzhen, China. Tel.: 0086-0755-2107 2597 Email: info@speraslight.com Web: www.speraslight.com

摊开240x110mm 折后60x110mm 157g铜版纸单黑双面印刷