## AGROVPLOW

AP102 SPARE PARTS MANUAL

## AP102 SPARE PARTS

## Table of Content

| <ol> <li>AP102 Plough Assembly</li> <li>1.1.607-1001</li> <li>1.2.607-1002</li> <li>1.3.607-1003</li> <li>1.4.607-1004</li> </ol> | AP102 9 Rows 6m Working Width<br>AP102 7 Rows 4.5m Working Width<br>AP102 5 Rows 3.5m Working Width<br>AP102 7 Rows 5.25m Working Width | PAGE<br>3<br>8<br>13<br>18 |
|---|---|----------------------------|
| 2. Frame and Shank Assy<br>2.1.607-2001<br>2.2.607-2002<br>2.3.607-2003<br>2.4.607-2004   | AP102 9 Rows 6m Working Width<br>AP102 7 Rows 4.5m Working Width<br>AP102 5 Rows 3.5m Working Width<br>AP102 7 Rows 5.25m Working Width | 23<br>25<br>27<br>29       |
| 3. A-Frame<br>3.1.607-2010  | AP102 A-Frame   | 31                         |
| <ul><li>4. Rear Tow Hitch</li><li>4.1.607-2015</li><li>4.2.607-2020</li></ul>   | AP72 Rear Tow Hitch Bridge Stye<br>AP72 rear Tow Hitch single Stem Style  | 32<br>33                   |
| 5. Wheel Arm Assembly 5.1.607-2014 5.2.607-2013   | AP72 WHEEL ARM ASSEMBLY LH<br>AP72 WHEEL ARM ASSEMBLY RH  | 34<br>35                   |
| 6. Toolbox<br>6.1.607-2017  | AP 102 Toolbox  | 36                         |
| 7. Axle<br>7.1.603-2040   | Stub axles assembly   | 37                         |
| 8. Hydraulic<br>8.1.607-5001<br>8.2.607-5002<br>8.3.607-5003<br>8.4.607-5004  | AP102 9 Rows 6m Working Width<br>AP102 7 Rows 4.5m Working Width<br>AP102 5 Rows 3.5m Working Width<br>AP102 7 Rows 5.25m Working Width | 38<br>43<br>47<br>51       |









































































































