

INSTRUCTIONS FOR USE

SAFETY REQUIREMENTS

- KEEP OUT OF REACH OF CHILDREN.
- DO NOT use this tool with acidic, flammable or combustible products. Use only with TORNADOR® approved products or neutral pH cleaners.
- Do not point cleaning tool at face or body.
- Avoid breathing in dust or handling debris that can be harmful to your health.
- Should you notice a tool malfunction, discontinue use and contact your supplier.
- Use caution when other people are in your surroundings and work area.
- Always disconnect the tool from the air supply when not in use and before changing accessories or when performing routine maintenance.
- Always check the tool for leaking hoses, loose fittings or damaged parts.
- The TORNADOR® VELOCITY-VAC DRY can cause noise from air pressure. Always wear hearing protection in order to avoid noise which can be damaging to your health.
- When using the TORNADOR® VELOCITY-VAC DRY, small pieces of debris can be whirled into the air. Always wear protective goggles or glasses to prevent eye contact.
- We recommend that you use caution cleaning safety relation components such as seat belts as well as other areas like headliners, electrical or electronic modules.



AIR REQUIREMENTS

The TORNADOR® VELOCITY-VAC DRY requires a constant air pressure between 5.5 and 6.3 CFM at 78 to 90 psi for optimum performance. DO NOT EXCEED 90 psi.

CAUTION: Constant air supply rates vary depending on the size and power of the compressor. Always make sure tank and air lines are free from impurities, oil and water contamination.

INSTRUCTIONS FOR USE


Check all contents and read instructions carefully.

Installing the Flexible Tube (part # VT-120)

Step 1. Take supplied flexible tube (part # VT-120) and press onto the end of the rotation set as shown in **fig. #2 and #3** shown on the right. Wetting the end of the tube and rotate set allows for easier installation.

Step 2. Once flexible tube has been applied, trim excess tube to allow proper distance from tube end without making contact with surface to be cleaned.

NOTE: In order for the rotation set to rotate properly and obtain full function, be sure the flexible tube duplicates the finished step in **fig. #4**.

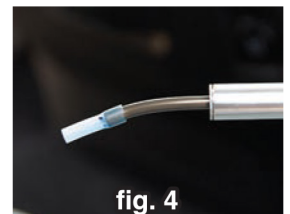

CARE & MAINTENANCE

- Maintain proper air pressure. DO NOT EXCEED 90 psi.
- DO NOT USE ACIDIC OR HIGH ALKALINE CLEANERS. Use only neutral pH cleaners to avoid damage to rotation set.
- As for many tools, common maintenance procedures will ensure optimal performance and tool life. **Keep It Clean!**
- **NOTE:** Be sure the tool has been disconnected from the air source and vacuum hose has been removed before performing any maintenance.
- Depending on the time and type of use, always take time to remove the attachment and inspect for dirt build up or trapped debris. Rinse attachment, then using pneumatic oil or a thick lubricant, oil rotation set often. **See fig. #11.** Reinstall attachment for next use.
- When using the VELOCITY-VAC DRY, you will notice a substantial amount of dirt and debris that will be disrupted by the rotation set. This happens after waking up the fabric or carpet fibers when loosening the dirt. Keeping the attachment free of dirt build-up will ensure longer run times.
- To prolong the life of the rotation set and maintain peak performance, be sure no dirt build up has formed around the rotation set. **See fig. #12.**

