GRS Flight Yoke -RetroPie setup guide for Mame 2003(PI4)

GRS Flight Yoke useful tips

2022/1/22

Step 1. In retropie GUI, go to CONFIGURATION



Step 2. Go to RETROARCH





BLUETOOTH CONFIGURATION EDITOR ES THEMES FILE MANAGER RASPI-CONFIG

RETROARCH

AUDIO

RETROARCH NET PLAY RETROPIE SETUP RUN COMMAND CONFIGURATION SHOW IP SPLASH SCREENS WIFI



Launches the RetroArch GUI so you can change RetroArch options. Note: Changes will not be saved unless you have enabled the "Save Configuration On Exit" option.

Step 3. In RETROARCH GUI, GO to Settings



Step 4. Go to Input



Step 5. Set deadline and Sensitivity

5.1 Make sure analog deadline is set to 0.0, analog sensitivity is set to 1.0. You can adjust the sensitivity later based on your personal preference

5.2 Once 5.1 is completed, go to Port 1 Binds

Maximum Users	5
Poll Type Behavior	Late
Input Button Axis Threshold	0 500
Analog Deadzone	0.0
Analog Sensitivity	1.0
Colurbo Mode	uiassic
Turbo Default Button	B / Fire
Haptic Feedback/Vibration	
Menu Controls	
Hotkeu Binds	
> Port 1 Binds	
Port 2 Binds	
Port 3 Binds	
Pont 4 Binds	
Port + Dinds	

Step 6. Set up key mapping

6.1 Set device type to RetroPad w/ Analog

6.2 Check and make sure "Baolian industry..." is selected as Device Index

6.3 Map the yoke buttons

PORT 1 E	BINDS
🕺 > Device Type	RetroPad w/ Analog
Analog to Digital Type	None
Device Index	Baolian industry
Bind All	
Bind Derault All	
Save Autocontig	
Mouse Index	
B BUCCON (DOWN)	U (W/A), (Key: Z)
Y BULCON (LEFC)	7 (N/A). (Key: a)
	(N/A), (Key e
Start Button	G (N/A), (Key. der)
	(Key, up)
o Down D-Pad	(Key: down)
C LEFC D-Pao	(Key: Terc)
KIGNC V-Pad	2 (N(A) (Kourse)
A BULLON (HIGHL)	2 (N/A), (Key, X)
X Button (Top)	3 (N/A), (Key: S)
🖇 1.8.8 - No Core	12:53
8	*****

Step7. Map the yoke analog



Step8. Go to settings and select Configuration



Step9. Turn on Save Configuration on Exit



Step10. Quit RetroArch



Step11. Select your game in RetroPie GUI and press to start



Step12. During the launch screen, press any button to bring up configuration GUI



Step13. Select default emulator for arcade option

driver ROM: s	Mode: 800x480 @ 60 Hz n/a (27.78 Mhz, phsync, pvsync, preferred,) tarwars
	Select default emulator for arcade (lr-mame2003) ER Select emulator for ROM () UE Select video mode for lr-mame2003 () UR Select video mode for lr-mame2003 + ROM () C Edit custom RetroArch config for this ROM X Launch L Launch with verbose logging Z Launch with netplay enabled Q Exit (without launching)

Step14. Select Ir-mame2003 and press OK

1 adumame 2 Ir-fbneo-neocd 3 Ir-fbneo 1 Ir-mame2003 5 Ir-mame2003-plus	
< OK > (Cancel>	

Step15. Select Launch and press OK

Jideo Mode: Triver)	800x480 @ 60 Hz n/a (27.78 Mhz, phsync, pvsync, preferred
ROM: starwa	rs
E	S Select default emulator for arcade (lr-mame2003)
E	R Select emulator for ROM ()
Ų	Select video mode for lr-mame2003 ()
V	Select video mode for lr-mame2003 + ROM ()
C C	Edit custom RetroArch config for this ROM
×.	Launch
L	Launch with verbose logging
2	Launch with netplay enabled
	Exit (without launching)

Step17. GAME ON

