



 
User's Manual for Key Safe

Read all instructions before using this safe.

WARNING

- For security purposes, change the factory default code as soon as possible. Factory default code is 159 and 011223.
- Test registered pin code a few times before closing the safe door.
- Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Store emergency keys in a secure place; NOT inside of the safe.
- To maximize security and performance of the safe, test pin code every 6 months.
- Test and make sure the safe works properly before mounting. Once tested, mount the safe before use.

PARTS OF THE SAFE

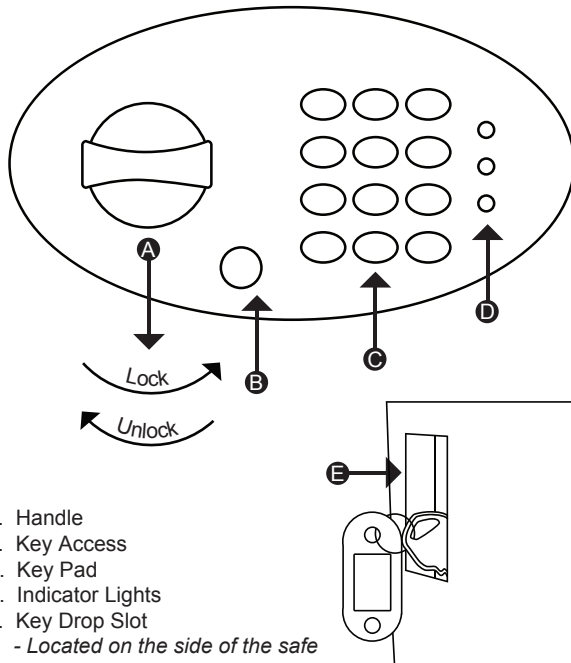

- A. Handle
 - B. Key Access
 - C. Key Pad
 - D. Indicator Lights
 - E. Key Drop Slot
- Located on the side of the safe

GETTING STARTED

Remove emergency keys and other included accessories from packaging.

KEY ACCESS

1. Remove grey key cover located on the safe to expose key hole.
2. Use emergency key and insert into key hole, turn key counter clockwise and turn handle clockwise.

BATTERY

Battery compartment is located on the inside of the door safe.

1. Remove battery compartment cover.
2. Insert four AA alkaline batteries into the battery compartment and restore battery compartment cover.

Note: Do not mix new and old batteries

PIN CODE REGISTRATION

1st Safe Default Pin Code : 159
 2nd Safe Default Pin Code : 011223

1. Press "** **", then yellow indicator light next to warning will light up.
2. Input current user code that you want to change, and press "#".
3. Input your new pin code you want to change it to and press "#".
4. Input your new pin code one more time to confirm registration and press "#." Yellow light will turn off, meaning code has been registered.

Repeat steps above to change second pin code

 
TESTING REGISTERED PIN CODE

With safe door open turn handle counter clockwise to extend the bolts. Enter registered pin code and press "#" safe should unlock. Turn handle clockwise and bolts shall retract; if safe unlocked then registration is complete.

Note: If safe does not unlock then pin code registration was unsuccessful. Please start over with Pin Code Registration.

DELETING PIN CODES / RESETTING SAFE TO FACTORY DEFAULT MODE

Please only reset the safe if Pin Codes are lost or forgotten.

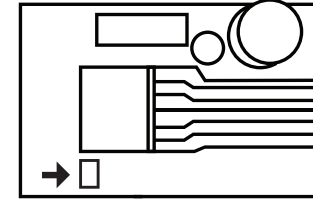

1. Open safe and remove screws securing the back cover to the safe.
2. You will see a small button located on the circuit board.
3. Press and hold small button until you see all the lights flash and 2 quick beeps will be heard.
4. All pin codes have been reset to factory Default Pin Codes.

Note: 1st Safe Default Pin Code : 159
 2nd Safe Default Pin Code : 011223

MOUNTING INSTRUCTIONS

The safe may be mounted to a wall. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

- Do not mount the safe without anchoring to the wall.
- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart.
- Check the wall for concealed wires or pipes.
- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

CARE AND MAINTENANCE

- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe.



1 YEAR LIMITED WARRANTY

SAFE

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), normal wear and tear, fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS
Repair Department
855 Towne Center Drive
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order to cover inspection, shipping and handling. Charges are as follows:
\$90 – Large
\$70 – Standard
\$40 – Compact

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit amount above to BARSKA for return shipping and handling at time product is returned. If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.