




Manual for Biometric Keypad Safe

Read all instructions before using this safe

WARNING

- For security purposes, register the fingerprints and change the factory default Pin Code A and B as soon as possible. Default code A:1234 and Code B:123456
- Safe can be opened by either Fingerprint, Pin code, and /or Emergency Keys.
- Test and Store emergency keys in a secure place, NOT inside of the safe.
- Avoid leaving safe door open and unattended; it will allow unauthorized individuals to add their fingerprints and/or reprogram the safe, gaining full access to the safe and the contents.
- To maximize the security and performance of the safe, test registered fingerprints every 6 months.
- Test and make sure the safe works properly before mounting. Once tested, mount the safe before use.
- Keep children away from safe; they should not play with or around the safe at anytime. Children at play could accidentally pull on the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

PARTS OF THE SAFE

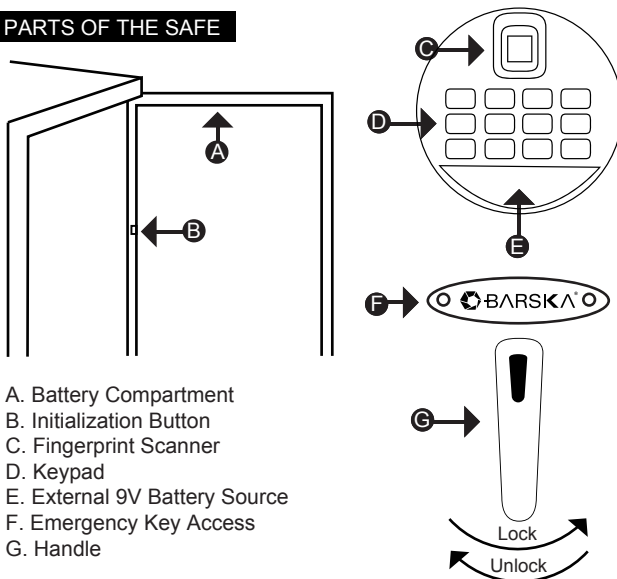

- A. Battery Compartment
- B. Initialization Button
- C. Fingerprint Scanner
- D. Keypad
- E. External 9V Battery Source
- F. Emergency Key Access
- G. Handle

OPENING SAFE WITH ACCESS KEY

1. To expose the key access, remove logo plate screws with provided Allen Wrench
2. Insert emergency key into key access and turn clockwise; turn handle to unlocked position and open the safe. Remove key and keep in a secure location.

INSTALL BATTERIES

1. With the door open, remove the battery cover by sliding the cover.
2. Insert 4 AA batteries by lining them up in a manner as indicated by the "+" and "-" signs.
3. Put the arrow of the battery cover align to the arrow on the compartment, slide the batteries cover back into place. Restore the battery compartment cover.

NOTE:

DO NOT use any other type of non-alkaline battery.
DO NOT mix new and old batteries.

External Battery Source

9V battery can be used as an external power source. (9V battery not included) Please remove the bottom black sticker of keypad, then place 9V battery, touching the metal contacts under the fingerprint or pin code mode. Safe should power up, if not switch the polarity of the 9V battery.

LOCK/UNLOCK SAFE

Single Entry Mode

Unlock Safe with Pin Code

1. On the keypad enter registered pin code 4-8 digits and press " #" to confirm, 2 short beeps will be heard and green light will be seen.
2. Turn the handle to unlock position to open the safe door.

Unlock Safe with Fingerprint

1. On the scanner place registered fingerprint, 2 short beeps will be heard and green light will be seen.
2. Turn the handle to unlock position to open the safe door.

Lock Safe

Close door and turn handle to lock position to lock the safe.

FINGERPRINT REGISTRATION

Note: Safe is in Factory Default Mode. ANY fingerprint can open the safe.

1. With safe open, press and release initialization button located inside the safe, 2 short beeps will be heard and yellow flashes will be seen.
2. Immediately place desired finger on fingerprint scanner. 2 short beeps will be heard and yellow flashes will be seen again. Remove the finger from fingerprint scanner.
3. Repeat step 2 two more times, 1 long beep will be heard. Fingerprint Registration is completed.
4. Fingerprint Registration can be stored up to 20 different fingerprints.

Important: 1 Fingerprint registration required 3 times of placing the finger on the scanner to complete.

Successful Registration

1 long beep will be heard and yellow light will flash off.

Unsuccessful Registration

3 short beeps will be heard.

Important

1. Testing a fingerprint that is not registered to make sure the safe cannot be unlocked to complete the registration process.
2. Please follow the steps " LOCK/UNLOCK SAFE " to test successful registration.

PIN CODES REGISTRATION

Default code A:1234 and Code B:123456

Pin Code can be 4-8 digits

Code A

1. With the safe open, press and release initialization button, 2 short beeps will be heard and yellow flashes will be seen.
2. On the keypad input new desired Pin Code and press " #" to confirm. 2 short beeps will be heard, Pin Code registration is completed.

Code B

1. With the safe open, Press "00" on keypad.
2. Press and release initialization button, 3 short beeps will be heard and yellow flashes will be seen
3. On the keypad input new desired Pin Code and press " #" to confirm. 2 short beeps will be heard, Pin Code registration is completed.

Successful Registration

2 short beeps will be heard.

Important

1. Testing a pin code that is registered to make sure the safe can be unlocked to complete the registration process.
2. Please follow the steps " LOCK/UNLOCK SAFE " to test successful registration.

RESET TO FACTORY DEFAULT MODE

Open the safe door and press initialization button for 5 seconds and release, 1 long beep will be heard.

The safe is back to factory default mode, any fingerprint can open the safe.

The sound will be on as it is factory default condition.

Factory default Pin Code A: 1234 / Code B: 123456

Note: If you use Dual Entry Mode (Fingerprint and Pin Code) before resetting. When you Reset Fingerprint Registration, the safe entry will back to Single Entry Mode. Please refer to "SWITCH BETWEEN SINGLE/DUAL ENTRY MODE " to change the entry mode.

SWITCH BETWEEN SINGLE/DUAL ENTRY MODE

With safe open, press " 1 " on the keypad and press initialization button at the same time. When you hear 1 long beep sound, the Single/Dual Entry mode switch successfully.

Important: Dual Entry Mode require BOTH registered fingerprint and pin code to unlock the safe.

UNLOCK SAFE ON DUAL ENTRY MODE

1. Place registered fingerprint on the scanner, 2 short beeps will be heard and green light will be flashing.
2. Within 10 seconds, on the keypad enter pin code and press " # " to confirm, 2 short beeps will be heard and green light will be seen.
3. Turn the handle to unlock position to open the safe door.

LOCK OUT

Lock out mode is activated when enter wrong Registered Pin Code 3 times or Fingerprint 5 times, the beep sound will last 20 seconds.

You can terminate the lock out mode by entering correct code or fingerprint within the 20 Seconds lock out mode.

SOUND OFF/ ON

Press button " 00* ", Sound is disable. Press button " 66* ", the sound is active.

Note: If the safe is out of battery, the safe is in silent mode and sound is disable.

Sound off: Lock out/motion sensor alarm is active, only the keypad button and beep sound are disable.

LOW BATTERY WARNING

After entering correct pin code and red light is flashing this indicates the batteries are low.

Note: Safe may still be opened in low battery state depending on battery voltage. If safe cannot be opened please use emergency key. All registered pin codes and fingerprints remain stored.

MOTION SENSOR ALARM

You can press " * " to active motion sensor alarm after locking the safe, once the safe is unlocked, the motion sensor alarm will be off.

If you wish to activate the motion sensor alarm, please press " * " each time after locking the safe.

The sound alarm will be on for 20 seconds if safe has any motion when the motion sensor alarm is active.

You can terminate the alarm by entering correct pin code or fingerprint within the 20 Seconds sound alarm.

If you use emergency key to stop the alarm sound, the motion sensor alarm is still active.

Note: The motion sensor alarm is warning you unattended action. If anyone turn and knock the keypad, the alarm sound will be on.

CARE AND MAINTENANCE

- To maximize the security and performance of the safe, keep Fingerprint Scanner clean; use a dry cloth to remove any smudges or prints off the Fingerprint Scanner after each use.
- Test registered fingerprints and PIN code every 6 months.
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe.

MOUNTING INSTRUCTIONS

The safe may be mounted to a wall or floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

Wall Mounting

Do not mount the safe without anchoring to the wall.

- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart.
- Check the wall for concealed wires or pipes.
- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely



1 YEAR LIMITED WARRANTY

Safes

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS
Repair Department
855 Towne Center Drive
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order of \$90.00 to cover inspection, shipping and handling.
*Please allow 6-8 weeks for delivery.

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit \$90.00 to BARSKA for return shipping and handling at time product is returned.

If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA warranties.